



WIRING UP YOUR RADIO

*****IMPORTANT*** Please make sure the yellow wire is connected to the permanent live feed (+12V) of the vehicle battery for the preset memories.**

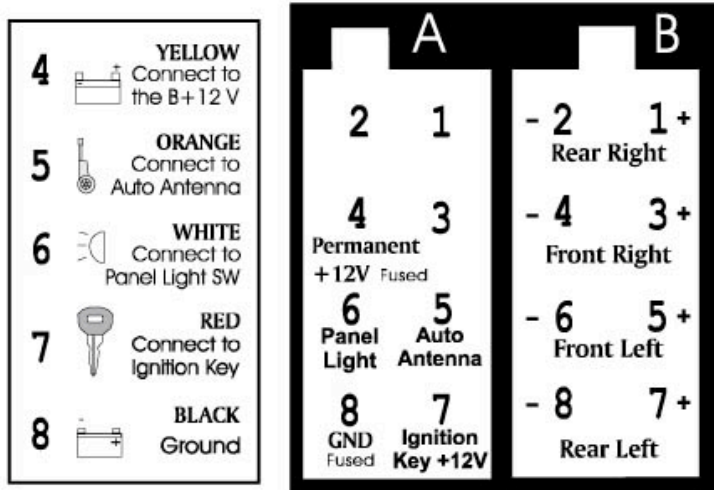

1. Install the Radio using the Din-Front Mount or Din-Rear Mount Method.
2. The Radio is equipped with ISO connector. ISO connector is the universal connector for the connection of car radio.
3. Make sure that you have a good chassis ground. Good ground connections will eliminate most electrical noise problems.
4. Please consult professional installer for product installation or wiring in case you are not confident enough.

REMOTE CONTROL

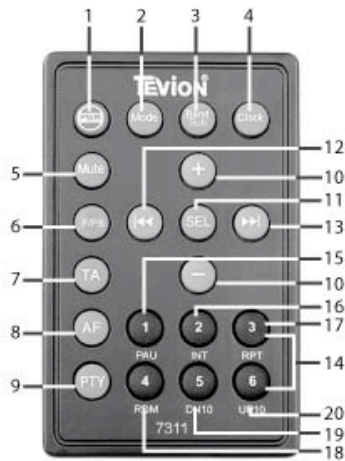

- | | |
|----------------------------|--|
| 1. Power on/off | 12. Stations Tune/Seek Down Track Down |
| 2. Aux Radio & CD/MP3 Play | 13. Stations Tune/Seek UP Track Up |
| 3. Band Switch/Sub | 14. Radio Memory 1-6 |
| 4. Time Clock Display | 15. CD Play-Pause |
| 5. Mute Sound Button | 16. Intro Scan |
| 6. APS/Track Search | 17. Repeat Play |
| 7. TA Control | 18. Random Play |
| 8. AF Control | 19. MP3 10 Songs down |
| 9. PTY Control | 20. MP3 10 Songs up |
| 10. Sound +/- | |
| 11. Sound Select Key | |

WORKING WITH THE UNIT

1. Turning the unit on/off

Press any button to turn the unit on. The display will show a message WELCOME to indicate it is ready for use. Press the POWER button for 2 seconds to turn the unit off.

2. CD Insert/Eject

Simply put your audio CD, or CD with MP3/WMA files into the disc slot of the radio. The unit will then play the contents of the CD automatically. Press the EJECT button to remove the CD.

3. USB Flashdrive & SD Card

Simply plug your USB Flashdrive or SD Card (or both) into the USB socket / Card slot. The contents will be played automatically. These can be removed at any time.

* The USB extension cable can also be used.

4. Aux-in Jack

The front Aux-in Jack can be used for connecting additional audio devices (i.e. MP3 players / Ipods) to the unit. The Aux-in cable (supplied with the unit) can be used for this connection. Simply connect one end into the Aux-in Jack and the other to your MP3 / Ipod.

5. Radio

Press the BAND button to select RADIO mode. Press the BND.ID3 button to select suitable band. You can press the seek up/down button to search for your favourite station, or you can press and hold the APS button on the remote control, so that the unit will automatically scan the strongest stations and save them as presets.

REFER TO THE USER GUIDE FOR MORE DETAILED INSTRUCTIONS