 




PORTABLE CD PLAYER WITH  
ANALOGUE AM/FM RADIO

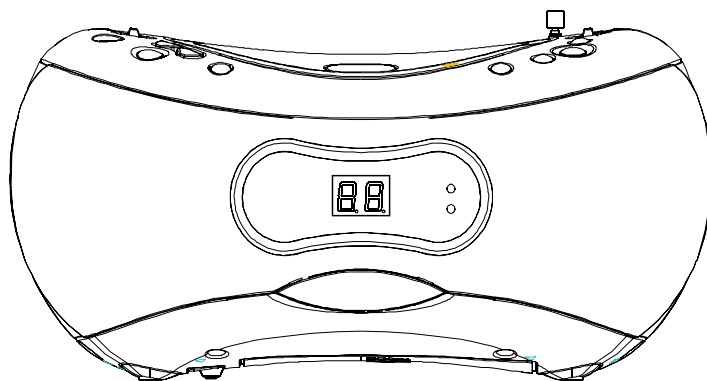

INSTRUCTION MANUAL

## **AFTER SALES SUPPORT**

HELPLINE NO 0161 975 0458

WEB SUPPORT [www.fascin8.co.uk](http://www.fascin8.co.uk)

MODEL NUMBER: PCD-6203

## Contents

---

- 02 General Information and Safety Instructions
- 04 Accessories
- 05 Getting Started
- 07 Radio Operation
- 07 CD Operation
- 08 Playback selection
- 08 Storing songs for selected playback
- 08 AUX IN connection
- 09 Technical Specifications




**Helpline No. 0161 975 0458**

**Web Support** [www.fascin8.co.uk](http://www.fascin8.co.uk)

**Model Number: PCD-6203**

## General information and safety instructions

### WARNING

 <p>The lightning flash with arrowhead symbol, with an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p style="text-align: center;"><b>CAUTION</b></p> <p style="text-align: center;"><b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.</p>
<p style="text-align: center;"><b>LASER SAFETY</b></p> <p>This unit uses a laser. Only a qualified service person should remove the cover or attempt to service this device to avoid possible eye injure. Caution: USE OF CONTROLS OR ADJUSTMENT OF PERFORMANCE OF PROCEDURE OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.</p>	<p style="text-align: center;"><b>DANGER:</b></p>  <p>INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO LASER BEAM.</p>	

Helpline No. 0161 975 0458

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: PCD-6203

## General information and safety instructions

---

Please read through the following safety guidelines before use.

- **Ventilation-** Slots and openings in the case are provided for ventilation to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered.
- **Water and Moisture-** do not use this product near water for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool etc.
- **Cleaning-** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- **Lightning-**For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power line surges.
- **Servicing-**Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

### Battery Handling and Usage

- Never throw batteries into a fire or expose to heat sources.
- If battery is swallowed, please seek immediate medical attention



Do not dispose of this product in your household waste. Contact your local authority for details of local recycling schemes

## Accesories

---

 
 
 
- Power plug
- User Manual

## Getting Started

### Front and rear display

#### FRONT AND TOP PANEL

1. SPEAKER
2. PROGRAM INDICATOR
3. FM STEREO INDICATOR
4. PLAY/PAUSE INDICATOR
5. REPEAT 1/ALL INDICATOR
6. DISPLAY
7. TELESCOPIC ANTENNA
8. BAND SELECTOR (AM•FM•FM ST.)
9. NEXT TRACK
10. PLAY/PAUSE
11. BACK
12. STOP
13. CD DOOR
14. REPEAT
15. PROGRAM
16. AUX IN JACK
17. FUNCTION SELECTOR
18. HANDLE
19. VOLUME CONTROL
20. AC POWER SUPPLY
21. BATTERY COMPARTMENT
22. TUNING KNOB

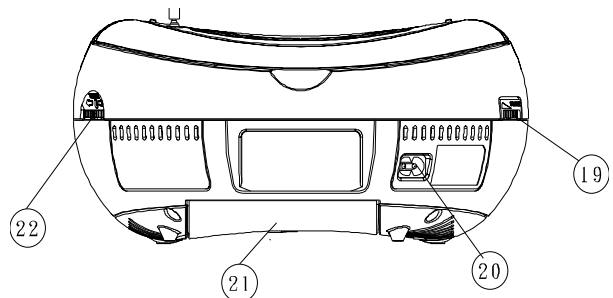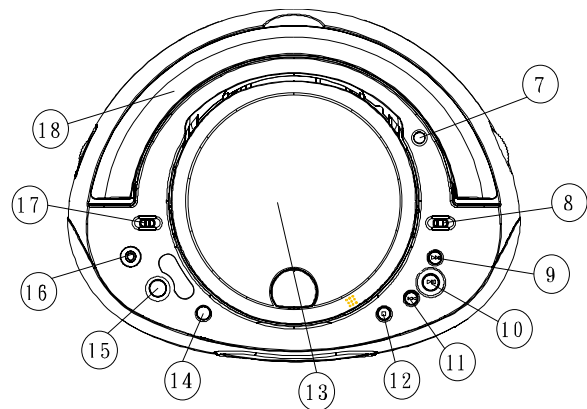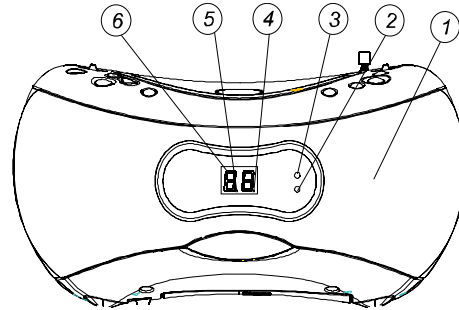

Helpline No. 0161 975 0458

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: PCD-6203

## Getting Started

---

### Connecting your power source

 
Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. Connecting to other power sources may damage the unit.

### AC Power Operation

Connect the AC Power Cord to your AC household mains outlet and switch on the mains supply. Make sure the voltage is compatible. Disconnect the power cord from the mains when not in use.

### Battery Operation

Open the Battery Compartment at the back of the unit and insert 8 LR14 size C batteries following the polarity diagram shown inside the battery compartment.

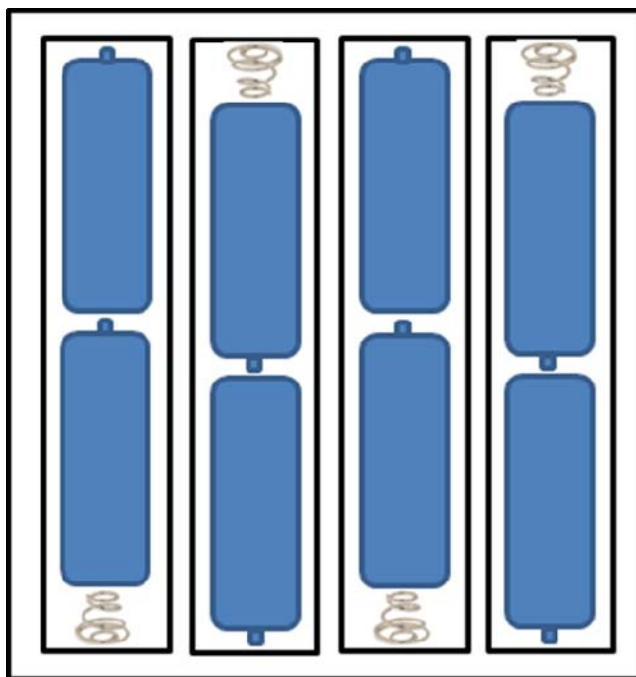

Helpline No. 0161 975 0458

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: PCD-6203

## Radio Operation

---

### Radio Operation

1. Set the Function Selector into the RADIO position.
2. Set the Band Selector to AM or FM position to select the band.
3. Tune to the desired radio station by turning the Tuning Control left or right.
4. Adjust the Volume Control to the desired level.
5. To turn off the radio, set the Function Selector to the OFF position.

### Antenna

For FM reception there is a built-in telescopic FM antenna at the rear of the unit. Extend the antenna and move it around to obtain the best reception.

For AM reception the signals are picked up through a built-in ferrite antenna. You may have to relocate the unit to obtain the best reception.

## CD OPERATION

---

### Playing Audio CDs

1. Set the Function Switch to the CD position.
2. Press the Function Button to select CD mode, the CD icon will appear on the LCD display.
3. Insert a CD disc into the CD compartment and close the CD door, the unit will start reading the disc, it will show the total number of tracks of the entire disc after reading.
4. Press the Play/Pause Button to start playing the disc.
5. During play back, press the Play/Pause Button to temporarily pause playing. To resume, press the Play/Pause button again. Press the skip up or skip down to change the current track.
6. Note: This player only plays original music CD's it will not play MP3 or WMA file CD's.

## PLAY MODE SELECTION

### Skipping tracks

During play or pause mode, press the Next Button to go to the next track.

During play or pause mode, press the Back Button to go back to the beginning of the track. Press the Skip Back Button again will go back to the previous track. To fast forward press and hold the Next button or to rewind press and hold Back.

### Repeat mode

Press the Repeat Button to select different kinds of play mode with the following sequence.

Repeat ➔ Repeat All

## STORING YOUR SONGS FOR PLAYBACK

The programming can only be done in the Stop mode

1. Press the Program Button, the LCD display will display **0** and flash.
2. Use the Skip Next or Skip Previous Button to select the desired track.
3. Press the Program Button again to store the selected track into the memory, the LCD display will display **0** again and flash continuously.
4. Repeat steps 2 to 3 to store more tracks into the memory. You can store up to 20 tracks in the memory at any one time.
5. Press the Play/Pause Button to start playing the disc in the programmed order.
6. To stop playing, press the Stop Button.
7. To cancel the programming list, press the Stop Button and open the CD compartment door or select a different function.

## AUX IN CONNECTION

### AUX IN JACK

In order to use the AUX connection simply plug a aux wire into your MP3 player and the other end into the AUX IN on the boombox. When you start to play your MP3 player the boombox will automatically start to play your stored songs.

Helpline No. 0161 975 0458

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: PCD-6203

## Technical Specifications

---

### **GENERAL:**

Power supply	230 VAC ~ 50 Hz
	12VDC  6 R14 batteries (not included)
Dimensions	257(L) x 200 (W) x 118 (H) mm
Weight	1.44 kg
Frequency band	AM 540 to 1600 kHz
	FM 88 to 108 MHz
Output power (RMS)	2 x 1.2W RMS (2 x 2.4W music)
Speakers	8 Ohms
Headphones/speaker jack	Ø 3.5mm