

IKASU™



Mini MP3 Player

After Sales Support

Tel - 0161 975 0458

Web support – www.fascin8.co.uk

Table of Contents.....	1
Safety and Upkeep.....	2
Functions.....	3
Accessories.....	4
Instructions.....	5-12
Frequently Asked Questions.....	13
Technical Specifications.....	14
Technical Support.....	15

Never attempt to fix the player yourself by opening and disassembling the unit as this will

affect your guarantee.

- Do not expose the player to direct sunlight for long periods of time.
- Do not expose the player to damp or moist conditions
- When the player is not in use turn the player off to preserve the battery charge.
- This player uses a Lithium battery. When the player no longer functions it will need another 4

hour charge



Do not dispose of this product in your household waste. Contact your local authority for details of local recycling schemes

Main functions

- This player will play audio in the following formats – MP3/WMA
- The player has a built on clip which you can use to attach to your belt, clothes etc



1 USB Connection Cable



1 Set of Headphones



1 Software Disk

Connecting to a PC

Before connecting your MP3 player to your PC, please make sure that the player is switch to ON position. Using the USB cable attach one end to the MP3 player and one end to your USB port on your PC and at the bottom right corner of the PC, a symbol will appear, this means that your MP3 player is now connected and ready to use. From here simply go into “my computer” and you should see the new device listed as a removable disk.

Power Supply Operation

ON/OFF

Switch the power switch from the “off” to the “on” position, the player will turn on automatically.

Charging

This player uses a rechargeable lithium battery, its is recommended that you charge the player for at least 4 hours in the ON position before you attempt to use it in any way.

Connect the USB cable provided to the player and then to the PC the player will start charging, make sure that your PC is also on while charging the player.

Adding music to your player

The simplest way to put music onto your player is by doing something called drag and drop. This is where you plug your player into your PC and go into MY COMPUTER, you should see a removable disk now listed. Locate the MP3's and WMA's you all ready have on your PC and then simply drag and drop or copy and paste them directly into the removable disk.

In order to change the volume press either the + OR – button on the player.


To pause the song press the play button again.

Alternatively you can use windows media player to sync your playlists onto the player. To do this:

Plug your player into your PC and open up windows media player

When you connect a device for the first time, the Player

selects the sync method (automatic or manual) that works best for your device.

 **Note** When you connect a device for the first time, Windows Media Player selects the sync method (automatic or manual) that works best for your device, depending on the device's storage


capacity and the size of your library. If the storage capacity of your device is more than 4 gigabytes (GB) and your entire library can fit into the device, the Player automatically syncs your entire library to your device. Then, every time you connect your device to your computer in the future, the Player updates the device to mirror your library.

If the Player has selected to sync your device automatically, when you click Finish the Player will sync your entire library to your device. After that, your

device will sync every time you connect it to your computer.

If the Player has selected to sync your device manually, when you click Finish Windows Media Player will open to the Sync tab where you can select the files and playlists you want to sync manually.

The Player adds the device to the Navigation pane with all of the default categories found in the library, as shown in the following screen shot.

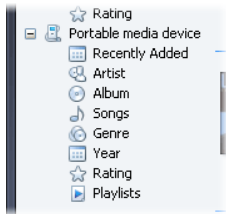


To select items to sync manually

On the Sync tab, drag items such as files, albums, and playlists to the Instructions

List pane to add them to the list of items to sync, as shown in the following screen shot.

To select multiple adjacent items, press and hold the SHIFT key while selecting. To select nonadjacent items, press and hold the CTRL key while selecting.

In the List pane, verify that the items you have selected to sync will all fit on the device, as shown in the following screen shot. If necessary, remove items from the list.

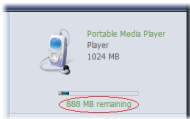

Synchronization will start when you click the Start Sync, as shown in the following screen shot.



Switching between automatic and manual sync

Once you have set up a device for the first time, you can switch between automatic or manual sync for the device, depending on your preference.

To switch between automatic and manual sync

Click the arrow below the Sync tab, point to the device, and then click Set Up Sync.

Select or clear the Sync this device automatically check box.

You can also check out the video tutorial on our website www.fascin8.co.uk if your still unsure on how to do this.

Once you have placed music into your MP3 player

switch on the MP3 player and it should then start playing the first song loaded, if not press the play button. Note: If you switch the player off by the on/off switch your player will go back to the first song loaded on your player and not the song you were listening to. If you want to turn off your player so it remembers where it was then hold the play/pause button for 3 seconds to put in a standby mode, press again for 3 seconds to switch back on and press play to resume.

Why won't my songs play on my MP3 player but will play on my PC?

Check that your songs are in the correct format (MP3/WMA) in which the player will play.

My player won't stay on and keeps turning off.

Make sure you have given the player a full 4hour charge

My PC won't display the MP3 driver.

Check by using other USB slots on your PC also try using a separate USB cable as cables can also be faulty.

Item	Specification
Speed	USB 2.0 full speed (Read1000K Byte/s,Write750K Byte/s)
Headphone output	(L) 10mW + (R)10mW (32 ohm)
Memory	Built-in Flash
Battery life	approx. 5hours
Working temperature	-5°C - 40°C
System requirement	Windows ME/2000/XP、Mac OS 10.3、Linux 2.4.2 and Windows 98 (please refer to driver installation details)

TECHNICAL SUPPORT LINE

GENERAL SUPPORT CAN BE PROVIDED ON ALL
PRODUCTS PURCHASED FROM US
(Unfortunately we cannot provide support on products or
components that we do not supply)

0161 975 0458

Calls cost National Rate, Unless dialling from 0161 area
CALLERS MUST BE MINIMUM OF 18 YEARS OF AGE
CALLERS MUST HAVE THE PERMISSION OF THE
TELEPHONE SUBSCRIBER

ALL INFORMATION GIVEN IS CORRECT
AT THE DATE OF PUBLICATION - 23/10/2008
HOURS OF BUSINESS

MON – FRI 9am to 5pm (excludes bank holidays)

FASCIN8 LTD

14 EMBANKMENT BUSINESS PARK
VALE ROAD, HEATON MERSEY
STOCKPORT CHESHIRE, SK4 3GN

Alternatively visit our website for further support

www.fascin8.co.uk