

SWITCHING ON YOUR MP3 PLAYER

On the top of the MP3 player there is power button, simply flick the switch to on and back to switch off. Please note that you must charge the MP4 player for at least 4 hours before any usage

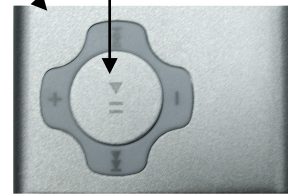
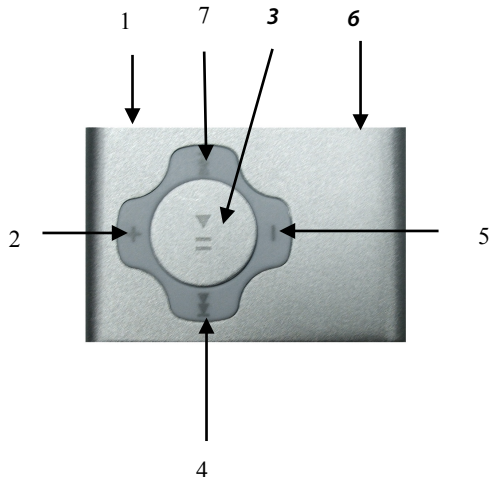
In the ON position.

Power ON/OFF



Once you have placed music into your MP3 player switch on the MP3 player and you will then see a red light flash, only after these flashes can you then press play.

LED Light

**MP3 FUNCTIONS**

- 1 – ON/OFF Switch
- 2 – Volume plus
- 3 – Play/Pause Button
- 4 – Next Song
- 5 – Volume Minus
- 6 – USB Connection
- 7 – Previous Song

USB Connection

Some of the problems that can occur is that your PC will not recognize the player, make sure that your USB is firmly in both ends and if you run windows 98 Install the necessary drivers (not needed for xp). Also try some of your other PC's USB ports as these can become damaged as well as the wire connector

TRANSFERRING YOUR MUSIC FILES TO YOUR MP3**Adding music to your player**

The simplest way to put music onto your player is by doing something called drag and drop. This is where you plug your player into your PC and go into MY COMPUTER, you should see a removable disk now listed. Locate the MP3's and WMA's you all ready have on your PC and then simply drag and drop or copy and paste them directly into the removable disk.

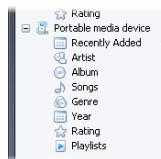
Alternatively you can use windows media player to sync your playlists onto the player. To do this Plug your player into your PC and open up windows media player When you connect a device for the first time, the Player selects the sync method (automatic or manual) that works best for your device.

Note When you connect a device for the first time, Windows Media Player selects the sync method (automatic or manual) that works best for your device, depending on the device's storage capacity and the size of your library. If the storage capacity of your device is more than 4 gigabytes (GB) and your entire library can fit into the device, the Player automatically syncs your entire library to your device. Then, every time you connect your device to your computer in the future, the Player updates the device to mirror your library.

If the Player has selected to sync your device automatically, when you click Finish the Player will sync your entire library to your device. After that, your device will sync every time you connect it to your computer.

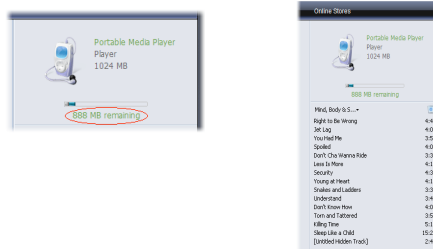
If the Player has selected to sync your device manually, when you click Finish Windows Media Player will open to the Sync tab where you can select the files and playlists you want to sync manually.

The Player adds the device to the Navigation pane with all of the default categories found in the library, as shown in the following screen shot.



List pane to add them to the list of items to sync, as shown in the following screen shot.

To select multiple adjacent items, press and hold the SHIFT key while selecting. To select nonadjacent items, press and hold the CTRL key while selecting. In the List pane, verify that the items you have selected to sync will all fit on the device, as shown in the following screen shot. If necessary, remove items from the list.

**Switching between automatic and manual sync**

Once you have set up a device for the first time, you can switch between automatic or manual sync for the device, depending on your preference. To switch between automatic and manual sync Click the arrow below the Sync tab, point to the device, and then click Set Up Sync. Select or clear the Sync this device automatically check box.

You can also check out the video tutorial on our website www.fascin8.co.uk if your still unsure on how to do this.

Synchronization will start when you click the Start Sync as shown in the following screen shot.



Once you have placed music into your MP3 player switch on the MP3 player and it should then start playing the first song loaded, if not press the play button. Note: If you switch the player off by the on/off switch your player will go back to the first song loaded on your player and not the song you were listening to. If you want to turn off your player so it remembers where it was then hold the play/pause button for 3 seconds to put in a standby mode, press again for 3 seconds to switch back on and press play to resume.