



## Digital MP4 Player User's Guide



### After Sales Support

Now you have purchased a Tevion® product you can rest assured in the knowledge that as well as your 3 year parts and labour warranty you have the added peace of mind of dedicated help lines and web support

#### AFTER SALES SUPPORT

UK/N.IRELAND HELPLINE NO 0161 975 0458

REP.IRELAND HELPLINE NO 1800882912

WEB SUPPORT [www.fascin8.co.uk](http://www.fascin8.co.uk)

MODEL NUMBER: 8875

## Welcome!

Congratulations on choosing to buy a Tevion<sup>®</sup> product. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of Europe's leading manufacturers. All products brought to you by Tevion<sup>®</sup> are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction are backed by our comprehensive 3 year Warranty. Please fill in and return the Warranty Card to the address provided. We hope you will enjoy your purchase for many years to come.

## General Information and Safety Instructions

### Read all instructions before using

- Do not throw the product into fire to avoid danger of explosion.
- Do not immerse into water or get soaked since the battery charging function will be lost.
- When charging the battery the **Power Switch** should be in the **ON** position.
- Please charge the battery before you use the player first.
- Do not charge rechargeable batteries longer than specified.
- Do not take the batteries apart.
- Overcharging & over-discharging rechargeable batteries may shorten their life span.
- To prolong the life of a rechargeable battery, completely discharge it before fully charging it again.
- Recharge battery with below status:
  - Low battery

- System auto off.
- Operation key not working
- When the "Copying Files" window appears on your PC please don't remove USB from computer.
- Do not unplug the USB cable during file downloading, it may cause malfunction to your PC and player.
- Do not plug in an earphone or audio cable during file downloading.
- Downloading can be delayed if there are too many folders or files.
- The order of music files displayed on the Windows Explorer is not the order of actual music playback.
- When it is connected to the PC, the player will start charging.
- Do not attempt to open the player in any way as this will void your guarantee.
- Please make sure that the version of the Direct X in the computer is Direct X 8.0 or above when converting the format of the video file. For the update of DirectX, please visit

www.microsoft.com and read the concerned information carefully.

- Please Make sure the version of the media player is media 10.0



Do not dispose of this product in your household waste.

Contact your local authority for details of local recycling schemes

## Accessories



Earphones.....1



USB Cable.....1



User Manual.....1



Software CD.....1

## Getting Started

### Player Functions



S/N	Description
1	Menu key
2	Next key
3	Play key
4	USB port
5	Power key
6	Volume key
7	Previous key
8	Earphone Jack
9	Display screen

## Keys

- **Play/pause/stop:** “Play”, “Pause” and “Stop”.
- **Mode:** Working mode or Menu.
- **Previous/Vol-:** Select previous music, voice or video file, or fast forward/decrease volume.
- **Next/Vol+:** Select next music, voice or video file, or rewind/increase volume.
- **VOL:** To select volume adjust mode.
- **Power Switch:** Power on and power off the player.

## Features

- Supports MP3, WMA, WAV format music
- View JPEG formatted pictures
- Supports AMV video format.
- USB storage, for above WIN98, plug & play by cable
- Built in MIC
- Save energy mode, auto off set
- Various EQ, repeat modes
- Supports multi-languages
- Support Win98 SE/ME, Win2000, Win XP system
- USB 2.0 High speed

## Instructions

### 1. Turning on/off

Please switch the Power Switch to the ON position to turn on the player.

Please long press the PLAY key to turn on the player when the Power switch is in the ON position and the player is in the turn off status.

Long press the PLAY key to turn off the player and then switch the Power switch to the OFF position.

### 2. Music Mode


After turning on the player, select Music in the main menu and press the M key to enter the music function and then press the PLAY key to play the desired track.



## 2.1 Interface Introduction

### 2.2 Music

1) While  
the PLAY  
and then

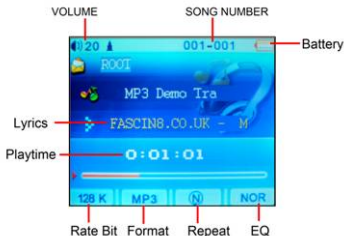


## Instructions

### play mode

playing, press  
key to pause,  
press again to

resume PLAY.

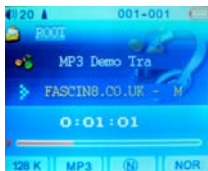

2) In the play/pause mode, press VOL key to enter the “volume adjust” mode, and then press **▶▶** / **◀◀** to adjust the volume.

3) In the music play/pause mode, press **▶▶** / **◀◀** to skip to the next or previous song, press and hold the **▶▶** / **◀◀** to fast forward or fast rewind.

4) While playing, press M key to enter the music setting mode.

5) Press and hold the M key to return to the main menu.

### 2.3 Music setting

In the music playing mode, press the M key to enter music setting mode,



Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: 8875



### 2.3.1 Transmitter Setting

When enter into RF mode, please insert the earphone.

1. Press and hold PLAY to turn on the player and then entry Music mode and press Play to play music.
2. Press M key to enter play submenu
3. Select "Transmitter" and then press M key to enter RF setting mode.
4. Select "Open" to open RF function
5. Select "Frequency" to enter the frequency adjusting mode and pres M key to confirm.
6. Press  /  to adjust the frequency.
7. Select "Close" to close RF function.

### Instructions

#### 2.3.2 Repeat Setting

In the music setting mode, select Repeat and then press the M key to enter. And then press  /  to select the mode you prefer and press the M key to confirm. Below are the following modes: Normal, Repeat one,

Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)



Model Number: 8875

Folder, Repeat Folder, Repeat All, Random and Intro.

### Repeat settings explained



- Normal: After finishing playing the music under the current menu, it will play the music under the next menu continuously until it finishes playing all files.
- Repeat One: Play one song repeatedly.
- Folder: Play all music inside the folder one time.
- Repeat Folder: Play all music inside the folder repeatedly.
- Repeat All: Play all music repeatedly.
- Random: Play all music under the current folder randomly.
- Intro: Play the first 10 sec. of all music under the current file sequentially.

### 2.3.3 Equalizer setting:



Under music setting mode, go into the Equalizer submenu first by pressing  /  to choose the EQ Mode, there are 7 modes as


follows: Natural, Rock, Pop, Classic, Soft, Jazz and DBB.



### 2.3.4 Tempo rate setting:



Under music setting mode, go into the tempo rate setting, by pressing  /  to set the rate of playing. There are 16 levels from -8 to +8. -8 is the lowest, +8 is the fastest and 0 means normal speed.

### 2.3.5 Replay setting:

**A-B Repeat:** Under music setting mode, choose Replay, and then “A” starts to flicker on the display. Press  to set the replay starting point “A”, “A” will stop flickering, and “B” will start to flicker. Press  to set the replay ending point B, “A-B” will stop flickering and it will start to replay from A to B.

If you want to change what section is replayed press  and “A” will start to flicker again. Follow the other steps as before.

**Following:** If you want to “follow” the section that is repeated, press  again, you will see the icon “” on the screen, and it will start to record.



**Contrast:** After recording, press  key and it will show “”, it  
Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912  
Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)  
Model Number: 8875

will play the repeated file, and it will then play the recorded file. You can compare the “following” and the repeated section.

## Instructions



In any step above, if you want to exit short press the “M” key.

### 2.3.6 Replay times setting:

Replay times means the time the replay file will be played. There is 1-10 to choose, press  /  to set the times, and press M to confirm.

### 2.3.7 Replay gap setting:

Repeat gap decides the pause time between first replay time and next

replay time. (Units: Seconds). You can choose between 1-10 seconds, press  /  to set the time, and then press M to confirm.

### 2.3.8 Exit

Exit from MUSIC setting.

## 2.4 Music Pause mode

**2.4.1 PlayList:** Display the information of the files.

**2.4.2 Artists:** Display the information of artists.



**2.4.3 Album:** Display the information of the album.

**2.4.4 Genre:** Display the information of the genre.

**2.4.5 Composers:** Display the information of the composers.

**2.4.6 License Inf:** Display the information of the License.

### 2.4.7 Local folder:

Select local folder and then press  /  to choose the folder and press M key to confirm.





Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)



Model Number: 8875

## Instructions

### 2.4.8 Delete file:


Select Delete file and press M key to confirm. Press  /  to select the file you want to delete and then press M key to confirm. Press  /  to select "Yes" or "No", If you select "Yes" then press the M key to confirm, it will delete the file selected, If you select "No", it will exit the delete mode.

### 2.4.9 Delete all:

Select Delete all and press the M key to confirm  
Press  /  to select "Yes", and press the M key to confirm.

### 2.4.10 Exit: exit from the menu

## 2.5 Lyric display

Under Music playing mode, if there is suited lyric file for the current playing song. It will display the icon . Press and hold the M key to enter the lyric mode, in this mode, you can see the lyric for the current track start to display.

### Lyric

The MP4 player supports "\*.LRC" lyric file, it will execute the lyric display simultaneously. Just make sure the lyric file and the song file have the same file name.

Example:

Song file name is: sky.mp3      Lyric file name is: sky.lrc

## 2.6 Directory function

In order to access the directory simply press the M button when you in music pause mode, this will take you to the local folder.


If you have created a new folder on your MP4 player (you can only create folders using your PC) then press the M button on local folder and this will now display the new folders you have created.

### 3. Movie Mode

In the main menu, select MOVIE and press the M key to confirm.

Please note: 1. The video file format that can be played in the player is AMV, and the formats that can be converted directly into AMV are MPG, ASF, AVI, WMV by using the AMV converter provided on the CD.





2. Please make sure that the video converted can be played in your computer, if not, it is also can not be played in the MP4 player.

3. Install the AMV convert tooling onto your computer and in the interface of the AMV convert tooling, please click  to enter the HELP mode, please read the content before starting to convert.

## Instructions



### 3.1 Playback mode

In the main menu, select Movie and press the M key to confirm.



- 1) Press the PLAY key to play the movie.
- 2) In the music play mode, press  /  to skip to the next or previous movie, press and hold  /  to fast forward or fast rewind.
- 3) Press and hold the M key to return to the main menu.

### 3.2 Pause mode

Whilst in movie playback mode, press the PLAY key to pause.

- 1) In the pause mode, press the PLAY key to continue playing.
- 2) Press and hold the PLAY key to turn off the player.
- 3) Press VOL key to enter the "Volume Adjust" mode, and then press  /  to adjust the volume.
- 4) Press the M key to enter the movie delete mode.
- 5) Press and hold the M key to return to the main menu.

### 3.3 Local folder:

In the movie pause mode, press the M key to enter the local folder, and then select local folder and then press  /  to choose the folder and press M key to confirm.

### 3.4 Delete movie files

In the movie pause mode, press the M key to enter the delete mode, and then the next operations are the same with the operations introduced in the music mode. Please refer to that section.

### 3.5 Repeat mode

Set the playmode when movie is playing.



### 3.6 Transmitter Setting

When enter into RF mode, please insert the earphone.

Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: 8875

1. Press and hold PLAY to turn on the player and then entry Movie mode and press Play to play movie.
2. Movie mode and press Play to play movie.
3. Press M key to enter play submenu
4. Select "Transmitter" and then press M key to enter RF setting mode.
5. Select "Open" to open RF function
6. Select "Frequency" to enter the frequency adjusting mode and pres M key to confirm.
7. Press  /  to adjust the frequency.
8. Select "Exit" to close RF function.

**Note:** The user just can receive the voice & song however can not get the pictures when use RF function in Video mode.

#### 4. Record Mode

In the main menu, select Record and press the M key to enter the record mode.

Before recording, press the M key to enter the submenu of the record function.

**Local folder:** users can choose the folder here.

**REC type:** choose the record type in this menu.

The options are Fine REC, Long REC, Fine VOR, Long VOR.

**Exit:** turn back the record standby interface.

## Start Record

Under record standby condition, short press the “PLAY” key, the record will start.

Short press the “PLAY” key: pause recording, when in the pause mode, the record time will be flicker.

Long press the M key to save the current recorded file and return back to the main menu.

## Instructions

### Low battery:

When recording, if in short of power, System will save the current recorded file, stop recording and show LOW BATTERY, now please charge  
Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912  
Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)  
Model Number: 8875

the battery.

## Display Errors

### 1、 Record file is full

When recording file reaches 99 units or the flash space is full, it will show this sign. You must delete some MP3 songs or other recording files to make more space and continue recording.

### 2、 Total files are full

This player can save a maximum of 200 record files. Delete some record files if you find you can no longer record.

### 3、 Disk space is full

When the disk has no more space to save the record files, you will no longer be able to record, you must delete some MP3 songs or other record files to make more space and continue recording.

### 4、 Disk error

Perform a format of the MP4 player. Simply plug your MP4 player into your PC and enter my computer. From here right click the MP4 player (you must make sure it is your MP4 player before formatting) then left

Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: 8875

click on format and again on quick format, then click start.

## 5. VOICE mode



In the main menu, select VOICE and press the M key to enter the voice mode.

### 5.1 Voice stop/pause mode:



Press the M key to enter the submenu of the VOICE mode.

Press and hold the M key to go back to the Main menu





Short press  /  to select next/previous recorded file

Press VOL key to enter the volume adjust mode, and then press  /   
to adjust the volume.

### Local folder:

In the voice stop mode, press M key to enter the submenu, select Local Folder, press  /  to select the folder you want, press the M key to confirm. (Only the folder under VOICE folder can be chosen).

## Delete file:

In the voice stop mode, press M key to enter the submenu, select Delete file, press M key to enter the file. Press  /  to select the file you want to delete and then press the M key to confirm. Press  /  to select YES or No, and then press M key to confirm.

## Delete all:

Same as delete file, but it will delete all files in the folder. After delete all files, it will back the standby mode of VOICE interface.

## Exit:

Exit from this menu.

## Instructions

### 5.1 Voice playing mode:

## Repeat:

In the repeat submenu, press  /  to select the repeat mode. There



Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: 8875


are 7 choices: Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random and Intro.


### Tempo rate:

In the tempo rate submenu, press  /  to set the rate of playing. There are 16 levels from -8 to +8 , -8 is the lowest, +8 is the fastest and 0 means normal speed.

**Note:** only MP3 music can be set to tempo rate



### Replay setting:

**A-B Repeat:** Under music playing mode, choose Replay, when "A" starts to flicker. Press  to fix replay start point "A", when "A" stops flickering, and "B" starts to flicker

Press  to fix replay ending point B, this will now only play between selected point A and B.

## Transmitter setting:

When enter into RF mode, please insert the earphone.

1. Press and hold PLAY to turn on the player and then entry Voice mode and press Play to play recorded voice.
2. Press M key to enter play submenu
3. Select "Transmitter" and then press M key to enter RF setting mode.
4. Select "Open" to open RF function.
5. Select "Close" to close RF function
6. Select "Frequency" to enter the frequency adjusting mode and pres M key to confirm.
7. Press  /  to adjust the frequency.
8. Select "Exit" to exit RF function.

**Exit:** exit from the submenu.

### 5.3 VOICE mode error display

#### 1、 No record file

This error message will be displayed when the file is no longer available on the player.

#### 2、 Illegal file

When the record file is damaged or the file is not a record file, the player can't play the file and it will display this error message.

## Instructions

### 6. Picture Mode

This function supports all JPEG formatted pictures





1. In the main menu, press  /  buttons to choose the "Picture"

Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912







Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: 8875

option.







2. Press the M key to enter the picture selection menu
3. Press  /  button to choose desired picture and press PLAY key to confirm.
4. Press  /  button to browse pictures in sequence ( only suitable for "Manual play" ) .

## 6.1 Play Set

1. In the picture list, press the M key to enter picture submenu,
2. Press  /  button to select the "play set" option.
3. Press the M key to enter the following interface.
4. Press  /  (button to choose "Manual play" or "auto play" options, press M button to confirm.
5. Press  /  button to adjust "auto play" speed. Press the M key to confirm.





## 6.2 Delete File

1. In the picture list, press the M key to enter the submenu.

2. Press  /  to choose "Delete file" option:
3. Press the M key to enter this option.
4. Press  /  to choose the file you want to delete and press the M key to confirm.
5. Press  /  to choose Yes or No, and press the M key to confirm.

## Instructions

### 6.3 Delete All

1. In the picture list, Press the M key to enter the submenu.
2. Press  /  to choose "Delete All" option:
3. Press the M key to enter this option.
4. Press  /  to choose Yes or No, if choose Yes, it will delete all the E-book files.

**Note:** when viewing pictures, Press and hold the M key to fast exit from picture interface and return to the main menu.

## 7. Setup setting

Choose Setup in the main menu.

Press **▶▶** / **◀◀** to select the setting option and then press the M button to confirm.

Pressing and holding the M button will take you back to the main menu.

### 7.1 System time

Press the "PLAY" key, the year is selected, press **▶▶** / **◀◀** key to modify the year. Press PLAY again, then the Month will be selected, press **▶▶** / **◀◀** to modify the month, and then date, hour, minute and seconds follow the same step.

Then press the M key to confirm the setting and exit from the system time menu.

### 7.2 LCD set



Main menu select: In this mode, you can select the picture set up for the

main interface.

DarkMode: Set fixed period of time (unit: second) so that when no key operation is performed, the players screen will turn black automatically. If "0" is selected, this function is then invalid.

### 7.3 Language setting

Users can choose the language in this mode.

In the interface of language, press  /  to choose the language and press the M key to confirm the selection and exit from the language setting at the same time.

## Instructions

### 7.4 Power off setting

There are two options in this setting: Off time and Sleep time.

Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912

Web Support: [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: 8875

**Off time:** means that if there is no operation during the pre-set time, the system will power off automatically. Units are in minutes and you can choose between 0 and 60 mins, if you set it to 0 this setting will not be activated.

**Sleep time:** means that after working for xxx minutes (xxx=preset time), the system will power off automatically. Units are in minutes and you can choose between 0 and 120 mins, if you set it to 0 this setting will not be activated.

**Note:** Sleep mode is only valid once it is been set. The system will delete the setting automatically after it works. If you need this function, please reset once more.

## 7.5 Replay Mode setting

There are two choices: Manual reply, Auto reply

"Manual replay": when use A-B repeat function, it cannot break

Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: 8875

automatically.

“Auto replay”: it is used in the language learning; the system can pause between the first sentence and the second sentence automatically.

## 7.6 Online Device

**Media Device:** Set the MP3 player as a Media Transfer Protocol Device, transfer music files only by synchronization of Microsoft® Windows Media player 10.

Note:

1. If you want to transfer music files with DRM (Digital Rights Management), you should set the MP3 player to Media Device mode. Then you can synchronize music files by Windows Media Player 9 or Media Player 10.
2. In the Media device, after you connect the device to the PC, then you will not be able to see the files saved in the USB Device mode.

**USB Device:** Set the MP3 player as a USB Mass Storage Device.  
Note: When you set the online device as a USB Mass Storage Device, after you connect device to the PC you can only see the files saved in the USB mode and the files saved in the DATA folder of the Media Device mode.

## Instructions

### 7.7 Online mode

Users can check the amount of free memory space.

Multi driver: you can see the Normal section and Encrypted section in My Computer.

Normal only: only the Normal section shown in My Computer

Encrypted only: only the Encrypted section shown in My Computer

Note: Some operating systems (under Windows 2000 SP4) cannot support two drive letters for a USB disk. This means if “Private Space” function is on you should select “single ordinary disk” or “single encrypted disk” in order for correct displaying of the

selected disk after it is connected to the PC. Please select “single ordinary disk” if your not sure or turn off the “Private Space” function and select “Normal only”.

## 7.8 Memory info

Users can check the memory information here.

## 7.9 Firmware version

Users can check the firmware of the player here.

## Instructions

### 7.11 DRM Time

The operation is the same as set Record Time. If the DRM time is wrong, the music files with DRM will not be played.

### 7.12 ear protection

Ear protection: to choose “disable” and “enable”.

Ear protect level: there are three level for choose: high, middle and low.

Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: 8875

Mode: "attenuation" and "no attenuation"







Auto switch off: Units are in minutes and you can choose between 0 and 240 mins, if you set it to 0 this setting will not be activated.

### 7.13 Exit

Exit back to the Main menu.

## 8. Text Mode

This function supports all TXT files.

1. Enter the main menu, press  /  button to choose "E-Book"
2. Press the M button to enter this mode.
3. Press  /  button to select desired text file to read. Press Play button to enter text interface
4. Press  /  button to turn the pages in sequence
5. While reading, press the M key to enter the Bookmark setting mode.



 


### 8.1 Play set

1. In the E-book list, press the M key to enter the submenu.





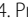

Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: 8875

2. Press  /  button to choose “play set” option:
3. Press the M key to enter this option, or press PLAY key to exit.
4. Press  button to choose “Manual play” or “auto play” options. Press M key to confirm.
5. Press  /  button to adjust “auto play” speed. Press MENU button to confirm.

## 8.2 Delete File

1. In the E-book list, press the M key to enter submenu.
2. Press  /  to choose “Delete file” option:
3. Press M key to enter this option.
4. Press  /  to choose the file you want to delete and press the M key to confirm.
5. Press  /  to choose Yes or No, and press the M key to confirm.

### Instructions

## 8.3 Delete All

1. In the E-book list, press the M key to enter submenu.

2. Press **▶▶** / **◀◀** to choose “Delete all” option:
3. Press the M key to enter this option.
4. Press **▶▶** / **◀◀** to choose Yes or No, if yes is selected all the E-book files will be deleted.

## 9. Game Mode

Press the M key to enter the Game mode, and then press **▶▶** / **◀◀** to select the game and press the M key to confirm.

### 9.1 Bricks

Select Bricks and press the M key to enter.

- Start: Press the M key to start the game.
- Speed: In the speed mode, you can adjust the speed.
- Return: Return to the Game main interface.

### 9.3 Return

Select RETURN to exit the mode.

Helpline No. UK/Northern Ireland 01619750458 Rep.Ireland 1800-882912

Web Support [www.fascin8.co.uk](http://www.fascin8.co.uk)

Model Number: 8875

## FAQ

### **1. when I press on “play”, No display ?**

Cause/ Solution : Please connect the player on the computer for recharging. Try to restart it 10 minutes later.

### **2. When I want to play files, there is no sound ?**

Cause/ Solution : volume is too low , turn up the volume , inspect the connection of the earphone or if it is broken.

### **3. Why does my computer display an error when I disconnect the player?**

Cause/ Solution: When you are transferring files from your PC to the MP4 player DO NOT remove the connection between the two until it has completed the transfer.

### **4. Why can't I download files while the MP4 player is connected to**

## the PC ?

Cause/ Solution : If using win98 or below it may well be the USB Driver hasn't been installed correctly, Please install the USB driver again and follow the operation instruction, or your computer's motherboard may not support the USB equipment, you may need to update your motherboard driver.

## 5. Why can't I see the files which have been stored in the player?

The file type may be wrong, check that for songs the type is either MP3, WAV or WMA. For videos it must be in AMV and for photos it must be in JPEG.

## 6. Why does it display that "the disk is full" in the computer but we do not see any files in the disk after connecting the PC?

Cause/Solution: In the setting mode, you set the Online device mode as Media device now but the online device mode was USB mode when you downloading the files or you set the Online device as USB device but the online device mode was Media device when downloading the files. Please set the online device into the proper

mode.

## Technical specifications

<b>Music format</b>	MP3, WMA, WAV
<b>Video format</b>	AMV
<b>Picture format</b>	JPG, BMP
<b>Storage capacity</b>	256MB/512MB/1GB/2GB/4GB
<b>Display</b>	2.0" color display , 209*176 matrix
<b>SNR</b>	85dB
<b>Record mode</b>	MIC internal record
<b>Record format/time</b>	WAV 20 hours for 256MB
<b>FM Transmitter</b>	Support
<b>Output frequency range</b>	20HZ-22KHZ
<b>Size</b>	55*75*7mm
<b>Battery specification</b>	3.7V rechargeable lithium battery
<b>PC slot</b>	USB2.0

## System requirement

Win98SE/ME,Win2000,Win XP



# 4GB MP4 PLAYER

## WARRANTY CARD

**Congratulations!** You have made an excellent choice with the purchase of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults during private use within 36 months of the date of purchase we shall be liable for warranty in accordance with statutory warranty regulations provided that:

- the device was not put to any use other than the intended
- was not overloaded
- was not used with the wrong accessories
- repairs were not carried out by any other than the authorized workshop

The warranty certificate is only valid in connection with the receipt. Please keep both in a safe place. This warranty does not affect your statutory rights.

This purchase is guaranteed for a period of three years beginning on the day of purchase. Keep your purchase receipt safe as proof of date of purchase. The guarantee can only be extended for the duration of any repair required.

Should your item become defective during the warranty period, in the first instance please call our service centre on the number below, they will then inform you of what to do next. We will at our discretion, either repair or exchange the device in accordance with warranty legislation.

Please enclose the following when sending your product in for repair:

1. Receipt (proof of purchase)
2. This warranty certificate with the fault report form overleaf complete with your name, contact details and fault description.

If the original receipt is not enclosed the repair will be charged in all cases. After the warranty has expired you can still send defective devices for repairs to the address stated below. Quotes as well as repairs after the warranty period are to be paid for in all cases.

Ensure that the product is sent well packed as no responsibility can be accepted for items lost or damaged in transit.

This warranty does not affect your statutory rights.





# 4GB MP4 PLAYER

## FAULT REPORT CARD

Name \_\_\_\_\_

Address \_\_\_\_\_

Email \_\_\_\_\_ Daytime Tel No \_\_\_\_\_

Model Number **8875** \_\_\_\_\_

Fault Description \_\_\_\_\_

\_\_\_\_\_

SERVICE HELPLINE  
UK / N.IRELAND 0161 975 0458  
REP IRELAND 1800 882912  
WEB: [www.fascin8.co.uk](http://www.fascin8.co.uk)

FASCIN8 LTD  
14 EMBANKMENT BUSINESS PARK  
VALE ROAD, HEATON MERSEY  
STOCKPORT SK4 3GN