 
 


SWITCHING ON YOUR MP4 PLAYER


On the bottom of the MP4 player there is a small on/off switch, simply slide to the ON position. Please note that you must charge the MP4 player for at least 4 hours with the switch in the ON position before using the MP4 player.

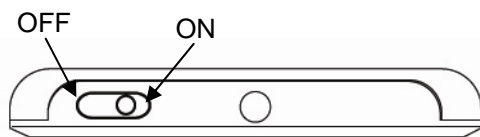

Once you have put your music/videos onto your MP4 player simply select the desired mode in which you wish to view by pressing the arrows to move to selected option and press the MENU to select.

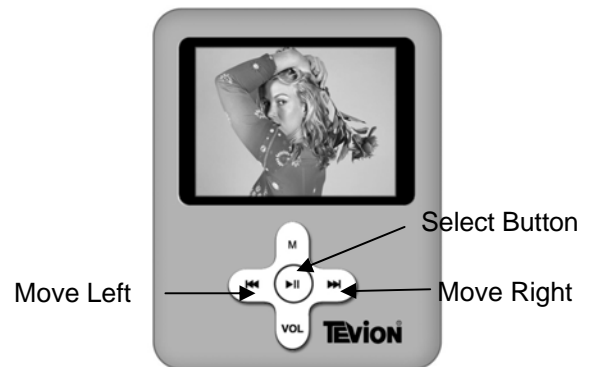

MP4 FUNCTIONS

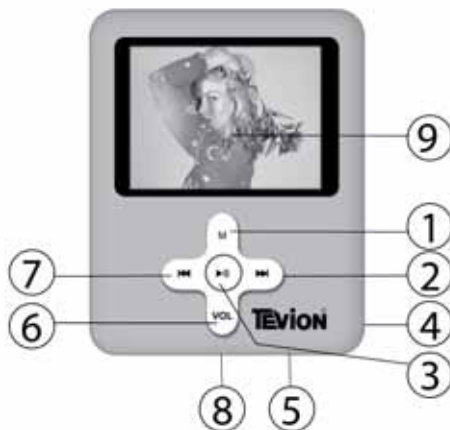

- 1 – Mode selection
- 2 – Next song and Volume increase button
- 3 – Play/pause/stop
- 4 - USB Port
- 5 – ON/OFF Switch
- 6 – Volume Select (use to switch volume control on)
- 7 – Previous song and Volume decrease button
- 8 – Earphone Jack
- 9 – Display Screen