

 
Thank you for purchasing 15" TFT-LCD TV. We strongly recommend that you carefully read the safety and operation instructions before operating your TV.

Safety information

Note:

Before connecting the AC power cord to the DC adapter outlet, make sure that the voltage designation of the DC adapter corresponds to the local electrical supply. **If you are unsure about your power supply, please ask the local power company.**

Caution:

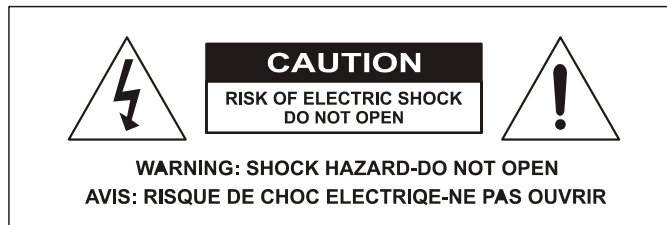

To avoid electric shock, never touch the inside of the LCD TV. Only qualified technicians should open the case.

Warning:

Do not defeat the safety purpose of grounding-type. A grounding type plug has two blades and a third grounding pin. The third pin is provided for your safety. If the plug does not fit, ask the electrician to replace the obsolete outlet. Do not modify the plug!

To reduce the risk of fire or electric shock, and annoying interference, use the recommended accessories only.

Precautions

Please read the below precautions carefully before operating the unit.

Power cord protection:

1. Never use your LCD TV if the power cord has been damaged. Do not put anything on the power cord, and keep the power cord away from where people can easily trip over it.
2. Be sure to hold the plug; do not pull the cord when disconnecting the LCD TV from an electric socket.
3. Locate your LCD TV near an easy accessible AC outlet.

Placement:

1. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
2. An appliance and a cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
3. Never place the LCD TV in areas under direct sun-light, with high temperature or with high humidity or high level of dust which may cause damage to the internal parts of the LCD TV.
4. Place the LCD TV on a solid surface and treat it carefully.

Non-use periods:

Unplug the LCD TV when not in use for long periods.

Keep away from water/magnetic fields:

1. Do not expose the LCD TV to rain or use it near water source. If the LCD TV gets wet, unplug the set and contact an authorized dealer immediately.
2. Do not clean the front panel with Ketone-type materials, ethyl alcohol, toluene, acid, methyl, or chloride as they might cause damage to the TV.

3. Keep the unit away from flower vases, tubs, sinks etc. if liquids spill into the unit, serious damage will occur.
4. Do not place magnetic objects close to the LCD TV.

Stacking:

Openings in the LCD TV cabinet are provided for ventilation. To prevent overheating, these openings should not be blocked or covered. Never use the unit on a bed, sofa, rug, or other uneven surfaces. Doing so may block the ventilation openings in the bottom of the unit. If you place the LCD TV in a bookcase or some other enclosed place, please make sure you provide adequate space for ventilation.

Servicing:

1. If the LCD TV/Monitor does not operate normally – In particular, if there are any unusual sounds or smell coming from the unit –unplug immediately and contact an authorized dealer or service center.
2. Unplug the LCD TV from the AC outlet before any servicing.
3. Make sure the service technician uses authorized replacement parts or their equivalents. Unauthorized parts can cause fire, electrical shock, or other hazards.

Unpacking

Please make sure that the following items are included with your LCD TV/Monitor. If any item is missing, please contact your dealer.

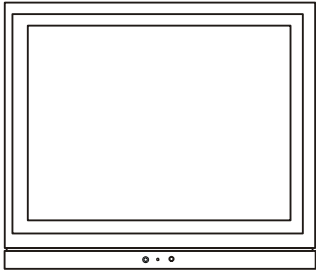 

 
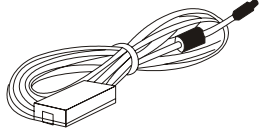 
 
 
 
 TFT LCD TV/ Monitor	
 Remote control	 Operation manual
 DC adapter	 Power cord
 RCA cable	 Car Cord (Optional)

Table of content

- I. View of the TV/Monitor
- II. Remote control reference guide
 - (1) Remote control function
 - (2) Remote control battery installation and cautions

 
- III. Installation and connection
- IV. TV/Monitor screen operation
 - (1) Basic operation
 - (2) View of the TV plays
 - (3) View of the AV signal sources
 - (4) PC screen
- V. Menu setting and adjustment
 - (1) Image mode setting
 - (2) Sound mode setting
 - (3) Config mode setting
 - (4) TV station search setting mode setting

(For TV only)
- VI. DVB-T operation
- VII. Other Operation
- VIII. Trouble shooting
- IX. Notes
- X. Specification
- XI. Display modes


I. Display

Side view

Front view

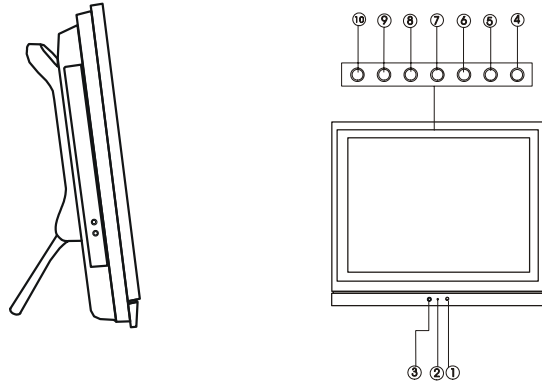

Back view

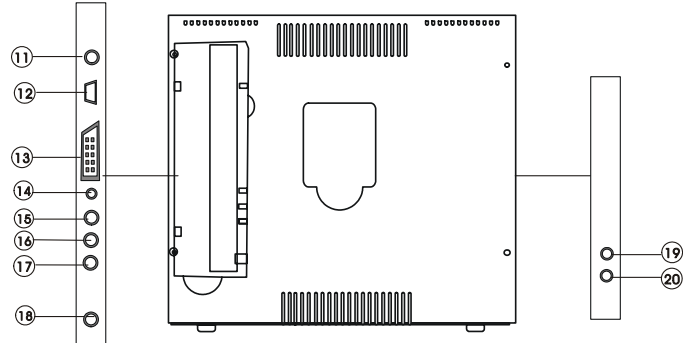 


- | | |
|--|---------------------------|
| 1. Remote sensor | 12. VGA jack |
| 2. Power indication light | 13. SCART jack |
| 3. Headphone jack | 14. S-video jack |
| 4. CH+/up direction button | 15. Audio in (right) jack |
| 5. CH-/down direction button | 16. Audio in (left) jack |
| 6. VOL up/RIGHT direction button | 17. Video in jack |
| 7. VOL down/LEFT direction button | 18. ATV RF input jack |
| 8. Menu button | 19. DTV RF output jack |
| 9. TV/AV button (Function switch button) | 20. DTV RF input jack |
| 10. Power button | |
| 11. DC input jack/ Car Cord input jack | |

II. Remote control reference guide

(1) Remote control function

1. POWER button
2. MUTE button: To cut off the sound output
3. TIMER button: To set the close time
4. PICTURE button : To select video mode
5. RECALL button: To play the previous channel
6. SOUND button: To select sound mode
7. ▲ button
8. TV MENU button
9. ► button
10. OK button: To enter
11. ▼ button:
12. PROG+ button: To select next channel
13. VOL+ button: To adjust volume up
14. PROG- button: To select last channel
15. VOL- button: To adjust volume down
16. TV/AV/D-TV function switch button
17. 0-9 numerical button
18. -/-- button
19. DVB MENU button: To set DTV menu
20. ◀ button
21. DVB buttons: To operate DTV functions

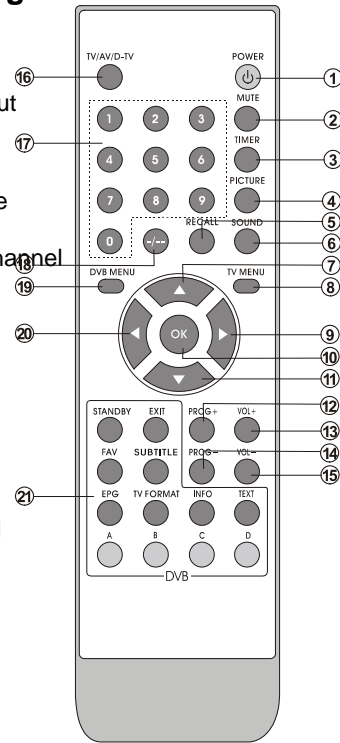

Name	Function	Name	Function
STANDBY	DTV standby	INFO	Display current DTV channel information
EXIT	Exit from DTV menu	TEXT	Display Teletext program
FAV	Display favorite list	A	Display red screen
SUBTITLE	Subtitle On or Off	B	Display green screen
EPG	Display Electronic Program Guide Menu	C	Display yellow screen
TV FORMAT	Select the TV screen	D	Display cyan screen


	display mode		
--	--------------	--	--

(2) Remote control battery installation and cautions

Replace battery by following the below steps:

Requires one pair of AA batteries.

 1. Open the battery cover as shown below:
2. Install the battery into the battery tray.
3. Close the battery cover

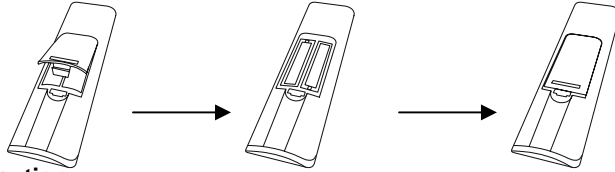

Caution:

1. Keep the battery out of children's reach.
2. Don't attempt to recharge, short-circuit, disassemble heat or throw the batteries into the fire.
3. Always replace both batteries at the same time. Never mix new and old batteries or batteries of a different type.
4. If you don't intend to use the remote controller for an extended period, remove the batteries to prevent possible leakage and corrosion.

Notes:

1. Do not drop, apply shock or step on the remote control.
2. Do not spill water on the remote control.
3. Do not use the remote control for other equipments at the same time
4. If the TV does not operate even when operating the remote control from a close range, you need to replace the batteries.
Refer to the label on the back of the remote control for directions for replacing batteries.


III. Installation and connection

Connecting the LCD TV with UHF Ariel


1. Connect the TVRF source with the antenna port. TVRF signal including: Receiving antenna /satellite TV/CATV net. You can use 75 Ω coaxial cable to connect the outdoor antenna.

Antenna Connection:

Use 75Ω coaxial cable plug or 300-75Ω impedance converter to plug in antenna input terminal on the rear of the cabinet.

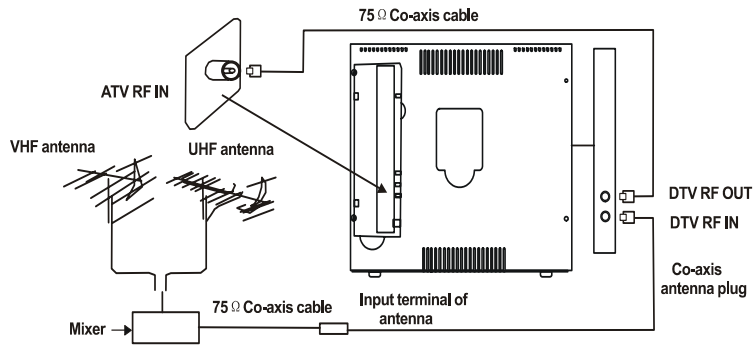

2. Connect the audio sources (Including DVD, VCD, CAMCORDER and PC) to the proper AUDIO input jacks 'L' and 'R'.
3. Connect the video source to the VIDEO jack by RCA cable.
4. If the video source has a SCART output jack, you can connect the signal to the monitor by the SCART cable.
5. Connect the video source to the S-VIDEO input jack of the monitor by the S-video cable (Pretended the video source has S-video output jack).
6. Insert the AC power to the DC adapter, then connect 12V input jack of the monitor to it's DV output jack.
7. When use as computer screen, connect the PC to the VGA jack of the monitor by the relevant cable.

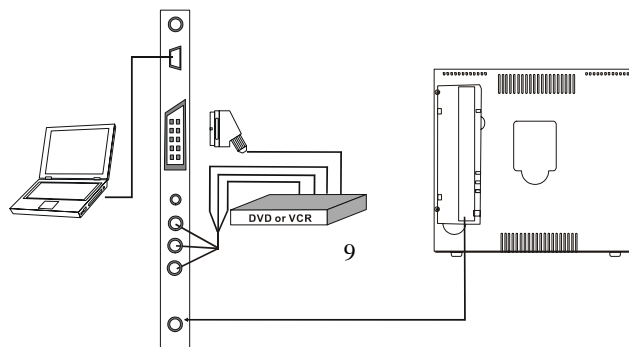

IV. TV screen operation

(1) Basic operation

1. Press the **POWER** button on the unit or the remote control to switch on the power. The indicator light will turn blue. Press the **POWER button** again to switch off the power, and the light will turn red.
2. The Picture setup, Sound setup, Previous channel can be memorized before you switch off the TV/Monitor. The TV/Monitor will re-start under the previous state when you switch on it again.
3. If you unplug the power cord to cut off the power supply completely, all previous setting will be lost.
4. Press the **VOL -** or **VOL +** button to adjust the volume output. Press the **VOL -** button repeatedly to decrease the volume; press the **VOL +** button repeatedly to increase the volume from 0 to 60.
5. Press the **TIMER** button to set the sleep time as 30,60,90,120 minutes & OFF.

(2) View the TV plays.


1. Press the **TV/AV/D-TV** button on the unit or the remote control to select the TV function mode. The TV will appear the initial channel '0' on the top right corner when the function is on. Press the **PROG-** or **PROG+** button to select the previous or next channels; or press the **0-9** buttons to enter a channel number directly, or press the **-/--** button until the screen display **'--'** or **'---'**, then use the 0-9 numerical buttons to enter a channel number from 10 to 199.
2. Press the **RECALL** button on the remote control to select from the present channel and the previous channel.
3. Press the **PICTURE** button to select video out mode from the below 4 types

Custom


Standard

Dynamic

Mild

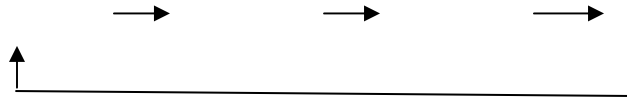

4. Press the **SOUND** button to select the sound model from the below 4 types

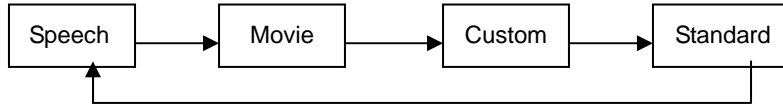

5. Press the **MUTE** button to cut off the sound output, then the screen will show " " mark , press this button again to resume sound output.



(3) View the AV signal sources (DVD/VCR/CAMCORDER)

Press the **TV/AV/D-TV** button on the remote control, there will be a menu displayed on the screen as the figure. Select the suitable input to pickup the AV signal. Press **▲** or **▼** button to select source, then press **▶** button to confirm your selection.

- TV
- SCART
- CVBS
- Svideo
- DTV
- PC

(4) PC screen

Press the **TV/AV/D-TV** button to select the PC input (TV into PC) mode. There will be a 'PC' mark appears on the right of the top corner of the monitor. The unit has a VGA jack for a normal computer. Connect the monitor with a PC by this jack and the unit can be used as the monitor of the PC. Usually if the PC shows no signal for 2 minutes, the power indication light will be twinkling constantly to enter into the standby mode.


V. Menu setting and adjustment


1. IMAGE MODE SETTING

(1) At TV/SCART/CVBS/SVIDEO/DTV mode

press the **TV MENU** button on the remote control, there will be a menu displayed on the screen as below:



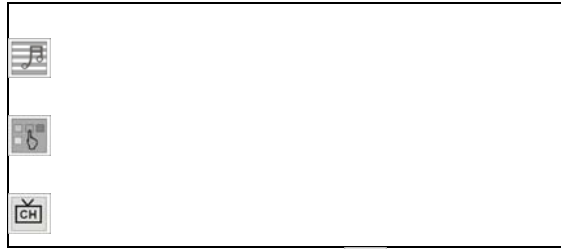


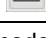 
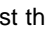 


On this menu, the Image setting icon of  is highlighting in red frame. Use the **▶** button firstly, the cursor will be on the line of "Mode ◀ Standard ▶". And then, press the **◀** or **▶** button repeatedly to select the video mode from Standard, Dynamic, Mild or Custom. After select the image mode, you can use the **▲** or **▼** button to select the item of Bright, Contrast, Color or Sharpness, and then use the **◀** or **▶** button to adjust the Value of each item from 0 to 60 for each Video Mode respectively.

After the setting, press the **TV MENU** button to return to the root menu or exit the setting menu.

(2) At PC mode

Press the **TV MENU** button at the PC mode, the menu will be shown as below.


	Image	
	Bright	30
	Contrast	30
	H Pos	0
	V Pos	0

As at other modes, you can use the **◀** or **▶** button and the **▲** or **▼** button to adjust the value of Bright, Contrast, H Pos or V Pos from 0 to 60 respectively.

2. SOUND SETTING

(1) At TV/SCART/CVBS/SVIDEO/DTV mode

 
Press the **TV MENU** button on the remote control, and then press the **▼** button to select the Sound setting, the Menu will be shown as below:

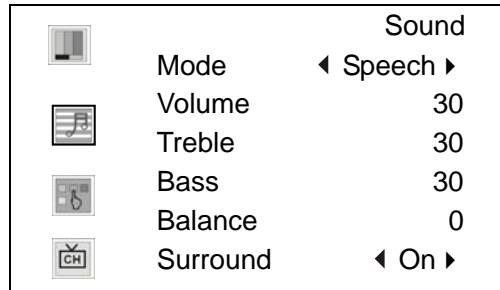

On this menu, the sound setting icon of is highlighting in red frame. Use the ▶ button for the first time, the cursor will be on the line of “Mode ◀ Speech ▶”. And then, press the ◀ or ▶ button repeatedly to select the sound mode from Speech, Movie, Custom or Standard. After select the sound mode, you can use the ▲ or ▼ button and the ◀ or ▶ button to adjust the value of Volume, Treble, Bass from 0 to 60 or Balance from -30~+30 and set the surround at On or Off mode respectively. After the setting, press the **TV MENU** button to return to the root menu or exit the setting menu.

(2) At PC mode

Press the **TV MENU** button to at the PC mode, the menu will be shown as below.

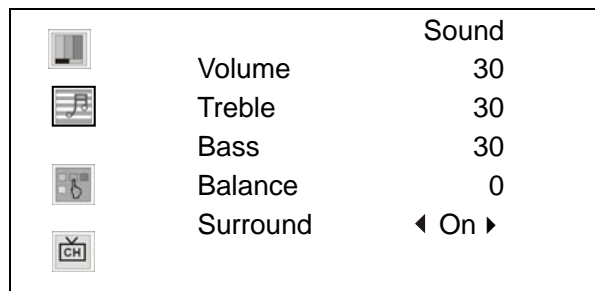


As the menu shows, you can use the ▲ or ▼ button and the ◀ or ▶ button to adjust the value of Volume, Treble, Bass from 0 to 60 or Balance from -30~+30 and set the surround at On or Off mode respectively.


3. CONFIG SETTING

(1) At TV mode

Press the **TV MENU** button on the remote control to show to setting menu,

and then press the ▼ button to select the Config setting icon, and the menu will be shown on the screen as below:

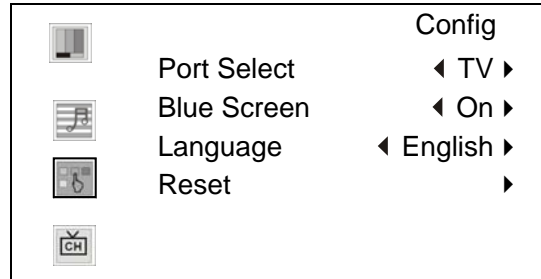


On this menu, the Config setting icon of  is highlighting in red frame. Press the ▶ button for the first time to move the cursor on the line of 'Port Select ◀ TV ▶'.

After selected the Port select as TV mode, use the ▲ or ▼ button to select the item of Blue Screen, Language or Reset., and then, use the ◀ or ▶ button to adjust each item. The 'Blue screen' can be set at ON or OFF mode, and the Language can be set at English, Francais, Deutsch, Portugues, Espanoi or Italiano.

(2) At SCART/CVBS/SVIDEO /DTV mode

After set the 'Port Select' as SCART mode, the menu changed to the below menu:

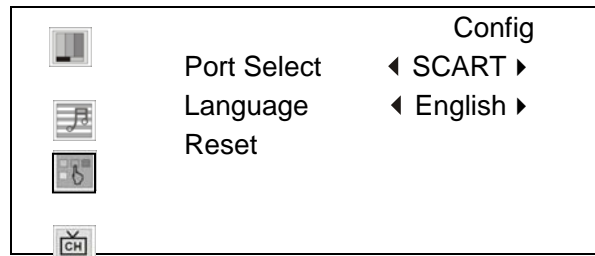


As shown on the menu, you can use the ▲ or ▼ button to select the item of Port select, Language or Reset., and then, use the ◀ or ▶ button

to adjust each item. The 'Port select' can be set at SCART, CVBS, SVIDEO or DTV mode, and the Language can be set at English, Francais, Deutsch, Portugues, Espanoi or Italiano.

(3) At PC mode

 After set the 'Port Select' as PC mode, the menu changed to the below menu:

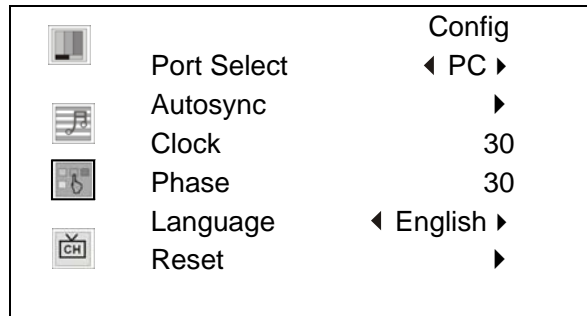


As shown on the menu, you can use the ▲ or ▼ button to select the item of Autosync, Clock, Phase, Language or Reset, and then, use the ◀ or ▶ button to adjust each item. You can select the Autosync, or adjust the clock time or the Phase value from 0 to 60, or change the Language from English, Francais, Deutsch, Portugues, Espanoi or Italiano

Note:

After the setting, press the **TV MENU** button to return to the root menu or exit the setting menu.

4. TV STATION SEARCH SETTING (FOR TV MODE ONLY)

At the TV mode, press the **TV MENU** button firstly to display the menu, and then use the ▼ button to select the TV searching icon

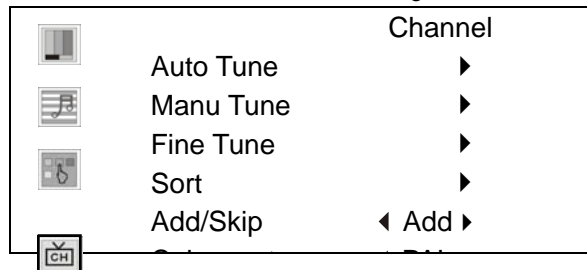




As shown on the menu, the TV searching icon is highlighting in red frame. Use the ◀ or ▶ and ▲ or ▼ buttons to select and set each item.

(1) Auto Tune


Select the item of 'Auto Tune' first, and then press the ◀ or ▶ button:

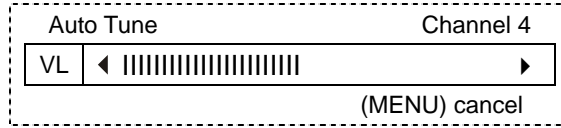

As shown on the menu, the TV will automatically search stations. When searching, press the **TV MENU** button to cancel searching. After the searching, the TV will begin to play the station 0.

(2) Manu Tune

Select the 'Manu Tune' first, and then press the ◀ or ▶ button:

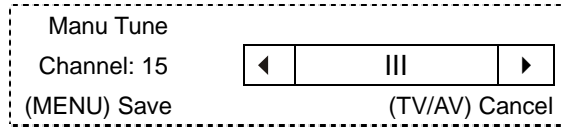

As shown on the menu, the channel number will displayed on the screen. Press the ◀ or ▶ button repeatedly until you search a required station. Press the **TV MENU** button to save the station; press the **TV/AV** button to cancel searching.

(3) Fine Tune

Select the 'Manu Tune' first, and then press the ◀ or ▶ button:



As shown on the menu, the channel number will displayed on the screen. Press the ◀ or ▶ button repeatedly until you get the best playing effect. Press the **TV MENU** button to save the station; press the **TV/AV** button to cancel searching.

(4) Sort (To appoint the station number freely)

Select the 'Sort' item firstly, and then press the ◀ or ▶ button first:

Source	Dest.
6	1
(MENU) Exchange	(TV/AV) Cancel

On the menu, the words Source indicate the current station and 6 is the station number; Dest means the destination station and 1 is the initial station number. The words 'Source' and '6' will be in yellow color and other words are in blue color, and the TV is playing the current station (6). Press the ◀ or ▶ button for the second time, the words 'Dest' and '1' will be in yellow color and other words are in blue color, and the TV is playing the Dest station (1). At that time, you can enter into a station number from 0-199 by the digit buttons 0-9 and the -/-- button as the appointed station number (***) for replacing the current station number. After entered into the number, the TV will play the programs of the appointed station (***). Press the **TV MENU** button, the TV will return back to play the current station (6), but the digit '6' below the word 'Source', has changed to '***', and the digital '***' below the word Dest. has changed to '6'. That means you have exchanged the current station number (6) with the appointed station number (***) successfully. Press the **TV/AV** to exit from this menu.

(5) Add/Skip

Select the Add/Skip item firstly, and then use the ◀ or ▶ button to select to add or skip the current station number

During the current TV channel, press ◀ or ▶ button select Skip mode at On, then current TV channel program can't be displayed, then press **PROG+** or **PROG-** enter last/ next TV channel . The current TV channel will be skipped , and can not be selected . You can recover the current television channel and program by TV STATION TUNE SEARCH SETTING.

(6) Color system setting

Select the Color System item firstly, and then use the ◀ or ▶ button to set the color system at Auto, PAL or Secam or NTSC

NOTE: color system may be changed according local standard.

After the setting, press the **TV MENU** button to return to the root menu or exit the setting menu.

(7) Sound system setting

Select the Sound System item firstly, and then use the ◀ or ▶ button to set the sound system at M,D/K, L, B/G or I.

NOTE: sound system may be changed according local standard.


After the setting, press the **TV MENU** button to return to the root menu or exit the setting menu.

VI. DVB-T OPERATION


(1) BASIC OPERATION

1. Press the **TV/AV/D-TV** button on the unit or the remote control to select the **DTV** function mode. And press **STANDBY** button on the remote control to enter into DTV function.

2. When you use DTV function for the very first time , you will see the screen below

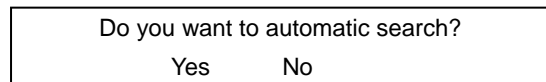

 
3. Please use ◀ or ▶ button to select Yes , and press **OK** button to enter and confirm . The automatic search figure will be displayed as followed:

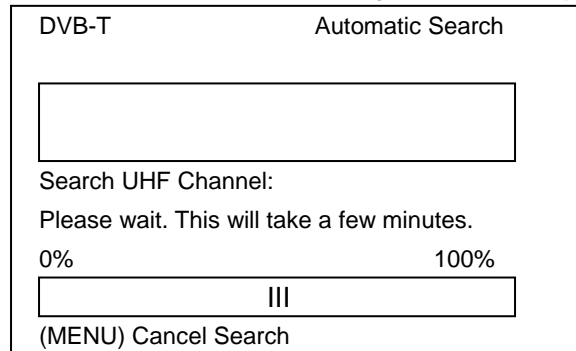

You may press **DVB MENU** button to cancel automatic search

(2) DVB MENU CONTENT

Press **DVB MENU** button, there will be a menu displayed as below:

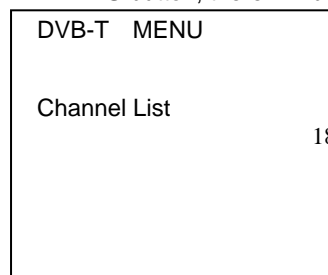


Favorites
Now/Next EPG
Timers
Settings

Use the ▲ or ▼ buttons to select each item and press **OK** button to enter into or confirm, press **DVB MENU** button to cancel setting


(3) DVB MENU SETTINGS ITEM

Use the ▲ or ▼ button to select Settings item and press **OK** button to enter into or confirm, there will be a menu displayed as below:

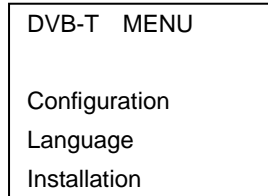

1. Configuration Setting

Use the ▲ or ▼ button to select Configuration item and press **OK** button to enter into or confirm, there will be a menu displayed as below:

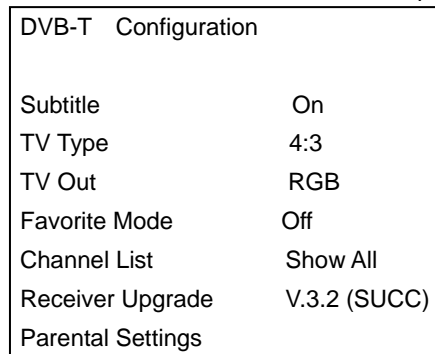


- a. Subtitle :You could choose On or Off
- b. TV Type: You could choose 4:3 or 16:9
- c. TV Out: You could choose out system according to your own TV.
- d. Favorite Mode: Could be choose at Off, List 1, List 2, List 3, List 4 or List 5
- e. Channel List: Could be choose at Show All, TV Only, Radio Only or Text Only.
- f. Receiver Upgrade:

- g. Parental Settings: Press 0~9 numerical button ,and press OK button to confirm and setting.

2. Language Setting


Use the ▲ or ▼ button to select Language item and press **OK** button to enter into or confirm, there will be a menu displayed as below:

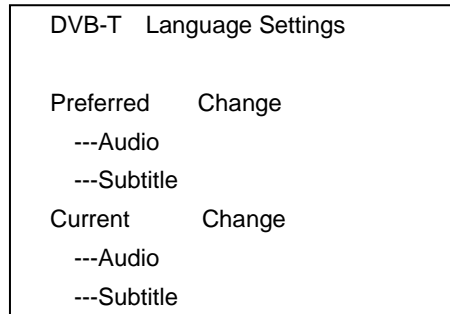

You could choose language system according to your own TV. Press **OK** button to enter into or confirm, and press **DVB MENU** button to cancel.


3. Installation Setting

Use the ▲ or ▼ button to Installation item and press **OK** button to enter into or confirm, there will be a menu displayed as below:

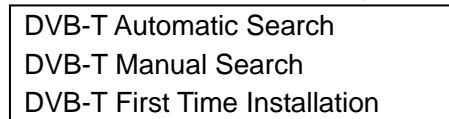

- a. DVB-T Automatic Search

 There will be a menu displayed as below:

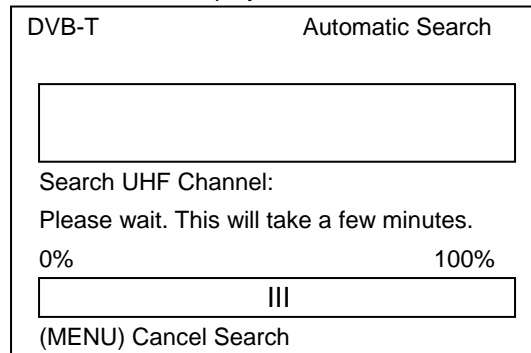

You may press **DVB MENU** button to cancel search

b. DVB-T Manual Search

Use the **▲** or **▼** button to Manual Search item and press **OK** button to enter into or confirm, there will be a menu displayed as below:

DVB-T	Manual	Search
Channel Number :		
Signal Quality:		
Signal Level		
(0)~(9) Value Entry	(OK) Search	(MENU)Exit

Press 0~9 numerical button to entry,and press **OK** button to search and exit by **DVB MENU** button

c. DVB-T First Time Installation

When you choose this item , a figure will be displayed on the screen automatically as below:

Are you sure want to delete all channels and setting for the first time installation?	
Yes	No

Choose Yes ,a menu will be displayed as followed:

Welcome DVB-T First Time Installation
Choose TV Type: ◀ NORMAL 4:3 ▶
Continue Installation : OK
Digital Terrestrial TV Receiver

TV Type can be choose at NORMAL 4:3 or WIDESCREEN 16:9

When choose Continue Installation : OK, the unit will enter into DVB-T Automatic Search item (Please read step a.)

VII. Other Operation


This unit possesses earphone jack. Connect the earphone with the socket and adjust the volume to what you want. Once plugged in, the speaker output will be cut off automatically.

VIII. Trouble shooting

Symptom	Remedy
No power	<ol style="list-style-type: none">1. Check whether the power plug is connected to the power supply.2. Pull out the plug and wait for 60 seconds, and then insert the power plug again and switch on the TV/monitor.
No picture	<ol style="list-style-type: none">1. Check whether the antenna is connected properly.2. Adjust to another channel.3. Change the length and the contrast setting.4. Make sure that the AV picture input cable is connected properly.
No sound	<ol style="list-style-type: none">1. Increase the volume value.2. Check whether the TV is at MUTE mode.3. Make sure that the sound system setting is proper.4. Ensure the AV audio signal input cable is connected properly.
Color distortion	<ol style="list-style-type: none">1. Ensure that the equipment is connected properly.2. Ensure that the AV video signal input is connected properly.
Pictures/Sound are interfered	<ol style="list-style-type: none">1. Check whether the equipment is connected properly.2. Adjust the antenna if use an outdoor antenna.

Remote control no function	<ol style="list-style-type: none"> 1. Make sure that the batteries are installed with correct polarities. 2. Clean the remote sensor. 3. Ensure that there is no foreign object between the remote control and the sensor. 4. Operate the remote control at a distance not more than 6 meters from the remote sensor
Screen glittering under PC mode	Reset the computer and enter into the safety mode, then select the appropriate screen type by consulting the operation manual.
Screen traversed under PC mode	Maybe the phase is not appropriate. Enter into the PC setting and change to correct level.

IX. Notes

- (1) Please read these operating instructions carefully before you operate this unit.
- (2) When you want to cut off the electricity supply of the whole unit's power, please press the **POWER** button on the unit. And take out the plug from wall outlet.
- (3) Don't press any button if you are not using the unit. Set the **POWER** button to "OFF", and take out the battery from remote control before long time non usage.
- (4) Be cautious of the safe mark 
- (5) Repairs are to be referred to qualified service personnel. Don't take apart it by yourself.
- (6) Because of a sudden change in temperature or humidity, or when warm air comes into contact with any cold parts in the unit, condensation may form. When condensation forms inside, the unit may not function well. Once condensation disappears, the unit will return to normal functioning. Placing the unit in a warm room will help to dry up condensation. This should take 1 to 2 hours, depending on environmental conditions. it should be wiped from inside towards the outer side using a dry cloth.

WARNING:

To prevent fire or shock hazard, do not expose this unit to rain or moisture. Do not remove cover, no user serviceable parts inside, refer servicing to qualified service personnel.



X. Specifications

Screen size, visible		15 inch	
Screen format		4:3	
Resolution		1024 * 768	
Minimum contrast ratio		500:1	
Minimum brightness		250 cd/m ²	
Display colors		16M	
Minimum viewing angle		130° (horizontal) / 100° (vertical)	
Maximum response Time		12 ms	
Minimum lifetime background light		50,000 hours	
Video color systems		PAL/NTSC3.58/NTSC4.43/SECAM	
TV FUNCTION	TV Standard	PAL BG/I/DK, SECAM L/DK/BG	
	TV tuning system	Auto Preset tuning	
	Tuner	Integrated and frequency synthesis	
	CATV (optional)	S1~S41 ch, Hyper Band	
	Number of channels	200	
	Videotext / Teletext	10 pages	
	Stereo systems (Optional)	Nicam-BG, I,DK/GR-GB, A2 for B/G/D/K	
Terminals	Video	Composite video *1	
	S-Video	S-video *1	
	PC	1	
	Audio L	1	
	Audio R/MONO	1	
	Scart	Input	Composite video, RGB, Audio L+R
		Output	Composite video, Audio

OSD language	English//French/Spanish/ Italian, etc
Audio output	1.5W * 2
Unit Dimension	363X318X60MM
Gross weight	5.8 Kg
Power requirement	DC 12V 4A, AC110~240V, 50/60Hz
Power Consumption	Max 40W

XI. Display modes

Resolution	Horizontal Freq. (KHz)	Vertical Freq. (Hz)
720x400	31.5	70
640x400	31.5	70
640x480(VGA)	31.5	60
640x480(VGA)	37.9	72
640x480(VGA)	37.5	75
800x600(SVGA)	37.9	60
800x600(SVGA)	47.2	72
800x600(SVGA)	46.9	75
1024x768(XGA)	48.4	60
1024x768(XGA)	56.5	70
1024x768(XGA)	60.0	75
1280x1024(SXGA)	63.5	60
1280x1024(SXGA)	80.0	75

1. Modes, which are not listed in the above table, may not be supported. For an optimal picture it is recommended to choose a mode listed in the table.
2. You have 13 available modes compatible with windows.
3. It can happen that the image is disrupted. This can occur as result of a signal from the VGA cad, which does not correspond with the usual

standard. This is not, however, an error. You can improve this situation by altering an automatic setting or by manually changing the phase setting and the pixel frequency menu.

4. If you switch off the TV/monitor, interference lines can occur on your screen. But it's not a problem, no need to concern about it.
5. To extend the service life of the product, we recommend that you use your computer's power management function.

Note: Design and specifications are subject to change without notice.

TECHNICAL SUPPORT

TECHNICAL SUPPORT LINE

GENERAL SUPPORT CAN BE PROVIDED ON ALL
PRODUCTS PURCHASED FROM US
(Unfortunately we cannot provide support on products or
components that we do not supply)

0906 3020343

CALLS COST 50p PER MINUTE

CALLERS MUST BE MINIMUM OF 18 YEARS OF AGE
CALLERS MUST HAVE THE PERMISSION OF THE TELEPHONE
SUBSCRIBER

ALL INFORMATION GIVEN IS CORRECT
AT THE DATE OF PUBLICATION - 01/01/2005

HOURS OF BUSINESS
MON – FRI 9am to 5pm (excludes bank holidays)

FASCIN8 LTD