

SWITCHING ON YOUR MP3 PLAYER

On the top of the MP3 player there is power button, simply flick the switch to on and back to switch off. Please note that you must charge the MP3 player for at least 6 hours before any usage
In the ON position.

Power ON/OFF




Once you have placed music into your MP3 player switch on the MP3 player and you will then see a red light flash once then pause then flash twice then pause again and finally flash one more time from within the unit, only after these flashes can you then press play.

LED Light



MP3 FUNCTIONS

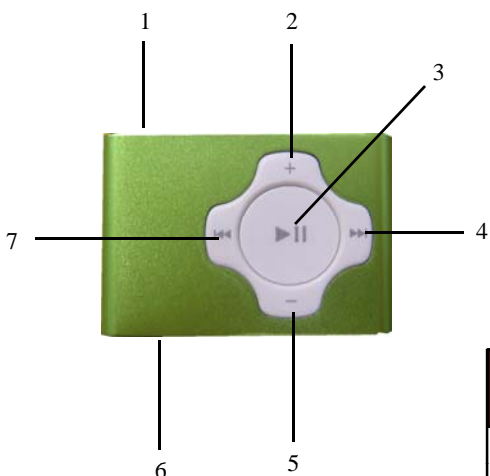

- 1 - ON/OFF Switch
- 2 - Volume plus
- 3 - Play/Pause Button
- 4 - Next Song
- 5 - Volume Minus
- 6 - USB Connection
- 7 - Previous Song

USB Connection

Some of the problems that can occur is that your PC will not recognize the player, make sure that your USB is firmly in both ends and if you run windows 98 Install the necessary drivers (not needed for xp). Also try some of your other PC's USB ports as these can become damaged as well as the wire connector



MP3 Player

Quick Set-Up Guide

TRANSFERRING YOUR MUSIC FILES TO YOUR MP3

Music Playback

In order to place music on your MP3 player simply copy and paste your MP3's into the removable device which should appear when you plug your MP3 player in, then unplug your MP3 player from the PC. If you are trying to get music from a CD onto your MP3 player then simply put your music CD into your PC and open up windows media player (if you do not have this then you can download the software from the microsoft website) using the RIP facility, RIP the songs from your CD to the MP3 player. If you unsure on how to do this either use the windows media help or alternatively go to www.fascin8.co.uk and watch the video tutorial which will give you step by step instructions.

Once you have placed music into your MP3 player simply switch the player on and press the play button, then press either the arrow right for the next song, or the arrow left for the previous song.

In order to change the volume press either the + OR – button on the player.

To pause the song press the play button again.