

Setting up your 17" TV/DVD



What's in the box?



TV/DVD Set



AC Adapter



Power cord



AV Cable



VGA Cable



Remote control



2 x AAA batteries


1

Selecting a mode

When the power is on, press the **input** (remote) button to choose the input mode you want then use the up and down arrows to highlight the desired mode and then press the arrow pointing right to select it whether it be Scart, HD, PC, TV, S-Video or DVD

Picking up analogue only

For picking up analogue only you will need to place the aerial into the TV RF/IN socket at the back of the TV as shown on the diagram below and press the AV button on the top left of your remote until a picture is displayed.

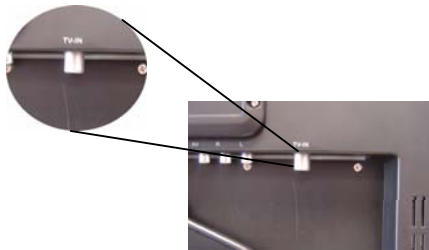

2

Playing a DVD

1



Open the DVD door by pressing down on the open button located on the base unit and place your DVD carefully inside.

2



Close the DVD door, and first make sure you are in the correct input (press the input button on the remote to change to DVD) and wait for the disc to load

3

Power-up and turn on your TV

1

Connect the power cable to the DC+12V socket on the back of your TV:



2

When the TV is plugged in the red light will appear this is in standby. Simply press the power button on your remote to switch on.

Remote sensor



3

Insert 2 AAA batteries (provided) into your Remote control:



Take care to ensure the correct polarity when fitting the batteries

Technical support: 0161 975 0458 – Monday to Friday 9am to 5pm

1

First time analogue installation

1

In order to scan in your analogue channels first make sure you are in the correct function on your TV by pressing the input button on your remote and selecting TV then press the VOL+ button to select it. From here press the MENU button and using your VOL +/- buttons move to the option which says CHANNEL.



2

Using the CH+/- buttons go down to Auto Scan and until its highlighted yellow, then press the VOL+ once this will now start a auto scan for your channels.

