



FUNCTIONS AND DISPLAY

Front Display

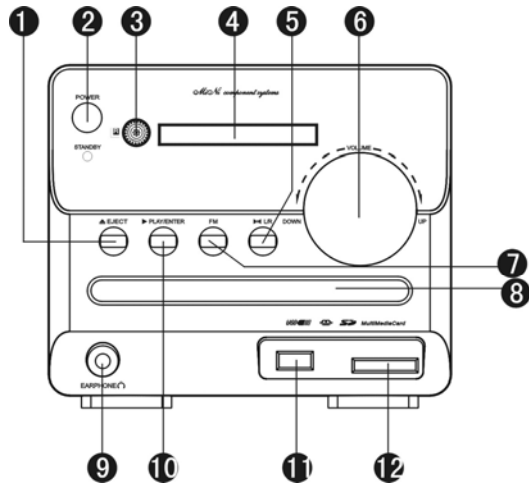


- 1. EJECT
- 2. POWER ON/OFF
- 3. REMOTE CONTROL SENSOR
- 4. DISPLAY SCREEN
- 5. L/R CHANNEL
- 6. VOLUME DOWN/UP
- 7. FM
- 8. DISC DOOR
- 9. EARPHONE SOCKET
- 10. PLAY/ENTER
- 11. BUILT-IN USB PORT
- 12. BUILT-IN MULTI-MEDIA CARD PORT

Rear Display

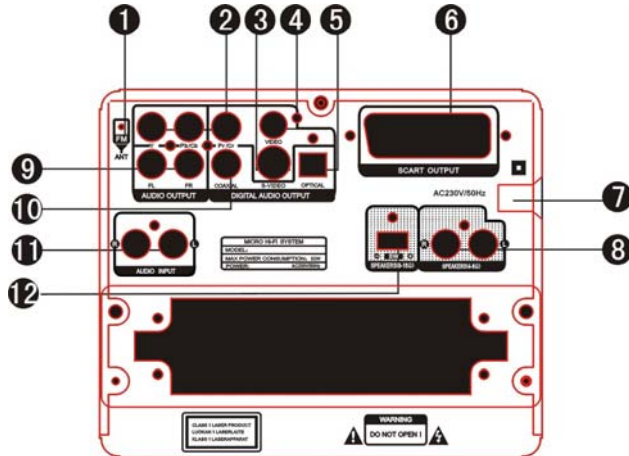


- 1. FM ANTENNA INTERFACE
- 2. Pb/Cb, Y, Pr/Cr COMPONENT OUTPUT
- 3. S-VIDEO OUTPUT
- 4. VIDEO OUTPUT
- 5. OPTICAL FIBER OUTPUT
- 6. SCART OUTPUT
- 7. POWER SUPPLY INPUT
- 8. L/R SPEAKER OUTPUT
- 9. L/R FRONT AUDIO OUTPUT
- 10. COAXIAL OUTPUT
- 11. L/R AUDIO INPUT
- 12. SUBWOOFER OUTPUT

REMOTE CONTROL FUNCTIONS

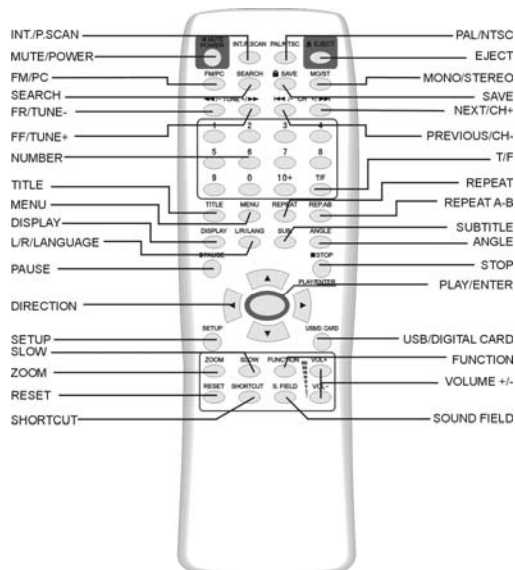

SETTING UP AND USING THE HIFI/DVDConnecting to a TV


1. If your TV has AV (Audio/Video), connect a AV cable from the HIFI to your TV and switch your TV to receive a AV signal.
2. If your TV has S-Video terminal, please use the S-Video connection cable to connect the player and TV, to obtain a higher quality image.
3. If your TV-set has SCART terminal, please use a scart cable (not included) to connect the player to the TV-set.

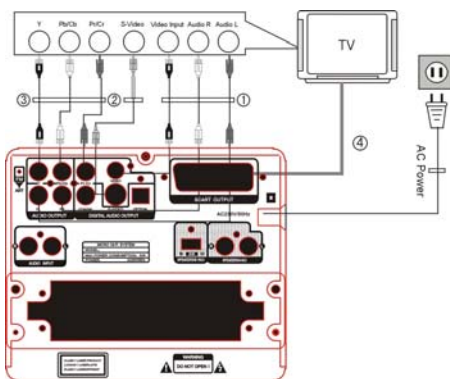Playing a DVD

Once you are connected to the TV, you can start to watch your DVD. To do this simply press the eject button on the remote or unit and place the DVD with the picture facing up on the tray. Press the eject button again to close the tray. The DVD will now load and go to the main menu screen, use the remote to navigate.

MP3 DISC PLAYING FUNCTION

Press the Eject button on the panel or remote control to open the tray, put in an MP3 disc, then press Eject button again to close the tray. The unit begins to read it, and the TV screen will display the following use the remote to navigate through the songs and press play to begin. If you are not connected to a TV, the hifi will automatically start to play the disc.

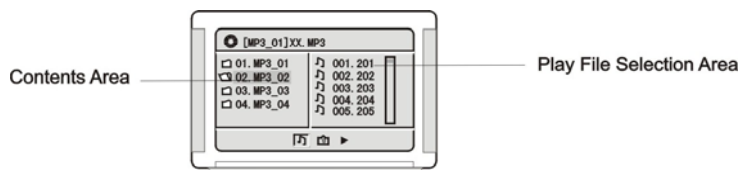USB/SD CARD

1. Press the USB key once on the remote control.
2. After the TV screen shows the dialog box: "Please select.....PLAY DVD/READ USB/READ CARD" press the ' ▲▼ key on the remote control to move the cursor to the corresponding option to select.
3. Press "Play/Enter" key can switch to the option that you want.
4. When playing a USB or Digital Card, you can also switch to read the disk status by using the same methods.
5. If you are not connected to a screen to display the contents of your card or usb, and its music that you wish to listen to, you can then just plug the USB/SD card straight in and it will start to play the music on a USB, but on a SD card you will need to press play.