 



FUNCTIONS AND DISPLAY

Front Display

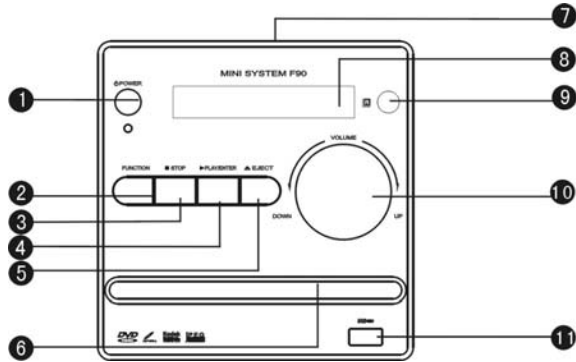


- | | |
|---------------|--------------------------|
| 1. POWER | 6. DISC TRAY |
| 2. FUNCTION | 7. IPOD PORT |
| 3. STOP | 8. DISPLAY SCREEN |
| 4. PLAY/ENTER | 9. REMOTE CONTROL SENSOR |
| 5. EJECT | 10. VOLUME UP/DOWN |
| 6. DISC TRAY | 11. BUILT-IN-USB PORT |

 Rear Display

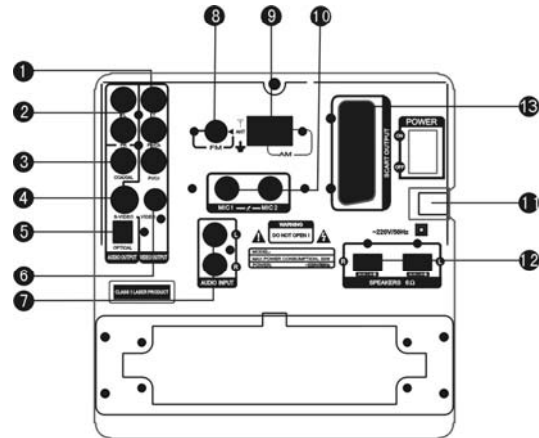

- 1. Pb/Cb, Y, Pr/Cr COMPONENT OUTPUT
- 2. L/R FRONT AUDIO OUTPUT
- 3. COAXIAL OUTPUT
- 4. S-VIDEO OUTPUT
- 5. OPTICAL FIBER OUTPUT
- VIDEO OUTPUT
- L/R AUDIO OUTPUT
- FM ANTENNE INTERFACE
- AM ANTENNE INTERFACE
- MIC SOCKETS
- POWER SUPPLY INPUT
- L/R SPEAKERS
- SCART OUTPUT

 
REMOTE CONTROL FUNCTIONS

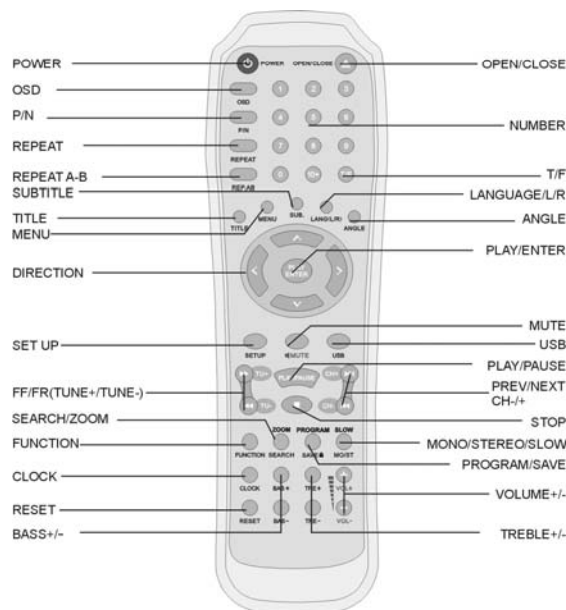

SETTING UP AND USING THE HIFI/DVD/IPOD

CONNECTING TO A TV

 1. If your TV has AV (Audio/Video), connect a AV cable from the HIFI to your TV and switch your TV to receive a AV signal.
2. If your TV has S-Video terminal, please use the S-Video connection cable to connect the player and TV, to obtain a higher quality image.
3. If your TV-set has SCART terminal, please use a scart cable (not included) to connect the player to the TV-set.

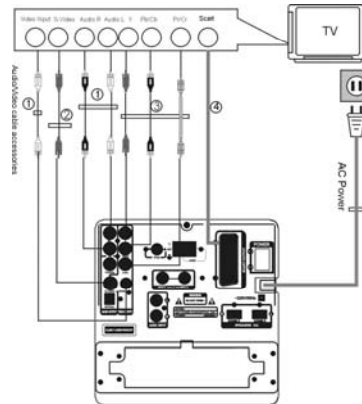


PLAYING A DVD

Once you are connected to the TV, you can start to watch your DVD. To do this simply press the eject button on the remote or unit and place the DVD with the picture facing up on the tray. Press the eject button again to close the tray. The DVD will now load and go to the main menu screen, use the remote to navigate.

MP3 DISC PLAYING FUNCTION

Press the Eject button on the panel or remote control to open the tray, put in an MP3 disc, then press Eject button again to close the tray. The unit begins to read it, and the TV screen will display the following use the remote to navigate through the songs and press play to begin. If you are not connected to a TV, the hifi will automatically start to play the disc.

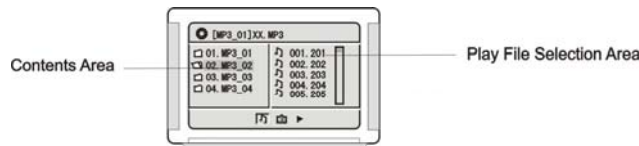


USB

1. Press the USB key once on the remote control.
2. After the TV screen shows the dialog box: "Please select.....PLAY DVD/READ USB" press the key on the remote control to move the cursor to the corresponding option that you want.
3. Press "Play" or "Eject" to select the option that you want.
4. If you are not connected to a screen to display the contents of your USB, and its music that you wish to listen to, you can then just plug the USB card straight in to the HIFI and it will start to play the music automatically.

CONNECTING YOUR IPOD

 - In order to begin using your IPOD you must first select the correct adaptor as shown below.
- Place the plastic adaptor in the docking slot. On the bottom of your IPOD you will have a connection slot, push this carefully onto the docking slot. Switch on the HIFI and your IPOD. Press the function button on either the HIFI or remote control until IPOD is displayed. Press play on your IPOD to begin listening to your music.

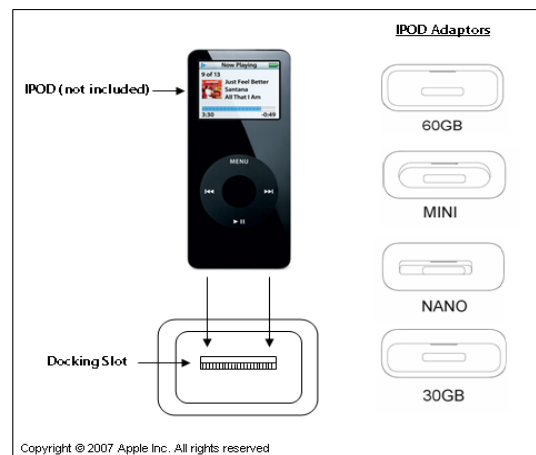

Copyright © 2007 Apple Inc. All rights reserved