 
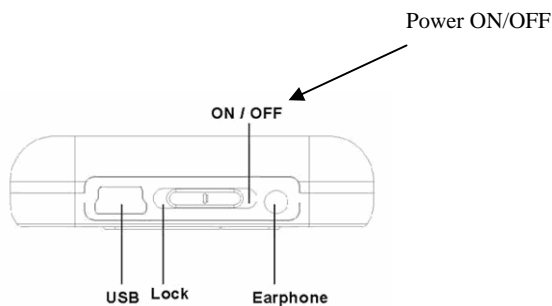 


SWITCHING ON YOUR MP4 PLAYER

On the side of the MP4 player there is a power button, simply push and hold the switch to the on position to switch on and then back again and hold to switch off. Please note that you must charge the MP4 player for at least 4 hours before any usage

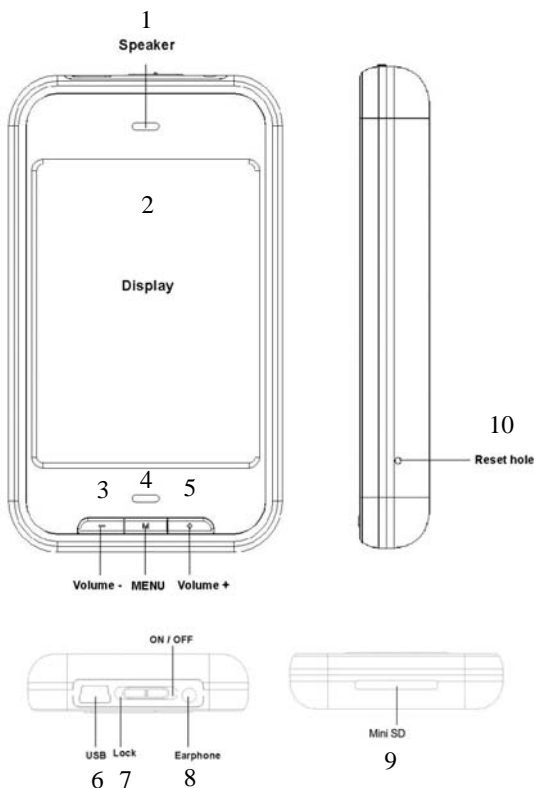

Once you have put your files onto your MP4 player simply select the desired mode in which you wish to view by gently pressing the desired function on your touch screen. And then press the play button to begin listening.

**MP4 FUNCTIONS**

- 1 –Speaker
- 2 –Display
- 3 – Volume minus
- 4 – Menu
- 5 – Volume +
- 6 – USB Connection
- 7 – Lock on/off
- 8 – Earphone slot
- 9 – Mini SD Card slot
- 10 – Reset Hole

USB Connection

 
Some of the problems that can occur is that your PC will not recognize the player, make sure that your USB is firmly in both ends and if you run windows 98 install the necessary drivers (not needed for xp). Also try some of your other PC's USB ports as these can become damaged as well as the wire connector

CONVERTING MOVIES AND MUSIC TO YOUR MP4 PLAYER

Video Playback

Before you begin using the Movie transformer you must install the program, please follow the install instructions on page 11 of the user manual

1 - Click and run the program of "AV Converter.exe", shown as follows:

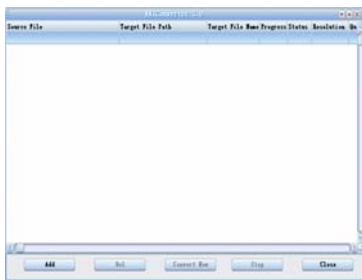

2 - click "add ", show dialog as follows



3 - Select and set your desired parameters, select your desired video/audio file and AVI video file routine to be generated, click [Start to Convert] button, then begin to convert to AVI file.



4 - The successfully converted AVI video file can be played in the MP4 player. During the operation enter Video Play menu, select the corresponding file and long press to start playing the movie

Music Playback

In order to place music on your MP3 player simply copy and paste your MP3's into the removable device which should appear when you plug your MP3 player in, then unplug your MP3 player from the PC. If you are trying to get music from a CD onto your MP3 player then simply put your music CD into your PC and open up windows media player (if you do not have this then you can download the software from the microsoft website) using the RIP facility, RIP the songs from your CD to the MP3 player. If you unsure on how to do this either use the windows media help or alternatively go to www.fascin8.co.uk and watch the video tutorial which will give you step by step instructions.

Once you have placed music into your MP4 player simply switch the player and enter the music Function, your songs should now be there to play, select the song and press the play button to begin.