

**iKASU**™



**4GB TOUCH SCREEN MP4 PLAYER**

Table of Contents .....	1
Safety and Upkeep .....	2
Accessories .....	3
Functions .....	4
Instructions .....	4-30
Frequently Asked Questions .....	31
Technical Support .....	32
Fault Report Card .....	33

- Never attempt to fix the player yourself by opening and disassembling the unit as this will effect your guarantee.
- When cleaning the screen please use a soft dry cloth.
- Do not expose the player to direct sunlight for long periods of time.
- Do not expose the player to damp or moist conditions
- Do not place near sharp objects as the screen can be easily scratched.
- When the player is not in use turn the player off to preserve the battery charge.
- This player uses a Lithium battery. When the battery is low, please charge the battery using the adaptor supplied



Do not dispose of this product in your household waste. Contact your local authority for details of local recycling schemes



**1 USB Connection Cable**

 


**1 Set of Headphones**



**1 Software Disk**

- 320x240 dot matrix 260K-color full color high speed TFT display screen
- Supports MP3,WMA music formats
- Supports Micro SD/TF card up to 4GB
- Supports MPEG AVI RM, RMVB, 320\*240 resolution
- Supports High Definition JPEG,BMP and GIF format photo browse
- Built-in Microphone, Digital Voice Recorder Multiple Playback Mode: Once / Repeat once / Folder once/ Folder repeat / All once / All repeat/Intro/Order/Shuffle
- FM Radio
- Supports WIN2000,WIN XP,VISTA operating system
- USB 2.0 High Speed
- Supports E-Book Playback, and supports Chapter Mark
- Game

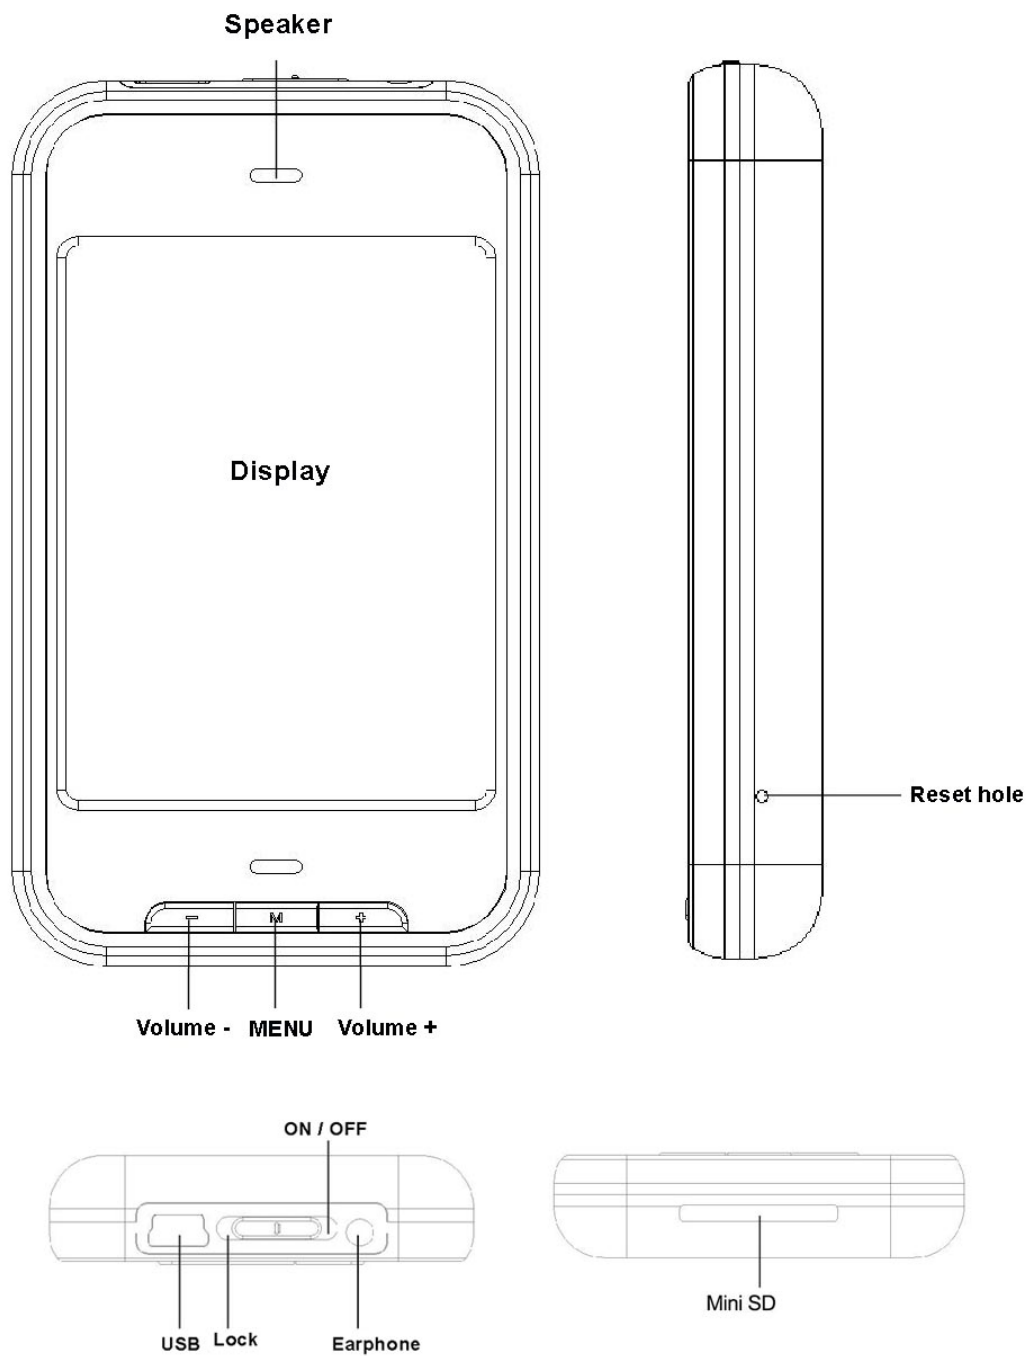**Display**

## Basic Operations

### Switch MP4 Player On

Slide the power button to the right for 3 seconds. The player shows the Welcome Page and then enters into the Main Menu.

### Switch MP4 Player Off

Slide the power button to the right for 3 seconds

### Connecting to the computer and how to transfer

Attach the supplied USB cable to the MP4 and the computer, The computer will automatically recognize the device as a removable disk. This disk can be found in My Computer. This is where you store your music, movies and Data

### Charging the Unit

To charge the unit via the USB cable, simply keep the cable plugged into the computer. On the bottom right of your computer screen on the taskbar you will see the “safely remove hardware” Icon. Left Click the icon and you will see the removable storage (MP4) and then left click again. This will remove the MP4 as a removable disk connection and now will charge the player.

Full charge is about 6 hours with approximately 8 hours MP3 playback and 2 hours video playback.

If you would like to purchase a USB Mains Charger please contact 0161 975 0458 or visit [www.ikasutv.com](http://www.ikasutv.com)

### Volume Control

While in Music, FM radio and video, etc, you can perform volume control using + or – button at the lower part of the screen. + Button to increase volume and – button to decrease the volume. Hold Button + or Button – to continuously increase or decrease volume.

### Switching the earphone/built-in speaker output

In the button menu, short press  button to switch the sound output from the earphone/built-in speaker.

**Battery**

High capacity lithium battery is used for this unit.

The duration available of the battery power depends on volume, types of playing files and operation of batteries. The player can be set up by the user as [user define power off time] or [display setup] to save batteries.

**Charging**

To charge the player, connect the player with the USB port of the USB and charge for a minimum of 4 hours.

**Using the MINI SD card**

After this unit is connected with the computer, you will find two moving disks. The first one is the built-in memory disk for this unit and the other is the disk for the MINI SD card. If no card is inserted, the second disk cannot be opened. This unit supports the extension of the MINI SD card from 128MB to 4GB.

**Inserting and Pulling out the MINI SD card**

**Inserting:** Put the MINI SD card face up (side with words) (with the direction of the display screen as the face), and slightly force the card into the socket of the card, i.e. connecting the unit. Under this state, you can play the content in the MINI card.


**Pulling:** Slightly push the MINI SD, and it will bounce by a section, and then you can take it out.


**Caution:** Please perform inserting and pulling operation when power is off! Otherwise, it will lead to the loss or damage to the files within the unit! If no card is inserted, the computer will be unable to perform read and write operation for the disk notes of the later moving disk (MINI SD card).


### Main Interface

 
This MP4 provides a contact screen operation system, which allows you to perform even more visually. In the main menu interface, click on the corresponding function icons on the screen to access the selected function mode.

After accessing the corresponding function mode, gently touch the contact screen. You should now see a menu window. Press any of the available options to begin use.

After some time or after  at the upper part of the screen on the screen is contacted, the menu window will disappear.

Press M button at the lower part of the screen or contact  at the bottom of the contact screen to directly return to the main menu interface.

Long press M button at the lower part of the screen or  in the control menu at the upper part of the screen to return to the main menu to select the interface.

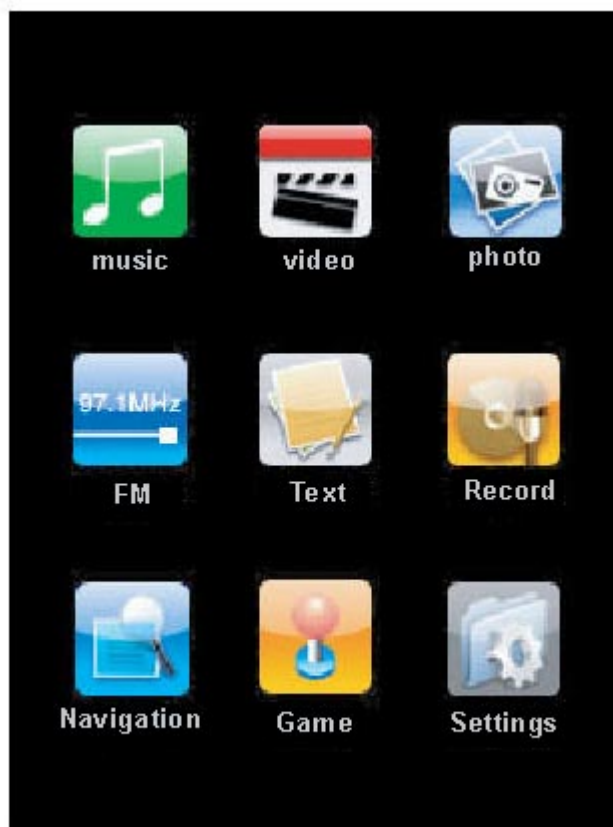

### Music mode


In the main menu interface, click on “Music” function icon on the contact screen to access the “Music” function interface.


In order to place music on your MP3 player simply copy and paste your MP3's into the removable device which should appear when you plug your MP3 player in, then unplug your MP3 player from the PC.

If you wish to copy your CD music onto your MP4 player then simply put your music CD into your PC and open up windows media player (if you do not have this then you can download the software from <http://www.microsoft.com/windows/windowsmedia>) using the RIP facility, RIP the songs from your CD to the MP3 player. If you unsure on how to do this either use the windows media help or alternatively go to [www.ikasu.tv](http://www.ikasu.tv) where you can watch the video tutorial which will give you step by step instructions.

### 1. Description of playing interface








After accessing the “Music” function mode, gently touch the screen to be able to see the “Menu Window”.

Touch the “” at the upper part of the “screen menu”, and the “Menu Window” will disappear.

Press “M” button at the upper part of the screen or “” button at the bottom of the contact screen to be able to directly return to the “Main Menu” interface.

 







Built-in speaker on/off control button

-  Use the music mode setup shortcut button to be able to perform the music playing mode, the loop mode and the EQ mode.
-  Directly return to the “Main Menu” interface.
-  Close the button menu display.
-  Short press the button to enter the previous music and long press for the fast rewind of the current music
-  Access the music list to select the music files
-  Play/pause the current music
-  Short press the button to access the next music and long press for the fast
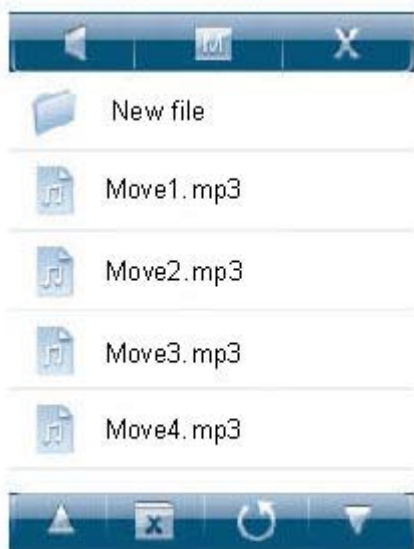
## 2. Description of the music list interface

Directly touch the “name of music” on the screen to be able to play the selected music.



-  Built-in speaker on/off control button
-  Directly return to the main menu interface
-  Close the button menu display
-  File browse up
-  Delete the selected music



Return to the folder at the upper level



File browse down

### 3. Lyric display

The player supports “\*LRC” lyric files (The user can download via “www.lrc.com” website, or acquire lyric files via “LRC”) to perform synchronous playing of lyrics and music. Names of lyrics and files of music must be identical.

When there is any lyric file bearing the same name under the directory of playing music, the playing will directly access the lyric display interface.

### Playing Movies

#### Installing the video software

Place the CD included with your MP4 player in the computer compact disk drive. In the Windows Operation System, it will automatically pop up with the installation interface. Click on “Video Convert Tool” to start installing all the software for the MP4 player. Follow the installation prompt to complete the installation process.

#### Producing video files

The MP4 Player supports AVI file type movies. AVI files need to be converted using the software provided,

 
AVI is the most popular video format for the current portable media player as well as one of the most popular formats on the network. The video culture coded in the XVID/DIVX format has higher video quality, and moreover, the files are smaller. In the viewing quality, the video file effect coded in the XVID/DIVX is not inferior to the effect of coded in the WMV format



function interface. You will now see your videos displayed in a list. Simply touch the one you wish to view.

### 1. Description of movie file list interface

Directly click on the name of video file on the screen to be able to start playing the selected video.

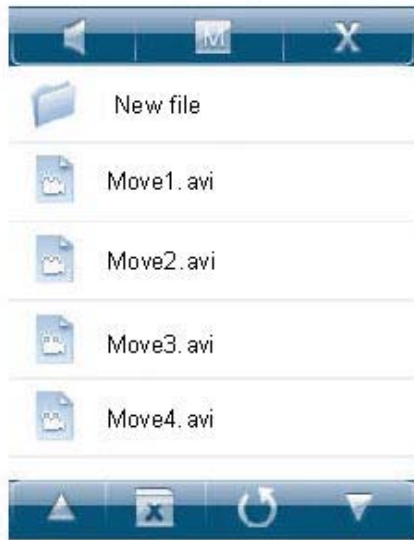

Built-in speaker on/off control button



Directly return to the main menu interface



Close the button menu display



File browse up



Delete the selected music



Return to the folder at the upper level



File browse down

## Movie functions



Close button menu display



Directly return to the main menu interface



Built-in speaker on/off control button



Short press the button to access the previous video and long press for fast rewind of the current video



Access the video list and select the video files



Play/pause the current video





Short press the button to access the next video and long press for the fast forward of the current video

### FM radio

In the main menu, click on “Radio” function icon on the screen to be able to access the “Radio” function interface.

After accessing the “Radio” function mode, gently touch the screen to be able to see the menu window.

Touch the “” at the upper part of the “screen menu”, and the “Menu Window” will disappear.

Press “M” button at the upper part of the screen or “” button at the bottom of the contact screen to be able to directly return to the “Main Menu” interface.



Built-in speaker on/off control button



FM interior record shortcut button



Directly return to the main menu interface



Close the button menu display



Switch radio channels to the low frequency direction



Use the “Switch” button in the FM mode to switch over to the states of “Manual Search, Preset, Delete, Save, Automatic Search”, etc



Switch radio channels to the high frequency direction

### 1. Searching radio channels

Short press “” button in the FM mode. Select “Manual” option and short press “” button to search radio channels up and down. You can perform silencing treatment for this operation.

### 2. Saving radio channels

Short press the “” button in the FM state. Select “Save” option. Short press “” button to save the current radio channels. After selecting the radio channel selection positions CH1 and CH2, short press again the “YES” button for saving the same.




### 3. Fully automatic search and memory of radio channels

Short press “” button to select the “Auto” option. Press “” to be able to perform fully automatic search of radio channels and saving. After the search is over, it will switch to the first radio channel for the frequency modulation. In the process of radio frequency search, press “” button to be able to stop automatic search.

### 4. Deleting radio channels

Short press “” button to select “Delete” option. Short press “” button to pop up the radio channel preset list. Select the preset radio channel position CH1 or CH2 to be deleted, and then short press “” button for “YES” and deletion.

## 5. FM interior recording

In the radio state, press “” button to be able to access the FM recording interface.



Built-in speaker on/off control button



Directly return to the main menu interface



Close the button menu display



Long press the button to save the recorded files and exit the recording state



Short press the button to start/pause recording

### Picture browse

In the main menu interface, click on “Picture” function icon to be able to access the “Picture” function interface.

 
After accessing the “Picture” function mode, gently touch the contact screen to be able to see the “menu window”.








Touch the “X” at the upper part of the “screen menu”, and the “Menu Window” will disappear.

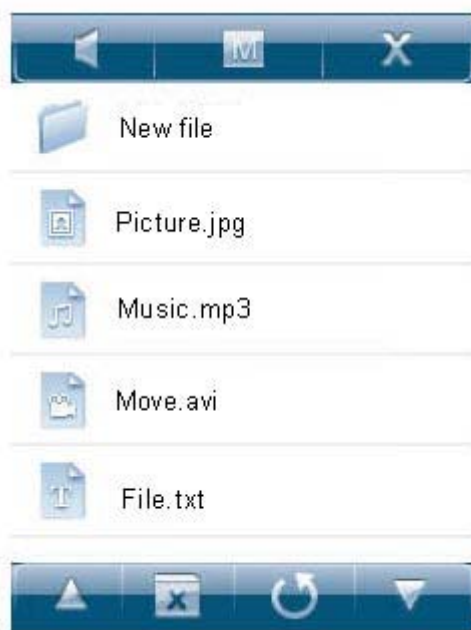Press “M” button at the upper part of the screen or “M” button at the bottom of the contact screen to be able to directly return to the “Main Menu” interface.

#### 1. Description of the picture file list interface








Directly click on the “picture file name” on the screen to be able to display the selected pictures.



-  Built-in speaker on/off control button
-  Directly return to the main menu interface
-  Close the button menu display
-  File browse up
-  Delete the selected pictures
-  Return to the folder at the upper level
-  File browse down

## 2. Picture browse





-  Close the button menu display;
-  Directly return to the main menu interface;
-  Built-in speaker on/off control button;
-  Access the previous picture;
-  Access the picture list to select from the picture files;
-  Automatic picture browse playing/pausing switch button;
-  Access the next picture.

### E-book

In the main menu interface, touch the “E-book” function icon to be able to access the “E-book” function interface.

 
After accessing the “E-book” function mode, gently touch the screen to be able to see the menu window.








Touch the “” at the upper part of the “screen menu”, and the “Menu Window” will disappear.

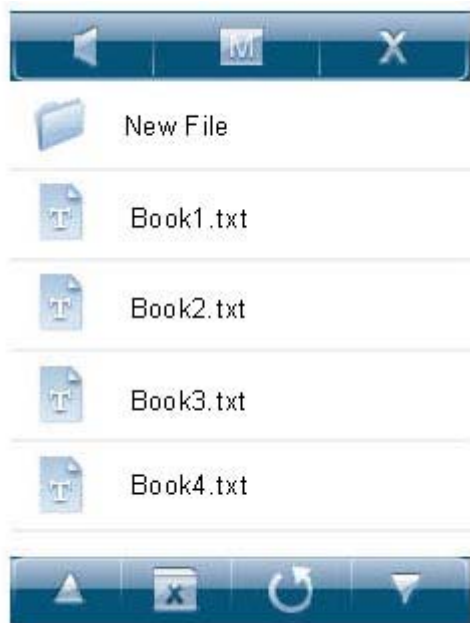Press “M” button at the upper part of the screen or “” button at the bottom of the contact screen to be able to directly return to the “Main Menu” interface.


### 1. E-book file list

 Directly touch the “E-book file name” on the screen to be able to start displaying the selected e-book.



-  Built-in speaker on/off control button
-  Directly return to the main menu interface
-  Close the button menu display
-  File browse up
-  Delete the selected e-book
-  Return to the folder at the upper level
-  File browse down

## 2. E-book browse

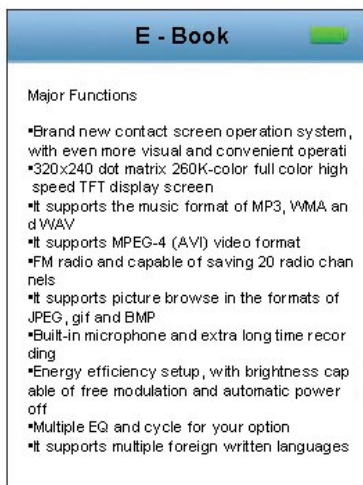



Built-in speaker on/off controller



Automatic e-book browse setup button to be able to set automatic browse switching time



Press this button to be able to directly return to the main interface



Close the button zone display



E-book text page down



Return to the e-book text file interface



E-book bookmark function button




E-book text page up

Prompt: Push the power switch to the “” direction for one second to be able to start/pause automatic browse function of the e-book.

### 3. E-book bookmark setup

 In the e-book browse state, short press “” button to pop up the e-book setup menu. Press the e-book setup menu and then press “/” button to select the bookmarks to be saved/exported. After selecting the “Save/Export Bookmark” zone, press “” button to confirm saving/exporting bookmarks, and then press “” to cancel saving/exporting the bookmark.

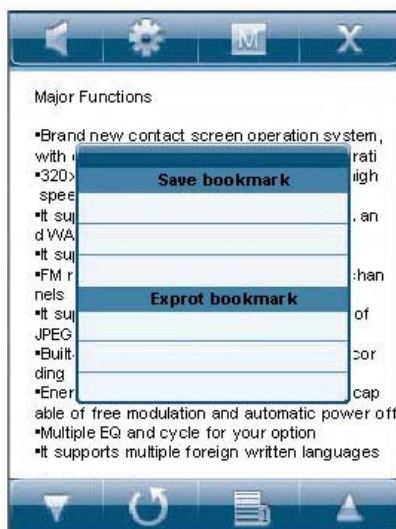

## Recording

In the main menu interface, touch “Record” function icon on the screen to be able to access “MIC voice recording” function interface.

After accessing the “Record” function mode, gently touch the screen to be able to see the menu window.

Touch the “X” at the upper part of the “screen menu”, and the “Menu Window” will disappear.

Press “M” button at the upper part of the screen or “M” button at the bottom of the contact screen to be able to directly return to the “Main Menu” interface.



Built-in speaker on/off control button



Directly return to the main menu interface



Close the button menu display



 
Long press the button to save the recorded files and exit the recording state







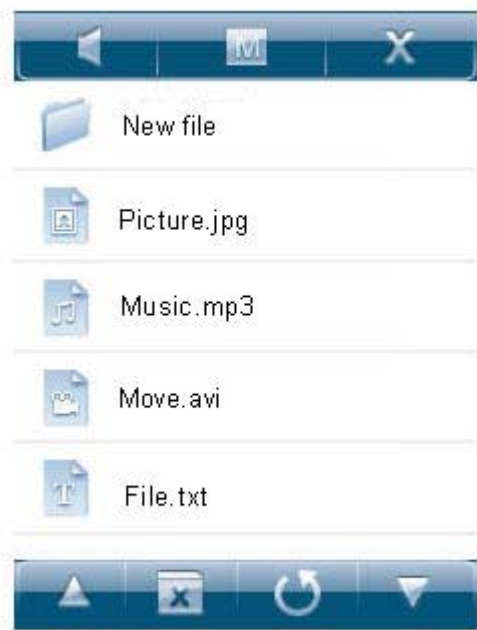


Short press the button to start/pause recording

In the main menu interface, touch the “Resource manager” function icon on the screen to be able to access the “Resource Manager” function interface.

In “Source Manager”, you can list all files and folders saved in the player. The user can directly select the music, video, e-book and pictures and other files supported by the player in this interface for playing and can also perform deletion operation for the selected files.



-  Built-in speaker on/off control button
-  Directly return to the main menu interface
-  Close the button menu display
-  File browse up
-  Delete the selected files
-  Return to the folder at the upper level
-  File browse down

## Games


In the face of the main menu interface, touch “Game” function icon on the screen to be able to access the “Game” function interface.

Long press “M” button at the lower part of the screen to be able to directly return to the main menu interface.

Game rules: When one line is filled with blocks, and the blocks at the top will move downwards until the end when the blocks are placed down. If you clear one line at the same time, there will be 100 credits, 300 credits for 2 lines, 700 credits for 3 lines, 1500 credits for 4 lines. When the credits exceed 10000, the speed will be faster.

Operation method

1. Start

Push the power switch to the “” direction for one second to start the games. Short press “PLAY” button to perform start/pause function switching.

 
## 2. How to play games

Press “+/-“ button to move the blocks left or right and “M” to adjust the directions of blocks.

3. Exit long press “M” button to quit the game and return to the game main interface.

## System setup

In the main menu interface, touch the “System” function on the screen to be able to access the “System” setup function. This function can offer function settings such as “Playing Setup”, “Radio Setup” “Display Setup” “Browse Setup”, “System Setup”, “Power Off” Setup”, “Default Setup”, “Firmware Setup”, etc.

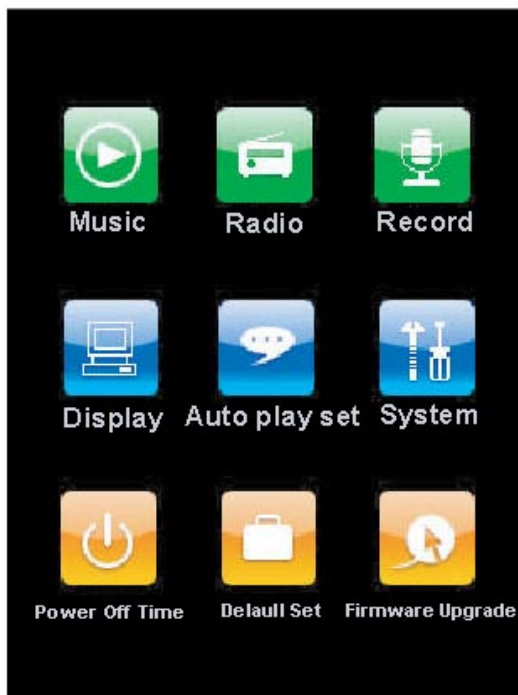

Touch the corresponding function setup icon on the screen to be able to access the corresponding function setup options.

In the “Setup” interface, long press “M” menu button to return to the main menu interface.

### 1. Playing setup

In this setup, there are 4 options: Repeat setup, Play setup, EQ selection and user EQ adjustment.

At this time touch the screen “▲” and “▼” the icon button to select the setup options. Short touch the selected zone on the screen to access Level 2 menu. In the 4 options, touch “▲” and “▼” icon on the screen to select the corresponding setup, short touch the selected zone on the screen to exit and save the settings. Touch “↺” icon to return to the upper level of setup menu.

#### 1) Repeating setup

In this menu, there is: single once, repeat single music, folder once, repeat folder,

repeat once, repeat all, trial listening for your option.

## 2) Playing setup

 
In this menu, there is: Sequence playing, random playing selection for your option.

## 3) EQ selection

In this menu, there is: normal, 3D, rock, popular, classical, bass, jazz, user define for your option.

## 4) User define EQ setup:

In this menu there are five frequencies, for each of which there are 7 levels for the user in adjustment.

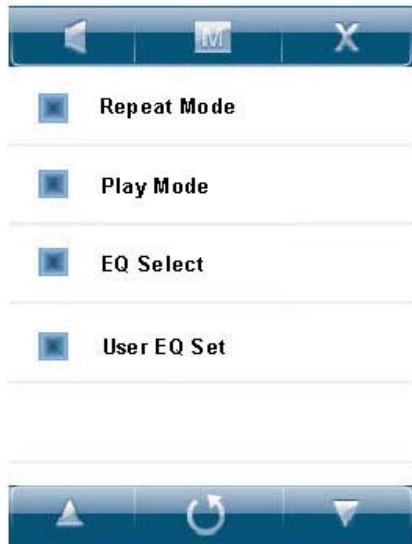

## 2. FM setup

In this setup, there are two options: stereo switch and FM area.

At this time touch “▲” and “▼” icons on the screen to select the set options. Then short press the selected zone on the screen to access :Level 2 menu. In the two options, touch “▲” and “▼” icons on the screen to select the corresponding setup. Short touch the selected zone to exit and save the settings. Touch the “🔄” icon button to return to the upper level of setup menu.

### 1) Stereo on/off

Under this menu, there are options such as on and off for your option.

### 2) FM areas

Under this menu: there are options such as China, Europe, Japan and USA for your option.



**3. Recording setup**

In this setting, there are two options: recording quality and recording volume.

At this time touch “▲” and “▼” buttons to select the setup options. Then short touch the selected zone on the screen to access Level 2 menu. In 3 options, touch “▲” and “▼” icon button on the screen to select the corresponding setup and then short touch the selected zone to confirm exiting and saving the setup. Touch “↻” icon button to return to the upper level of setup menu.

1) Recording quality

In this menu there is: high quality and common quality for your option.

2) Recording volume

In this menu, there are 5 options: +1, +2, +3, +4, +5. The higher the level is, the greater volume it records.



#### 4. Display setup

In this setup there are 3 modes options: backlighting time, brightness control and backlight display.

At this time touch “▲” and “▼” icon button to select the setup option. Then short touch the selected the zone on the screen to access Level 2 menu. In two options, touch “▲” and “▼” icon on the screen to select the corresponding setup. Short touch the selected zone on the screen to confirm exiting and saving the setup. Touch “↺” icon button to return to the upper level of the setup menu.

##### 1) Backlighting time

In this menu there are 6 options such as: 5 seconds, 10 seconds, 15 seconds, 20 seconds, 30 seconds and long time lighting for your option.

##### 2) Brightness control

In this menu, there are 5 options such as 1, 2, 3, 4 and 5. The higher the level is, the brighter it will be.

##### 3) Backlighting display mode

In this menu there are two options such as normal and power efficiency for your option.



#### 5. Browse setup

In this setup there are two options: text browse and picture browse.

At this time touch “▲” and “▼” icon button to select the setup option. Then short touch the selected the zone on the screen to access Level 2 menu. In two options, touch “▲” and “▼” icon on the screen to select the corresponding setup. Short touch the selected zone on the screen to confirm exiting and saving the setup. Touch “↺” icon button to return to the upper level of the setup menu.

##### 1) Text browse

In this menu, there are 5 options such as 10 seconds, 15 seconds, 20 seconds, 25 seconds and 30 seconds for your option.

## 2) Picture browse

In this menu, there are 5 options such as 1 seconds, 2 seconds, 3 seconds, 4 seconds and 5 seconds for your option.



## 6. System setup

In this setup there are 4 options such as language selection, product information, contact screen calibration and button noise.

At this time touch “▲” and “▼” icon button to select the setup option. Then short touch the selected the zone on the screen to access Level 2 menu. In four options, touch “▲” and “▼” icon on the screen to select the corresponding setup. Short touch the selected zone on the screen to confirm exiting and saving the setup. Touch “↻” icon button to return to the upper level of the setup menu.

### 1) Language selection

In this menu there are options of three languages: simplified Chinese, traditional Chinese and English for your option.

### 2) Product information

 
In this menu, there is the remaining capacity and system software version number. This information is only read information. Short touch the information display zone on the screen and exit.

### 3) Contact screen calibration

When you find that the contact screen position is not right, you can calibrate the contact buttons using this function.

### 4) Button noise

In this menu, there are two options such as On and Off for your option.

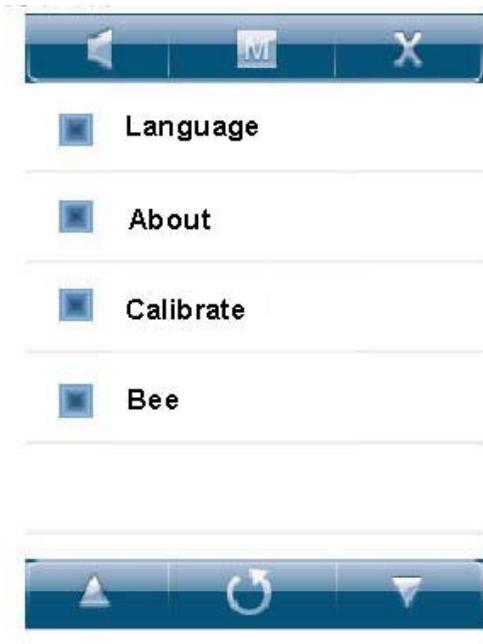

### 7. Power off settings

In this setup there are 6 options such as close, 10 minutes, 15 minutes, 30 minutes, 60 minutes, 120minutes for your option. At this time touch “▲ and ▼” icon button to select the setup option. Then short touch the selected the zone on the screen to access Level 2 menu. In 4 options, touch “▲ and ▼” icon on the screen to select the corresponding setup. Short touch the selected zone on the screen to confirm exiting and saving the setup. Touch “↺” icon button to return to the upper level of the setup menu.



### 8. Default settings

Touch “Default Setup” icon on the screen to access the “System recovery default” warning interface. Short touch “OK” button on the screen to restore to the factory default setup. Short touch “Cancel” on the contact screen to give up this recovery operation.



### 9. Firmware upgrade

Touch “Firmware Upgrade” icon on the screen to access the “Firmware Upgrade” warning interface. Connect the player to the computer USB interface to update the new firmware operation for the player. Short touch “Cancel” on the contact screen to give up this recovery operation.



### Question

### Answer

**Why wont my songs play on my MP4 player but will play on my PC?**

Check that your songs are in the correct format (MP3/WMA) in which the player will play.

**My player wont stay on and keeps turning off.**

Make sure you have given the player a full 6 hour charge and check your power off settings.

**My PC wont display the MP4 driver.**

Check by using other USB slots on your PC also try using a separate USB cable as cables can also be faulty.

**Why can't I view the videos I have put on?**

Again make sure that the video format is the correct format (ASF) for the player to read.

**Why can't I view the pictures I have put on?**

As the video make sure that the pictures are in the correct format.

**TECHNICAL SUPPORT LINE**

GENERAL SUPPORT CAN BE PROVIDED ON ALL  
PRODUCTS PURCHASED FROM US

(Unfortunately we cannot provide support on products or components that we do not supply)

**0161 975 0458**

Calls cost National Rate, Unless dialing from 0161 area

CALLERS MUST BE MINIMUM OF 18 YEARS OF AGE  
CALLERS MUST HAVE THE PERMISSION OF THE TELEPHONE SUBSCRIBER

ALL INFORMATION GIVEN IS CORRECT  
AT THE DATE OF PUBLICATION - 24/06/2008

HOURS OF BUSINESS  
MON – FRI 9am to 5pm (excludes bank holidays)

FASCIN8 LTD  
14 EMBANKMENT BUSINESS PARK  
VALE ROAD, HEATON MERSEY  
STOCKPORT CHESHIRE, SK4 3GN

**Alternatively visit our website for further support**  
**[www.fascin8.co.uk](http://www.fascin8.co.uk)**

# Fault Report Card

Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

Email \_\_\_\_\_

Daytime Tel No \_\_\_\_\_

Model Number (on the front page of the manual) \_\_\_\_\_

Fault Description \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_



SERVICE HELPLINE  
UK / N.IRELAND 0161 975 0458  
REP IRELAND 1800 882912  
WEB: [www.fascin8.co.uk](http://www.fascin8.co.uk)

FASCIN8 LTD  
14 EMBANKMENT BUSINESS PARK  
VALE ROAD, HEATON MERSEY  
STOCKPORT SK4 3GN