

iKASU™



8GB TOUCH SCREEN MP4 PLAYER

Table of Contents	1
Safety and Upkeep	2
Accessories	3
Functions	4
Instructions	4-14
Frequently Asked Questions	15
Technical Support	16
Fault Report Card	17

- Never attempt to fix the player yourself by opening and disassembling the unit as this will affect your guarantee.
- When cleaning the screen please use a soft dry cloth.
- Do not expose the player to direct sunlight for long periods of time.
- Do not expose the player to damp or moist conditions
- Do not place near sharp objects as the screen can be easily scratched.
- When the player is not in use turn the player off to preserve the battery charge.
- This player uses a Lithium battery. When the battery is low, please charge the battery using the adaptor supplied



Do not dispose of this product in your household waste. Contact your local authority for details of local recycling schemes



1 USB Connection Cable




1 Set of Headphones




1 Software Disk

- 3.0" 16:9 display Hi Definition True Color TFT Display, supports 400*240 resolution
- Supports MP3,WMA music formats
- Supports Micro SD/TF card up to 4GB
- Supports MPEG AVI RM, RMVB, 400*240 resolution.
- Supports High Definition JPEG,BMP and GIF format photo browse
- Built-in Microphone, Digital Voice Recorder
- Multiple Playback Mode: Once / Repeat once / Folder once/ Folder repeat / All once / All repeat/Intro/Order/Shuffle
- FM Radio
- Supports WIN2000,WIN XP,VISTA operating system
- USB 2.0 High Speed
- Supports E-Book Playback, and supports Chapter Mark
- Game
- Calendar
- Clock

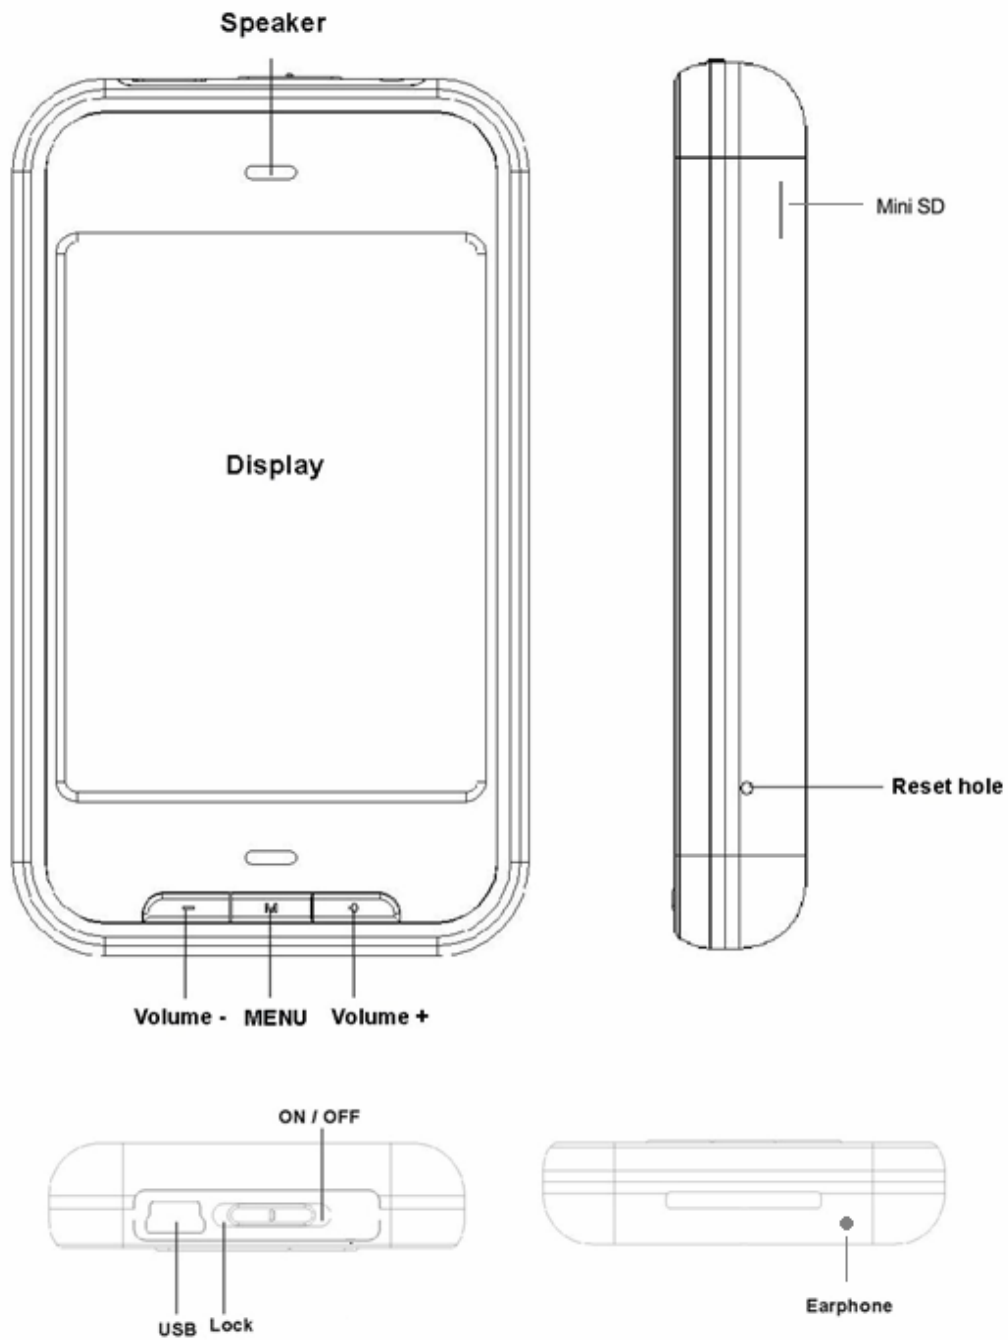Display

Main menu options

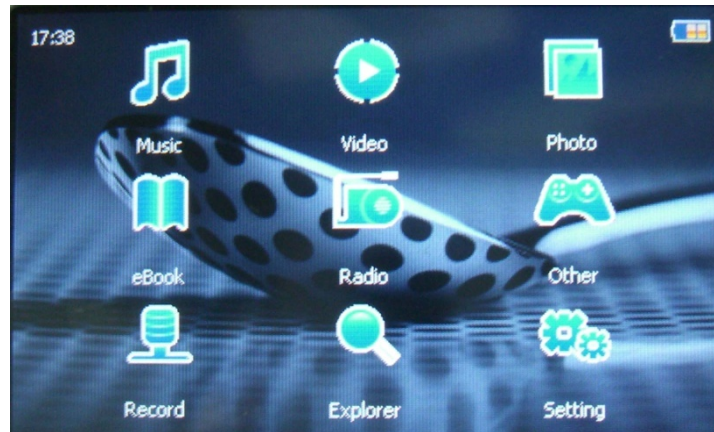

Simple Touch Display, simply use your finger tip to select a mode

Basic Operations

Switch MP4 Player On

Slide the power button to the right for 3 seconds. The player shows the Welcome Page and then enters into the Main Menu.

Switch MP4 Player Off

Slide the power button to the right for 3 seconds

Connecting to the computer and how to transfer

Attach the supplied USB cable to the MP4 and the computer, The computer will automatically recognize the device as a removable disk. This disk can be found in My Computer. This is where you store your music, movies and Data

Charging the Unit

To charge the unit via the USB cable, simply keep the cable plugged into the computer. On the bottom right of your computer screen on the taskbar you will see the “safely remove hardware” Icon. Left Click the icon and you will see the removable storage (MP4) and then left click again. This will remove the MP4 as a removable disk connection and now will charge the player.

Full charge is about 6 hours with approximately 8 hours MP3 playback and 2 hours video playback.

If you would like to purchase a USB Mains Charger please contact 0161 975 0458 or visit www.ikasuv.com

Removable Storage

You also have the option to increase the memory by inserting a Micro SD/TF card. This MP4 player can support up to 4GB

Inserting: Place the MINI SD/TF card face down (side without words) (with the direction of the display screen as the face), and slightly push the card into the socket of the card, i.e. connecting the unit. Under this state, you can play the content on the card.

Removing: Slightly push the MINI SD/TF Card, and it will spring back, you can then take it out.

Caution: Please perform inserting and pulling operation when power is off! Otherwise, it will lead to the loss or damage to the files within the unit.

Volume Control

While in Music, FM radio and video, etc, you can perform volume control using + or – button at the lower part of the screen. + Button to increase volume and – button to decrease the volume. Hold Button + or Button – to continuously increase or decrease volume.

Main Interface

This MP4 provides a contact screen operation system, which allows you to perform even more visually. In the main menu interface, click on the corresponding function icons on the screen to access the selected function mode.

After accessing the corresponding function mode, gently touch the contact screen. You should now see a menu window. Press any of the available options to begin use.

Music mode


In the main menu interface, click on “Music” function icon on the contact screen to access the “Music” function interface.

In order to place music on your MP4 player simply copy and paste your MP3's into the removable device which should appear when you plug your MP4 player in to the computer.

If you wish to copy your CD music onto your MP4 player then simply put your music CD into your PC and open up windows media player (if you do not have this then you can download the software from <http://www.microsoft.com/windows/windowsmedia>) using the RIP facility, RIP the songs from your CD to the MP3 player. If you unsure on how to do this either use the windows media help or alternatively go to www.ikasu.tv where you can watch the video tutorial which will give you step by step instructions.

Selecting a song

Once you are in the music mode you will have an option to select from the following
All Music, Artist, Album, Genre, My Favorites, Record

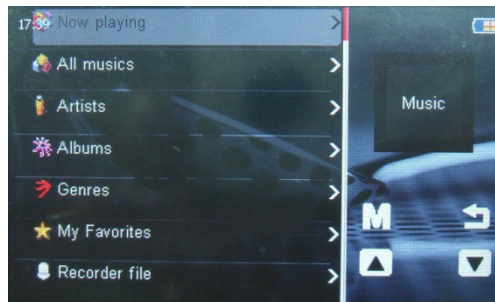

Simply select the mode you wish and then press again on the song you wish to listen to, the song will now start to play.

Music play controls



fast rewind or fast forward,



Previous or Next song



Pause



Function settings such as Repeat mode, play mode etc (see audio play settings below for available options)



Return to previous mode.



Enter main menu.



Hide toolbar.

Audio Play Settings

Repeat Settings

Once / Repeat one / All once / All repeat/Intro.

Lyrics Display

The player supports “LRC” lyrics. Simultaneous lyrics display is then available. When the lyrics file with the same name is available, the player will enter directly into the lyrics display page when the song is played//.

How to use Lyrics

Ensure the Lyrics file has the same name as the song file. For example:

Song file “eagleeye.mp3” Lyrics file should be named “eagleeye.lrc”

Video Mode

Installing the video software

Place the CD included with your MP4 player in the computer compact disk drive. In the Windows Operation System, it will automatically pop up with the installation interface. Click on “Video Convert Tool” to start installing all the software for the MP4 player. Follow the installation prompt to complete the installation process.

Producing video files


The MP4 Player supports AVI and RMVB. AVI files need to be converted using the software provided, where as RMVB files can be copied over to the MP4 player directly without the need of converting

AVI is the most popular video format for the current portable media player as well as one of the most popular formats on the network. The video culture coded in the XVID/DIVX format has higher video quality, and moreover, the files are smaller. In the viewing quality, the video file effect coded in the XVID/DIVX is not inferior to the effect of coded in the WMV or RMVB format.

How to convert an AVI File

Operation steps

1. Click and run the program of “AV Converter.exe”, shown as follows:

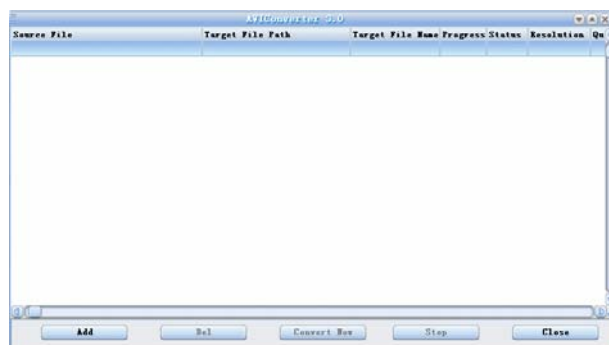

- click "add ", and you will see below dialog box:





- Locate the source file
- Select Target File Path (where you would like the converted movie to be saved)
- Select Target File Name
- You adjust Setting, Aspect Ration
- Press Save
- Select Convert Now
- The successfully converted AVI video file will now be stored on the computer.



Playing a Video

Make sure you have copied the movie on to the MP4 player, same steps apply for placing the mp4 as for placing an MP3 (see section Connecting to the computer and how to transfer)

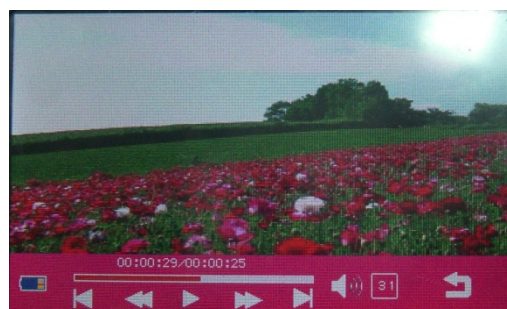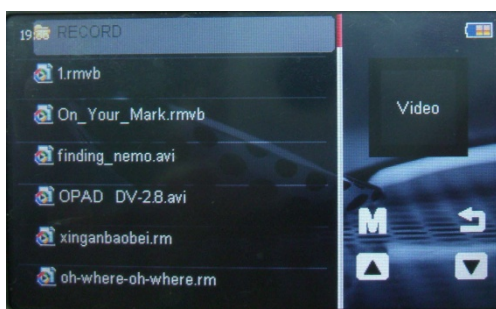Once you have placed a video onto you player you can now enter the main menu interface, click on “Video” function icon on the contact screen to access the “Video” function interface. You will now see your videos displayed in a list. Simply touch the one you wish to view.





Video play controls


  Fast rewind or Fast forward

  Previous or Next song

 Pause

 Function settings such as Repeat mode, play mode etc (see audio play settings below for available options)

 Return to previous mode.

 Enter main menu.




 Hide toolbar.

FM Radio Mode



In the Main Menu select the FM option


1. Manual searching

On the screen display push  and then select the manual searching. Short push   button to search for broadcasting stations up / down.

2. Automatic searching

For Automatic search simply select the auto search function instead of the manual.

3. Saving your stations:

Short push  button and select save channel. Select the position you wish to save this channel to and then short push “M” button to save.

4. Select a preset station:

Short push button to choose the station preset, push / to switch from your saved stations.

5. Delete a station:



In order to delete a saved station press , now select delete channel and you will see your current saved channels. From here simply select the channel you wish to delete and select YES to confirm.

6. FM Recording:

When you are listening to a radio channel simply press the button so start recording. In the screen of ready recording, short push button to access the quality and volume. Short push to save the recorded document.

7. If you want to listen to your recordings then access the Music function and select record.

Viewing pictures

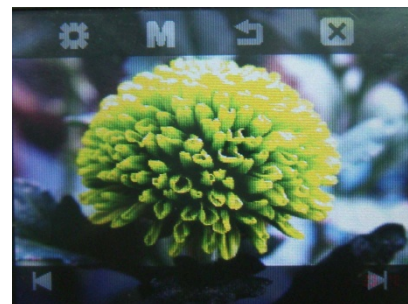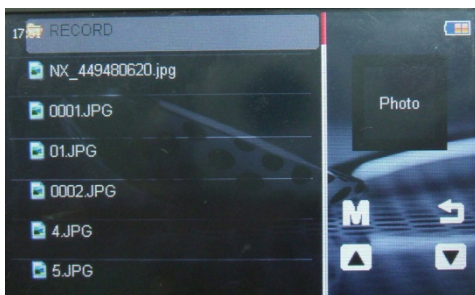

In order to place your pictures on the player simply copy and paste or drag your existing JPEG, GIF or BMP files onto the player's removable disk located in MY COMPUTER when your player is plugged into the PC.

Once your pictures are on the player switch the player on and select Photo, you will now see your pictures displayed on the player, click on one to begin viewing. To skip through the available pictures press either the left or right arrows on the screen.

While viewing your pictures you also have some options to rotate or zoom in on the picture. In order to access these simply press the button.

E-Book

To enter the EBook function on the Main Menu. First select Ebook, then Push / to select the file to read. Then short push the file to start reading. During reading, use / button to page up and down.

Voice Recording

1. Enter Recording Mode from the Main Menu, Short push to start the recording, push it again to stop Recording. Short push to save the recorded document. Push or button to return to Main menu
2. Recording quality & Recording Volume:
Push button to enter the submenu, select Recording quality /Recording Volume optional. select the relevant option by button .Push or button to return to Main menu.

Settings Mode

Push “Setting” button to select your Settings from the Main Menu. Short push MENU button to enter the setting page and push button to select the item you want to set. Push M button to enter the Main screen display settings:

There are four options: Backlight Time, Brightness Adjustment, Backlight display mode, Conceal status. Short push button to select the item you want to set. After that, short push M button to set it. Push button to return to Video Playback mode.

- Backlight Time: Six options including 5S, 10S, 15S, 20S, 30S, or Always On

- Brightness Adjustment: Five options including 1, 2, 3, 4, 5.

The higher the grade is, the lower the brightness is.

- Backlight display mode: Two options including Normal and Energy Saving.

- Conceal status: conceal and display (conceal the shows of battery and time)

1. System Settings:

There are three optional buttons: Firmware Upgrading, Restore System Defaults, Keyboard locking-time

- Firmware Upgrading: A dialogue box is prompted under this menu. It reminds you firmware upgrading is to start. It shall exit when there is no firmware upgrading available.

- Restore System Defaults: A dialogue box is prompted under this menu to have your double confirmation on whether you want to restore System Defaults. Please select Yes or No.

- Keyboard locking-time: Six options including close, 3 minute, 5 minute, 10 minute, 15 minute, 20 minute no-lock,

2. Desktop Settings:

Eight options including close, Desktop 1, Desktop 2, Desktop 3, Desktop 4, Desktop 5, Desktop 7, Desktop 8. Short push button select the item you want to set. Then enter the Setting screen, Short push to enter Video Playback mode,

 
3. Language Options:

20 languages options including close: simplified Chinese, traditional Chinese, English, Korean, Japanese, French, German, Spanish, Italian, Portugal, Russian, etc

4. System information:

It displays manufacture, product name, major version ID, hardware ID, local memory size, card memory size.

5. Touch screen calibration:



Press the cross as it shows on the screen to calibrate, when you are done press the

Using a Micro SD card

1. Insert a SD card

Insert gently into the slot of the player.

2. Connect to a PC.

When this player is connected to a PC, you will find two Removable disks: G disk and H disk, G will be the storage space of your card.

Question

Why won't my songs play on my MP4 player but will play on my PC?

Answer

Check that your songs are in the correct format (MP4/WMA) in which the player will play.

My player won't stay on and keeps turning off.

Make sure you have given the player a full 6 hour charge and check your power off settings.

My PC won't display the MP4 driver.

Check by using other USB slots on your PC also try using a separate USB cable as cables can also be faulty.

Why can't I view the videos I have put on?

Again make sure that the video format is the correct format (AVI) for the player to read and have been put through the software supplied.

Why can't I view the pictures I have put on?

Make sure that the pictures are in the correct format which is JPEG.

TECHNICAL SUPPORT LINE

GENERAL SUPPORT CAN BE PROVIDED ON ALL
PRODUCTS PURCHASED FROM US

(Unfortunately we cannot provide support on products or components that we do not supply)

0161 975 0458

Calls cost National Rate, Unless dialing from 0161 area

CALLERS MUST BE MINIMUM OF 18 YEARS OF AGE
CALLERS MUST HAVE THE PERMISSION OF THE TELEPHONE SUBSCRIBER

ALL INFORMATION GIVEN IS CORRECT
AT THE DATE OF PUBLICATION - 23/06/2008

HOURS OF BUSINESS
MON – FRI 9am to 5pm (excludes bank holidays)

FASCIN8 LTD
14 EMBANKMENT BUSINESS PARK
VALE ROAD, HEATON MERSEY
STOCKPORT CHESHIRE, SK4 3GN

Alternatively visit our website for further support
www.fascin8.co.uk

Fault Report Card

Name _____

Address _____

Email _____

Daytime Tel No _____

Model Number (on the front page of the manual) _____

Fault Description _____



SERVICE HELPLINE
UK / N.IRELAND 0161 975 0458
REP IRELAND 1800 882912
WEB: www.fascin8.co.uk

FASCIN8 LTD
14 EMBANKMENT BUSINESS PARK
VALE ROAD, HEATON MERSEY
STOCKPORT SK4 3GN