 



Setting up your 11" TV/DVB DV068528



What's in the box?

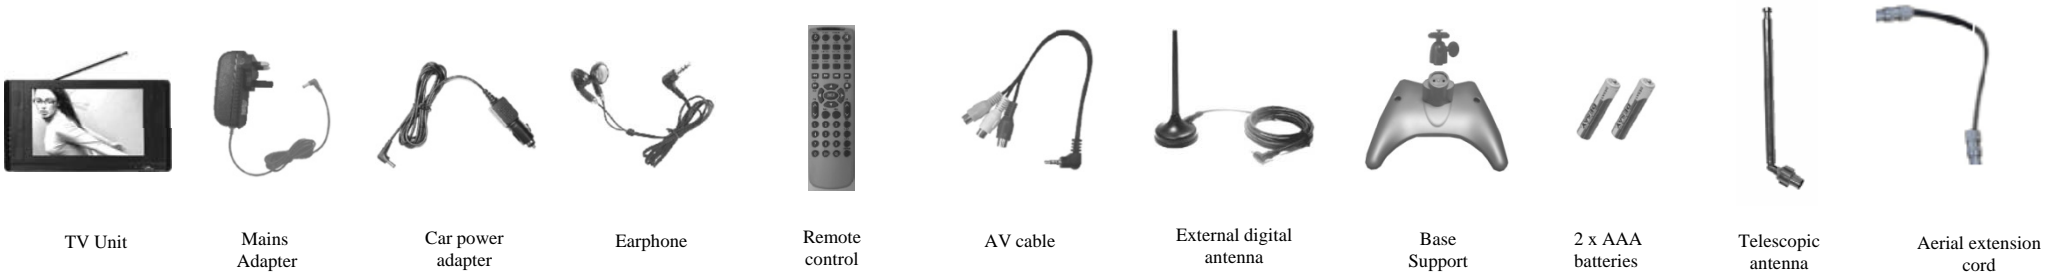

 Display and Functions

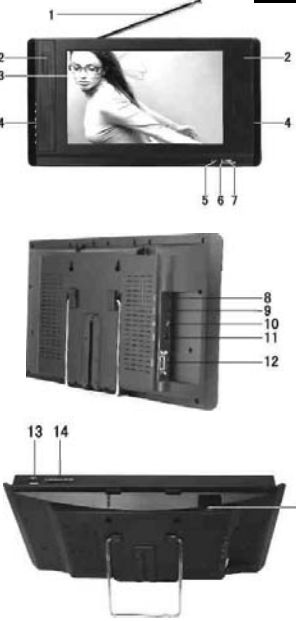


1. Telescopic antenna
2. Speaker
3. TFT-LCD screen
4. control panel
5. Remote-control receive window
6. Power indicator: Red: Standby Green: On
7. POWER
8. AV Input
9. AV Output
10. Headset jack
11. 12V DC Input
12. VGA in jack
13. USB connector
14. Three in one lock
15. Antenna input Jack

2

Attach your domestic antenna

When first setting up your TV, we recommend that you connect a static domestic antenna such as the one you have in your living room for tuning in your TV channels. Connect your domestic antenna into the aerial convertor cord provided then other end of the cord into the **antenna** socket on the top of your Mini TV.

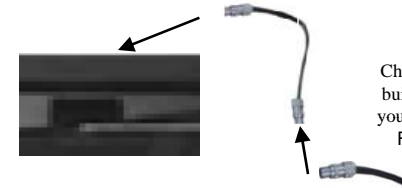


Once you have tuned in your Channels you can then revert to using the built-in telescopic antenna provided with your Mini TV, providing that your current Freeview signal is strong enough.

3

Power-up and turn on your TV


1

Connect the power cable to the **DC+12V** socket on the back of your TV:

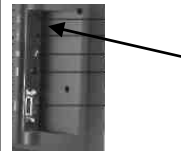


2

Switch the power button On the side of your Mini TV (just above the power cable) to the **ON** position.

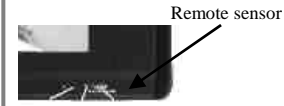

3

Insert 2 AAA batteries (provided) into your Remote control:

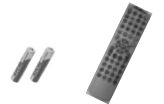

Take care to ensure the correct polarity when fitting the batteries

First time installation DVB

When you first power-up your TV in DVB mode, you are asked whether you want to start the First Time Installation Wizard



The First Time Installation Wizard guides you, Step-by-step, through the process of configuring your TV and tuning in the channels.

When following the wizard, use the arrow buttons



to highlight each selection you require, and press The OK button to confirm that selection.

1

Confirm that you want to run the First Time Installation Wizard. To do this, highlight the word **YES** on screen and then press **OK** on your remote control.

The screen display changes to show some general settings for your Mini TV:

Country Germany
Language English
Time Zone GMT + 00:00

BACK NEXT

2

Check the information displayed and make sure it is correct. Change any settings if necessary by pressing **▼** on your remote control to move down through the items and use **◀** and **▶** to change the current selection.

When the information is correct, highlight **NEXT** And press **OK**.

You are then taken to the screen you use to tune In your channels.

3

Run the Auto Search feature by highlighting **YES** and pressing **OK**.

Your TV now searches for available channels:

Automatic Search
Progress 44%
Channel No 33
Frequency 570 MHz

TV List : 004
BBC NEWS 24
CBBC Channel
BBC TWO
BBC ONE

Radio List : 000

When the search process is complete the following message is displayed:

Data saving – please wait

DO NOT turn off your TV while this message is displayed

When the save process is complete, your Mini TV Shows the first TV channel in your list.

Using a USB or CARD

You can use the TV for reading USB or MMC/SD cards.

In order to use either of these devices simply plug the device into the corresponding slot located at the top of the TV.

Now press the SOURCE button on the remote control until you see the following screen displayed



Depending on what content you have on your USB/CARD will effect what menu option you can select. The three options you have are

PHOTO:- As long as your pictures are in JPEG format they will display on the screen one at a time, use the **▶** button to scroll through the pictures you have on the device.

MUSIC:- As long as your songs are in WMA or MP3 format they will display on the right hand side of the screen, simply move to the desired song and press enter to begin playing.

MOVIES:- As long as your movies are in AVI format they will display on the right hand side of the screen, simply move to the desired movie and press enter to begin playing.

For more controls for each option please see the manual section on USB/MMC pages 18 and 19

Signal strength issues

If you are receiving a message 'Warning: No Signal' on your DVD player, this is because the signal strength and quality are not strong enough. Try experimenting with different antenna positions to get the best signal.

If you cannot obtain a satisfactory signal you may be able to improve this by purchasing an antenna signal Booster or a more powerful portable aerial which you can obtain at your local electrical retailer..

Alternatively you can check out the freeview website www.freeview.co.uk for more information on picking up freeview.