

Model Number : DV090092

What's in the box?

Boombox Unit and remote control



AV Cable



Power plug




Portable Antenna



1

Connecting your power source and charging

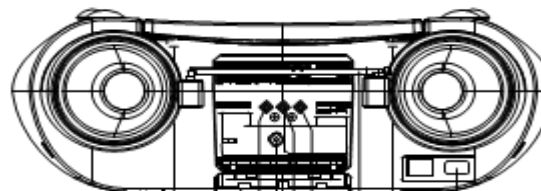


Connect the supplied power plug to the power in located at the back of the boom box as shown here, then the other end into your wall plug.

Power in port

2

Function switch

 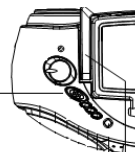


In order to begin using the boombox you must first select a mode. Locate the Function button on the top of the boombox and switch to the desired mode

3

Attaching Your Domestic or portable Antenna

1 When first setting up your TV, we recommend that you connect your domestic antenna such as the one you have in your living room for tuning in your TV channels. Connect your domestic antenna into the aerial socket on the back of your Boombox



2

Once you have tuned in your channels you can then revert to using a portable digital aerial. If desired, **providing that your current Freeview Signal is strong enough.**



4

Playing a DVD

Simply change the mode to DVD by switching the function button into DVB/DVD/USB/CARD. Press the open/close button and place your DVD onto the disc tray then press open/close again. The DVD will now automatically start to load and bring up the DVD's main menu, use the remote to navigate through the DVD's menu.

First Time Freeview Setup

NOTE : Before you attempt to scan for channels we recommend that you use a main house aerial to pick up the strongest possible signal. Once you have done this you can try using your portable aerial provided.

- 1 - Power on the player and slide the FUNCTION switch on the main unit to DVB/DVD/USB/CARD position, then press DVD/DVB button to select DVB play mode.
- 2- A dialogue of first time installation shows on the screen, select the YES option to perform the first time installation, then select the options as mentioned in the dialogue to finish the first time installation, select NO option to exit this interface any time.
- 3 – Use the up and down arrows to change channels.
(for full instructions on DVB usage please refer to the manual)

USB/SD/MMC Operation

1. First slide the FUNCTION switch to DVB/DVD/USB/CARD position.
2. Plug a USB/SD/MMC in with either with music (MP3) video files (MPEG4 only) into the corresponding port after about 20 seconds the TV screen will show all its folders.
3. Use the navigation buttons to move between folders and the OK button to select.
4. Once you have picked a folder select a song or movie and press OK to activate.

Signal Strength Issues

If you are receiving a message “warning no signal” this is because the signal strength and quality is not strong enough. Try experimenting with different antenna positions to get the best signal

If you cannot obtain satisfactory signal you may be able to improve this by purchasing an antenna signal Booster or a more powerful portable aerial which you can obtain at your local electrical retailer

Alternatively you can check out the Freeview website www.freeview.co.uk.
For more information on picking up Freeview

Radio Interface

1. Slide the FUNCTION switch to the RADIO position, the POWER Indicator will light up.
2. Select the desired band with the BAND switch whether AM/FM/FM ST
3. Tune to the desired station by rotating the TUNING control
(Move the control back and forth until you get the strongest clearest sound).
4. The built-in AM antenna and external FM TELESCOPIC ANTENNA are directional.
 - When receiving an FM broadcast, fully extend the TELESCOPIC ANTENNA and position for the best reception.
 - For AM broadcasts, rotate the whole set until the best reception is heard.
5. Adjust the volume level to a comfortable listening level.
6. To turn off the radio, slide the FUNCTION switch to OFF position.

Picture CD playback

1. Insert a picture CD into the CD tray.
2. Press repeat button during play to change the play modes. During playback, press STOP to enter preview mode.
3. Press NEXT button to skip to the next picture or PREV button to the previous picture.
(If no key is pressed for a few seconds, it will skip to next picture automatically, press play to resume normal play.)
4. Press RIGHT and LEFT navigation buttons to rotate the picture Clockwise and anti-clockwise respectively.
5. Press UP navigation button to flip the picture vertically. Press DOWN navigation button to flip the picture horizontally.
6. Press ZOOM button continuously, the picture zooms in by 2, 3, 4 times or zooms out by 1/2, 1/3, 1/4 the original size. Press this button once more when the picture getting 1/4 size to return to the normal play. If the picture is enlarged, you may use the navigation buttons to view blocked parts of the picture.