

IKASU™

PORTABLE DVD PLAYER WITH SWIVEL SCREEN



INSTRUCTION MANUAL

AFTER SALES SUPPORT

HELPIE NO 0161 975 0458

WEB SUPPORT www.ikasu.tv

MODEL NUMBER: DV090132 - DV090133

Contents

- 2 – General information and safety instructions
- 4 – Accessories
- 5 – Getting started
- 6 – Remote control display
- 7 – Features and functions
- 8 – DVD Setup and Menu Options
- 13 – Playing Back a Kodak Picture CD/JPEG/AUDIO
- 14 – Scanning in Analogue Television
- 15 – Scanning in DVB Freeview Channels
- 16 – DVB Setup and Menu
- 22 – DVB Basic Operation
- 23 – DVB Basic Operation
- 23 – USB/SD Operation
- 23 – AV Connection
- 24 – Rotation Screen
- 25 – Trouble Shooting
- 26 – Technical Specifications
- 27 – Waste Electrical and Electronic Equipment
- 28 – Technical Support

Helpline No. 0161 975 0458




Web Support www.ikasv.tv

Model Number: DV090132 - DV090133

I

General Information and Safety Instructions

WARNING

| | | |
|--|---|--|
|  <p>The lightning flash with arrowhead symbol, with an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p> | <p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p> |  <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.</p> |
| <p style="text-align: center;">LASER SAFETY</p> <p>This unit uses a laser. Only a qualified service person should remove the cover or attempt to service this device to avoid possible eye injury. Caution: USE OF CONTROLS OR ADJUSTMENT OF PERFORMANCE OF PROCEDURE OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.</p> | <p style="text-align: center;">DANGER:</p>  <p>INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO LASER BEAM.</p> | |

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

2

General Information and Safety Instructions

Please read through the following safety guidelines before use.

- **Ventilation**- Slots and openings in the case are provided for ventilation to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered.
- **Water and Moisture**- do not use this product near water for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool etc.
- **Cleaning**- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- **Lightning**-For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power line surges.
- **Servicing**-Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Battery Handling and Usage

- This remote control uses 1 x CR2025 Lithium battery
- Never throw batteries into a fire or expose to heat sources.
- If battery is swallowed, please seek immediate medical attention



Do not dispose of this product in your household waste. Contact your local authority for details of local recycling schemes



Batteries should not be disposed of in household waste. Batteries should be taken to appropriate disposal points or alternatively contact your local authority for details on disposal schemes

Helpline No. 0161 975 0458

Web Support www.ikasv.tv

Model Number: DV090132 - DV090133

Accessories

- AV Cable
- User Manual
- Remote Control with battery
- Car charger
- Mini digital Aerial
- 1 Set of earphones
- Mains Charger


Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

Getting Started

Front and rear display

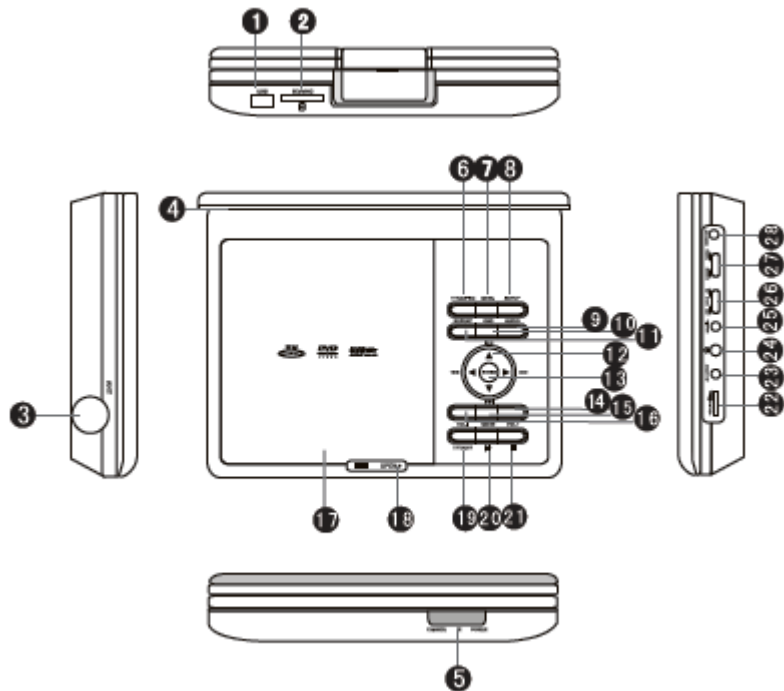

- | | |
|---------------------|---------------------|
| 1. USB PORT | 16. VOL- |
| 2. SD/MMC CARD PORT | 17. CD DOOR |
| 3. TV ANT PORT | 18. OPEN |
| 4. LCD | 19. TFT/OFF |
| 5. CHARGE IR POWER | 20. PLAY/PAUSE |
| 6. TITLE/PBC | 21. STOP |
| 7. MENU | 22. VOLUME ADJUSTER |
| 8. SETUP | 23. AV IN/OUT |
| 9. AUDIO | 24. EARPHONE |
| 10. OSD | 25. COAXIAL |
| 11. REPEAT | 26. HOLD ON/OFF |
| 12. DIRECTION KEYS | 27. POWER ON/OFF |
| 13. ENTER | 28. DC IN |
| 14. VOL+ | |
| 15. MODE | |

 
Helpline No. 0161 975 0458

Web Support www.ikasutv.com

Model Number: DVO901B2 - DVO901B3

Remote Control

1. MODE
2. MENU
3. ANGLE
4. MUTE
5. DIGITAL KEYS
6. AUDIO
7. SUBTITLE
8. TFT MODE
9. GOTO
10. ZOOM
11. REPEAT
12. SETUP
13. PREVIOUS
14. PLAY/PAUSE
15. STOP
16. FAST REWIND
17. ENTER
18. FAST FORWARD
19. TITLE
20. EXIT
21. NEXT
22. GUIDE
23. TELE TEXT
24. TV/MUSIC
25. FAV
26. MEMORY
27. PRLIST
28. EPG
29. DISPLAY
30. PG.DOWN
31. PG.UP

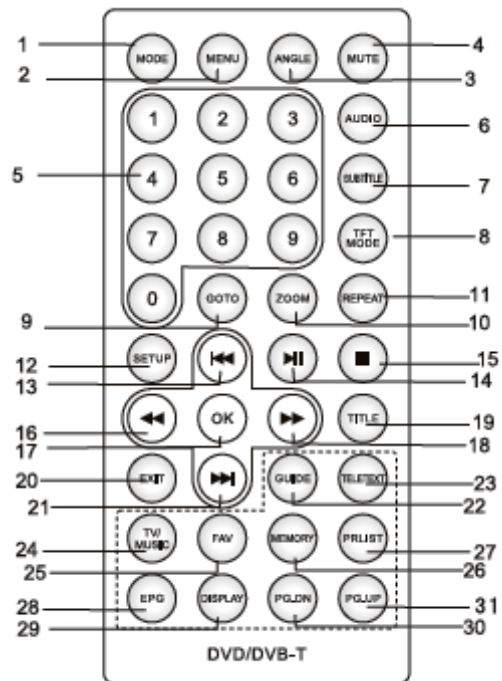

Helpline No. 0161 975 0458

Web Support www.ikasv.tv

Model Number: DV090132 - DV090133

Features and Functions

- Compatible with DVD, DIVX, MPEG4, VCD, SVCD, DVCD, CD, CD-R/RW, JPEG.
- Anti Shock
- DVB Freeview pick up
- Supports RMVB video format (optional)
- PAL/NTSC
- Parental lock function
- Fast or slow motion

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV0901B2 - DV0901B3

DVD Setup and Menu Options

Playing a DVD

In order to play a DVD first open up the DVD lid by sliding the open switch to the right. Remove the safety card inside before placing a DVD into the player. Now close the lid and insert the 12v mains adaptor supplied with the unit and switch the charge/power button on the side of the unit to "power".

Note: If you wish to charge the player first and not run of the mains then leave the plug in and switch to "charge" located on the side of the player, leave in this position for at least 6 hours to give it a full charge.

Once you have switched the player on you will need to first make sure your in the DVD mode. To do this press the "mode" button and then using the arrow keys move to "DVD" and press "ok". The DVD will now load automatically and the main menu will be displayed, use the arrow keys to move through the options of the selected DVD and press "ok" to confirm the selection.

You can playback a disc at 2x, 4x, 8x, 16x or 32x the normal speed for fast forward or rewind.



Press the REV or FWD button during playback.

The playback speed changes, each time you press the REV or FW D button (as shown above).

You can locate a specific title using the title menu function, if a DVD video disc contains a title menu.

1. Press the TITLE button

The title menu will be displayed

2. Press the cursor keys to select the title you want.

You can also directly locate a specific title by pressing its assigned number with the numerical keys (this may only function on certain discs)

3. Press the ENTER button

 
This will cause the DVD video layer to start playback from chapter 1 of the title selected.

Note: This function only works on DVD's with title menu encoded into it

DVD Setup and Menu Options

Repeat function

During normal playback, press the REPEAT button. The repeat mode changes, each time you press the REPEAT button (as shown below).

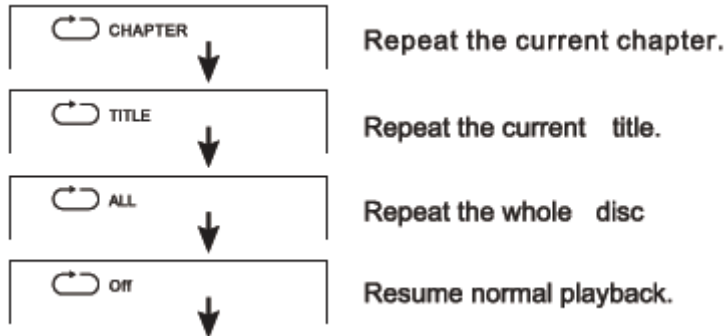



This DVD video player allows you to zoom into a picture as well as the zoom point.

Zoom


Press ZOOM during normal playback or slow-motion.

The player magnifies in the center of the picture.

Press     .keys during zoom mode to pan



Press the ZOOM button repeatedly to cycle through the available magnification levels (as shown below).

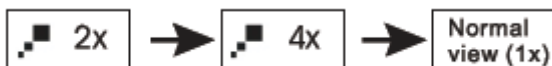

Helpline No. 0161 975 0458

Web Support www.ikasuv.com

Model Number: DV090132 - DV090133


DVD Setup and Menu Options

Subtitles

While playing a DVD you can switch off/on the subtitles by pressing the subtitle button on the remote. Note that not all DVD's have subtitles encoded into them.

Camera Angle


THIS DVD VIDEO PLAYER ALLOWS YOU TO SELECT FROM SEVERAL DIFFERENT ANGLES (disc dependent).

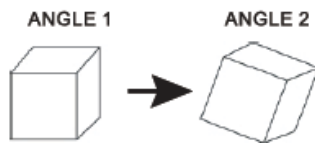


Selecting the camera angle

If the DVD video disc was recorded with multiple angles, you have the option to change the camera angle for the scene you are watching.

Press the ANGLE button repeatedly during playback of a scene recorded with multiple angles (when available).

- You may only press the ANGLE button when the angle icon  is flashing on the DVD display.
- Each time you press the ANGLE button, the angle will change.

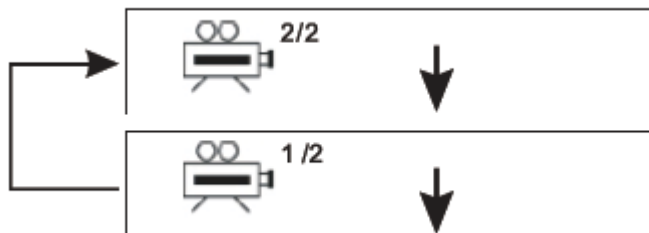

- The angle function will not work on DVD video discs that do not contain scenes recorded with multiple angles.

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV0901B2 - DV0901B3

10

DVD Setup and Menu Options

When you are in the DVD mode you can access the DVD setup options, however please note that you cannot have a DVD in the unit in order to access all the options.



The following shows the initial image of the DVD Setup page



Language Menu

Select the menu option by pressing the ok button, then enter into the submenu to preset the default Menu Language. If the DVD film does not support that language then it will not be used.

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV0901B2 - DV0901B3

II

DVD Setup and Menu Options

Audio

Select the menu option by pressing the ok button, then enter into the submenu to preset the default Menu Language. If the DVD film does not support that language then it will not be used.



Subtitle

Select the menu option by pressing the ok button, then enter into the submenu to preset the default subtitle Menu Language. If the DVD film does not support that language then it will not be used.

External Subtitle

Select the menu option by pressing the ok button, then enter into the submenu to preset the default subtitle Menu Language. If the DVD film does not support that language then it will not be used.

Parental Ctrl

Press to select Parental Ctrl and use the arrows to move to the desired setting from the lowest level (1 kid) to the highest level (8 Adult). To cancel this function, select off option.

Screen Saver

Set to on for a screensaver to appear on the screen hen no action has been made on the player.

Angle Mark

Switch on for Angle encoded DVD's or off.

Playing Back a Kodak Picture CD/JPEG/AUDIO

1. Load your Kodak Picture CD or JPEG disc.

When a KODAK Picture CD is loaded, playback will start automatically.

2. Select a folder or a picture/track contained on the JPEG, a menu will appear on the screen. Press UP or DOWN to select a folder, and press ENTER to view folder contents.

3. Select playback mode.

You can use the button REPEAT to select one playback mode, repeat one (continually repeat the current picture/track) or all (repeat all pictures).

Press UP or DOWN to choose the picture or song you want to enjoy.

4. Start playback

Press PLAY to playback the pictures or songs.

5. Use the STOP or MENU button to view the contents

When JPEG CD is played, the STOP or MENU is used to display JPEG folders and the corresponding files.

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

 
B

Scanning in Analogue Television

ATV: First press the MODE button on either the DVD or remote control. Move the up/down button to select "ATV" and press "ok" to select.

Auto Search

In order to now perform a search for your analogue press the "MENU" button twice to bring up the following menu options. Use the arrow buttons to move to Auto-Search and then press the arrow pointing right to start the scan. The DVD will now find the strongest signals and store them on your player.

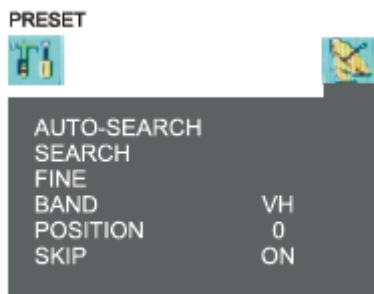

BAND

If you find that your not picking up any channels you could also try changing the "band" by pressing left and right and then try Auto Searching again.

FINE

This options allows you to manual skip through the frequency range, press left or right to skip through the available range.

SKIP

If you have skip set to on the scan will ignore the weaker channels and will not store them.

POSITION

This is an indication of the channel position scanned in.

Scanning in DVB Freeview Channels

Before you can start a scan you need to first make sure you're in the DVB mode. To do this press the "mode" button and then use the arrow keys to move to "DVB" and press ok.


Once you have entered the DVB mode, the screen will display First Time Installation. It will guide you through the process. Move the tab to "YES" and press ok to begin.



Now input your regional information, including the country, OSD language and Time zone and move down to Next, the player will now automatically scan channels through the information provided.



If prompted do you want to erase the previous channels select "Yes", the system will now automatically scan for the channels available in your freeview catchment area.

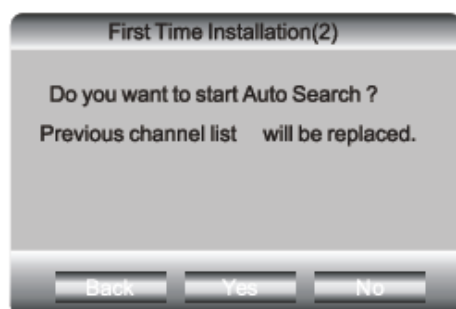

Helpline No. 0161 975 0458

Web Support www.ikasutv.com

Model Number: DV090132 - DV090133

15


DVB Setup and Menu

In the DVB mode press the SETUP button to bring up the main menu. Now move to "DVB menu" and press ok to enter.



TV Program


This option allows you to edit the program list and set programs into three types, including Favorite program, Move the program and Delete. All programs available to watch will be on the list. Press the setup button to save and exit.

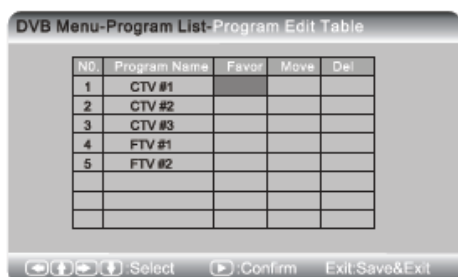

Favor


You can edit more than one program as a favorite channel using this option. Use the arrows to move to selected channel and press the ok button to select, once a program is chosen, a mark will appear in the favor box. To remove the cursor from the favor list, press the ok button in the favor box of that program. Press the setup button to save and exit.

DVB Setup and Menu

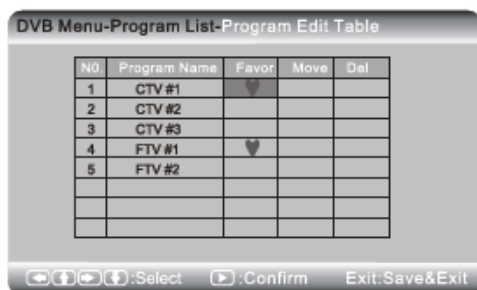


Move

This option allows you to move the selected channel from one position to another, in order to do this first move to the channel you want to move and press ok, two arrows will appear in the "move" box. Now press up or down to move to the position where you would like the channel to be moved to and press ok to confirm the move. Press the setup button to save and exit.

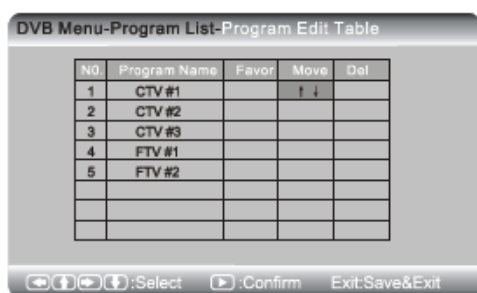

Del

 This allows you to delete a single or all of the channels currently scanned in. To delete one program, Press the ok button on the Delete box of the selected channel (an "X" will appear in the "Del" box). Press the setup button to save and exit.

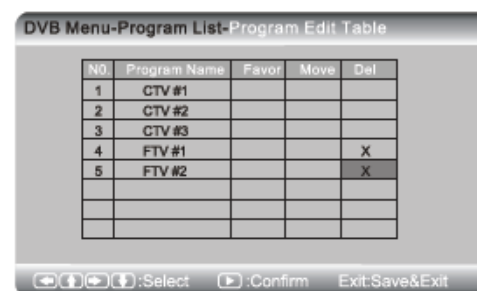

Notes: User can use Program Search option to recover the deleted programs.

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

DVB Setup and Menu

Music Program

This option is identical to the TV program sort on page 15.

Sort

You can sort channels on the list according to channel name, service ID or channel number. Simply move to the selected option and press ok. Press setup to save and exit.



Program Search

Automatic Search

If you want to do another scan for any reason you can select Automatic Scan. Press ok to select and again on whether you want to perform a scan. If it asks that you want to erase your current stations then again select yes.



Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

18


DVB Setup and Menu

Manual Search

To find particular channels, select this option searching manually.

User must provide the numbers of target channels to enable the system to search.

The channels from manual search will be added to the list, but the unit will not return directly to the playing status at this moment.

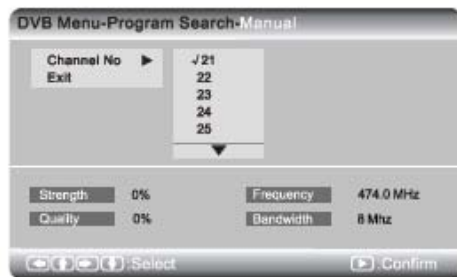

Parental control



Channel Lock

Channel lock allows you to set the DVD into the parental lock mode, this means that if you do have any Parental settings setup they will become activated, set to no to switch this off.



Helpline No. 0161 975 0458

 
Web Support www.ikasv.tv

Model Number: DV090132 - DV090133


DVB Setup and Menu

Parental Setting

Parental setting allows you to lock certain channels preventing them from being viewed unless a password is inputted. Simply press ok on the desired channel you wish to lock and a padlock sign will show up, to unlock press ok again. Note if channel lock (page 18) is not on then this will not activate. If at any time a prompt for a password appears enter 8888.

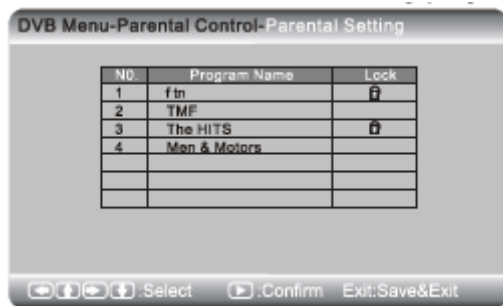

System Setting

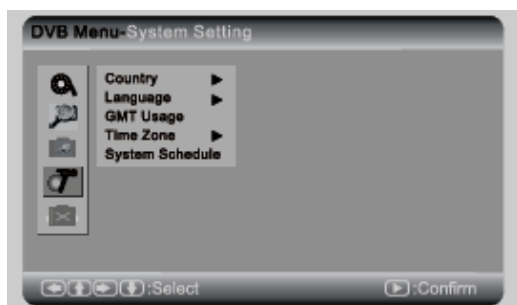 

Country

Select this option to set the country for the scan.

Language

Three options are available 1st Audio, 2nd Audio and Subtitle.

1st/2nd Audio

You can choose the audio language from audio 1st or audio 2nd this option only works when the channel provides Audio. Otherwise, the preset language of that channel will be automatically chosen.

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

20

DVB Setup and Menu

Subtitle

Select the subtitle language from the list available. The subtitle language will only appear to the set language of the channel signal.

GMT Usage

Use this option to select the current GMT time.

Time Zone

Select this option to set the time zone where the DVB system is being used to scan.

Exit

To return to the Main Menu from DVB Setup page, press Exit button

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

21

DVB Basic Operation

Basic Operation

Adjust Channel

- Press CH-/CH+ to turn to previous/next channels or press the number buttons on the remote control.
- While watching a program, press ok to bring up the channel list, the program list will be shown on the screen. You can press up and down to move to another channel and press ok to change.
- While watching a program, press the GUIDE button, the GUIDE MENU will be displayed. showing a thumbnail of the channels available, use the arrows to move to a channel and press ok to change.

Mute

Press the "mute" button to switch to mute mode, the mute sign will appear on the screen. Press it again, the unit will return to normal sound.

Program Information

In DVB playing status, Press DISPLAY button, the detail information of the program will be displayed on the screen.

Sleeping Mode

Press sleep button to set a time to turn the unit off. The time can be set from 15 min, 30 min, 60 min and 120 min. At the first time of selecting Sleep, the preset time will appear, Press it repeatedly, the time will be prolonged. To cancel the function, press the button repeatedly until Sleep Off appears.

Audio

Press audio button to choose audio output port (Audio 1 or Audio 2). There are three audio modes: LL, RR and LR.

Choosing Subtitles

Press the subtitle button to choose the subtitle language.

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

22

DVB Basic Operation

EPG Page

Press the EPG button to display the current channel information and all other available channels. Use the arrow buttons to navigate through the installed programs.

USB/SD Operation

If you wish to use a USB or SD first make sure your using the correct file types.

Movies – AVI/MPEG

Music – MP3

Images – JPEG

Once you have placed a file onto the USB/SD device insert into the corresponding port located at the back of the DVD player. Now press the “mode” button and move to either USB or SD and press the arrow pointing right to change to that mode. The unit will automatically play the first file on the storage device, if you wish to change the file simply press the “menu” button which will then display the contents of the device. Navigate with the arrow buttons and press ok to play.

AV Connection

You can also connect your DVD player to a larger screen by using the AV connection wire (supplied) Simply connect the jack end into the AV out on the side of the player and the Red/White and Yellow to the AV in on your TV. Press the “mode” button and move to AV then press the arrow pointing right to select this mode. Also make sure that your TV is set to the AV mode as well.

Helpline No. 0161 975 0458

Web Support www.ikasutv.com

Model Number: DV090132 - DV090133

23

Rotation Screen and Attaching to Your Car Seat

You will notice that you can swivel the screen on this unit, it turns clockwise 180 degrees and back again. DO NOT spin the screen over 180 degrees as this will break the unit and will not be covered by a warrantee.



Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

Trouble Shooting

| PROBLEM | SOLUTION |
|-------------------------------------|---|
| No sound or distorted sound | Make sure your DVB-T/TV is connected properly. Make sure all cables are securely inserted into the appropriate jacks. |
| Can't advance through a movie | You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action |
| The hand icon appears on the screen | The feature or action cannot be completed at this time because: <ol style="list-style-type: none"> 1. The software of SD Card/USB restricts it. 2. The software of SD Card/USB don't support the feature(e.g. angles) 3. The feature is not available at the moment. 4. You've requested a title or chapter number that is out of range. |
| Picture is distorted | <ul style="list-style-type: none"> ● The SD Card/USB might be damaged. Try another SD Card/USB ● It is normal for some distortion to appear during forward or reverse scan. |
| No forward or reverse scan | <ul style="list-style-type: none"> ● Some SD Cards/usb has sections that prohibit rapid scanning or title and chapter skip. ● If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it. |

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

25

Technical Specifications

Video Disc formats

DVD/DVD-R/DVD-RW/SVCD/VCD/DVCD/HDCD/CD+G

Picture Disc Formats

Kodak picture CD/CD-R/CD-RW/DVD+R/RW (JPEG FORMAT ONLY)

Video formats

DVD/MPEG2/VCD/MPEG1/AVI

Signal system: PAL\SECAM

Panel size: 9 inch/7inch

Frequency response: 20Hz to 20kHz

Video output: 1Vp-p/75 Ohm, unbalanced

Audio output: 1.4Vrms/10kOhm

Audio S/N: Better than 80 Db

Dynamic range: Better than 85 Db

Laser: Semiconductor Laser, Wave Length: 650 nm/795 nm

Power source: DC 9~12V

Power consumption: 10 W

Weight: 1.13kg

Dimensions: (W *D *H): 237*215*34.5mm

Battery Type: Li Polymer

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVO90132 - DVO90133

26

Waste Electrical and Electronic Equipment

The Waste Electrical and Electronic Regulations 2006 (the WEEE Regulations) came into effect in the United Kingdom on the 1st July 2007. The Regulations have been designed to prevent/reduce the amount of waste electrical and electronic equipment by promoting its reuse, recycling and recovery. The separate collection of WEEE saves energy and resources and avoids hazardous materials from going to landfill.



Electrical and electronic equipment is any product that relies on electricity or batteries to perform its primary function, for example a kettle or a watch.

Products which are covered by the WEEE Regulations have a crossed out wheeled bin symbol on either the product itself or its packaging.

This symbol aims to encourage you to identify and dispose of WEEE product separately from other household waste when it reaches the end of its life.

To find your nearest WEEE collection point visit www.recycle-more.co.uk Please have your postcode ready to type in the recycling bank locator. You can also call the recycle-more helpline on 08450 682572.

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.
(Waste Electrical and Electronic Equipment Directive)



Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

27

Technical Support

TECHNICAL SUPPORT LINE

GENERAL SUPPORT CAN BE PROVIDED ON ALL
PRODUCTS PURCHASED FROM US

(Unfortunately we cannot provide support on products or components that we do not supply)

0161 975 0458

Calls cost National Rate, Unless dialing from 0161 area

CALLERS MUST BE MINIMUM OF 18 YEARS OF AGE
CALLERS MUST HAVE THE PERMISSION OF THE TELEPHONE SUBSCRIBER

ALL INFORMATION GIVEN IS CORRECT
AT THE DATE OF PUBLICATION - 19/10/2009

HOURS OF BUSINESS
MON – FRI 8.30am to 5.30pm (excludes bank holidays)

FASCIN8 LTD
14 EMBANKMENT BUSINESS PARK
VALE ROAD, HEATON MERSEY
STOCKPORT CHESHIRE, SK4 3GN

Alternatively visit our website for further support
www.ikasu.tv

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DV090132 - DV090133

28