

IKASU™

DVD PLAYER



INSTRUCTION MANUAL

AFTER SALES SUPPORT

HELPLINE NO 0161 975 0458

WEB SUPPORT www.ikasu.tv

MODEL NUMBER: DVD333

Contents

2	–General information and safety instructions
4	- Accessories
5	– Getting started
6	– Remote control display
7	– Features and functions
8	– Remote control and panel button functions
10	– DVD setup and menu options
19	–Viewing pictures
20	– Trouble shooting
21	– Technical specifications
22	– Technical Support




Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333

General information and safety instructions

WARNING

 <p>The lightning flash with arrowhead symbol, with an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.</p>
<p style="text-align: center;">LASER SAFETY</p> <p>This unit uses a laser. Only a qualified service person should remove the cover or attempt to service this device to avoid possible eye injury. Caution: USE OF CONTROLS OR ADJUSTMENT OF PERFORMANCE OF PROCEDURE OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.</p>	<p style="text-align: center;">DANGER:</p>  <p>INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO LASER BEAM.</p>	

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333

General information and safety instructions

Please read through the following safety guidelines before use.

- **Ventilation**- Slots and openings in the case are provided for ventilation to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered.
- **Water and Moisture**- do not use this product near water for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool etc.
- **Cleaning**- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- **Lightning**-For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power line surges.
- **Servicing**-Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Battery Handling and Usage

- This remote control uses 2 x AAA alkaline batteries (included)
- Never throw batteries into a fire or expose to heat sources.
- If battery is swallowed, please seek immediate medical attention



Do not dispose of this product in your household waste. Contact your local authority for details of local recycling schemes



Batteries should not be disposed of in household waste. Batteries should be taken to appropriate disposal points or alternatively contact your local authority for details on disposal schemes

Helpline No. 0161 975 0458

Web Support www.ikasv.tv

Model Number: DVD333

Accessories

- AV Cable
- User Manual
- Remote Control with 2 AAA batteries

Helpline No. 0161 975 0458

Web Support www.ikasu.tv


Model Number: DVD333

Getting Started

Front and rear display



- | | |
|-------------------|------------------|
| 1 – Disc Tray | 4 – Play/Pause |
| 2 – Remote Sensor | 5 – Stop |
| 3 – Open/Close | 6 – Power ON/OFF |

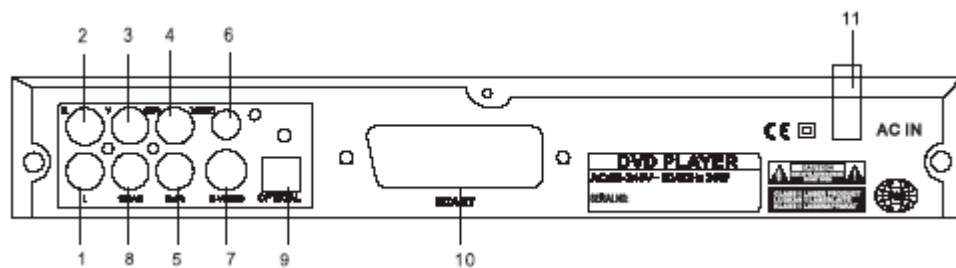


- 1 – White Left Audio out
- 2 – Red Right Audio out
- 3 – Y Video G/Y output
- 4 – Cb/Pb Video R/Cr/Pb/U output
- 5 – Cr/Pr Video R/Cr/Pr/V output
- 6 – Video CVBS Output
- 7 – S-Video Output
- 8 – Coaxial Output
- 9 – Optical Output
- 10 – Scart Output
- 11 – AC power cord

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333

Remote Control

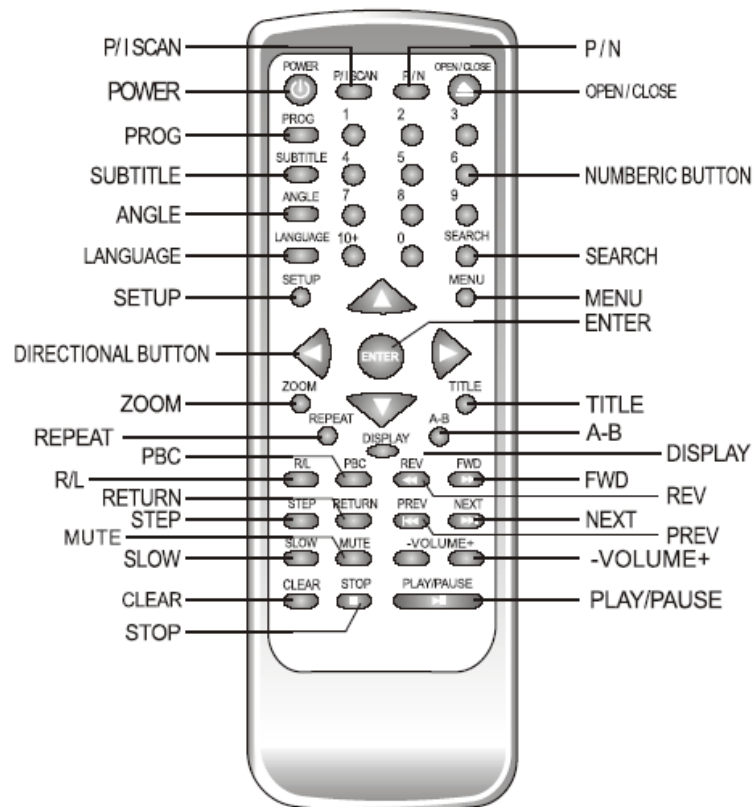

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333

Features and Functions

- Compatible with DVD, SVCD, VCD 2.0, CD, CD-RW, DVD-RW, HDCD, Kodak Picture CD Using Jpeg pictures.
- 10 bit, 27 MHZ Video D/A
- Coaxial and optical digital output
- Composite video, S-Video outputs
- YUV scart outputs to make high resolution pictures 192 KHz/24bit audio D/A converter
- PAL/NTSC/AUTO/PAL 60 System
- Adjustable screen aspect ratio of 4:3 or 16:9
- Parental lock function
- 8 languages, 32 subtitles and multiple angles (only if encoded into the DVD being played)
- Fast or slow motion

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333

Remote control and panel button functions

Power

Turn on/off the DVD player

Display

Displays the DVD info, keep pressing for additional DVD info

Open/Close

Open or Close the DVD tray

Language

Select your desired language for DVD's which have more than one language encoded.

Angle

Press ANGLE to select your desired angle when playing DVD's with multi angle encoded into it.

Mute

Mute the sound during playback

Search

Press to display CH, Chapter/Chapter, Total Current running time. In order to select a chapter and or time of the chapter simply use the arrows left or right on the remote and then input the numbers using your keypad on the remote. Once selected press enter to confirm.

Zoom

Press to Zoom, keep pressing to increase the zoom enlargement. To turn off the zoom keep pressing until off is displayed.

Menu

Press Menu to return to the main DVD menu.

Number Keys

Press for numbered selections

Title

Directional Buttons

Directional buttons are used for navigating through menu options

Enter

Used to confirm your selection

Setup

Press SETUP to get into the DVD setup

PBC

This function is only available for Video-CD version 2.0 or higher. The PBC function may differ with each disc. With PBC ON, you can select items in the menu list using the PREVIOUS/NEXT keys. When PBC is OFF, you cannot select items in the menu list but you can use the numeral keys directly or the PREVIOUS and NEXT keys

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333

Remote control and panel button functions

Volume +/-

Increase or decrease the volume

R/L

Switch the audio output. When playing a SVCD and VCD, press R/L to change channels as follows: MONO R, AUTO L, and AUTO R.

When playing a CD switch the output audio to MONO L, MOMO R and STEREO

Return

Press to return to the main menu of the DVD

A-B repeat

Press A-B once to select the A repeat point then again to select point B, the DVD will then only play between the two points selected. To cancel the A-B repeat press it one more time.

Repeat 1/All

This option will run through the available disc repeat options

Step

Press to play the film frame by frame, keep pressing to move to the next frame. To cancel press play.

Next and Previous

In order to skip forward or back a chapter press the Prev or Next button on the Remote

Rev and Fwd

Rev rewinds the DVD and Fwd fast forwards the DVD

Stop

Press STOP to stop the DVD playing.

Pause

Pauses playback, press play to resume

Play

Confirm your selection or playback

P/I Scan

Changes the current DVD input mode from TV/RGB, PSCAN YPBPR and SVIDEO

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333

DVD Setup and menu options

 
Basic Operation

Press SETUP ON the remote control to bring up the DVD setup page, use the directional buttons to navigate to the desired option.

SYSTEM SETUP


Press SETUP and select system setup page.

TV SYSTEM: Use up/down arrow buttons to select the TV system from either NTSC/PAL/PAL60 or AUTO.

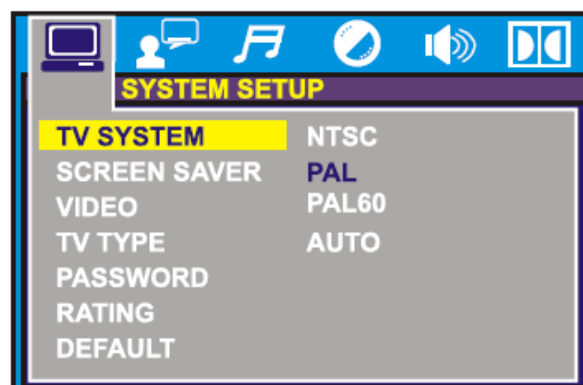

SCREEN SAVER

 Use up/down arrow buttons to select the status OFF/ON for the screen saver. When in the ON position and the unit has been idle for more than 60 seconds a screen saver will appear to protect the screen.

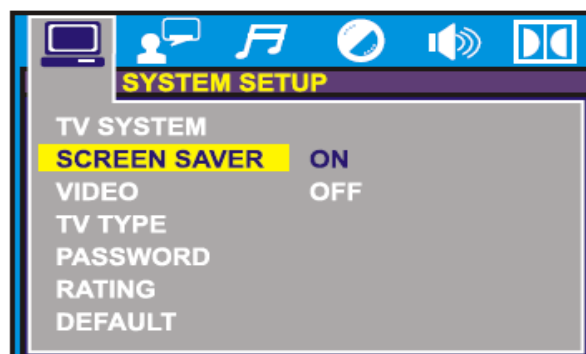

Helpline No. 0161 975 0458

Web Support www.ikasu.tv


Model Number: DVD333

10

DVD Setup and menu options

VIDEO

There are four video outputs to choose from Interlace-YUV, YV-RGB, P-scan YPBPR and S-Video.

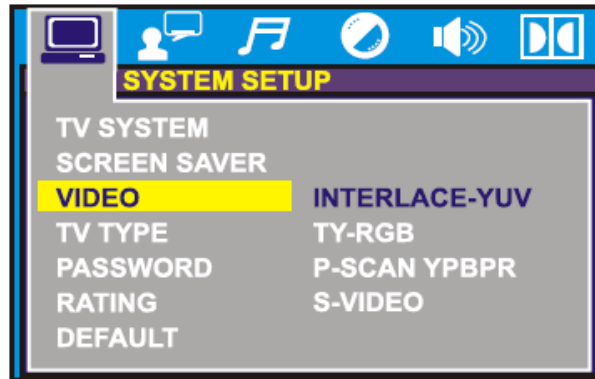


TV TYPE:

You can change the TV aspect ratio in this option by using the directional arrows to the following.

16:9 Widescreen

4:3 Letter Box

4:3 Pan & Scan

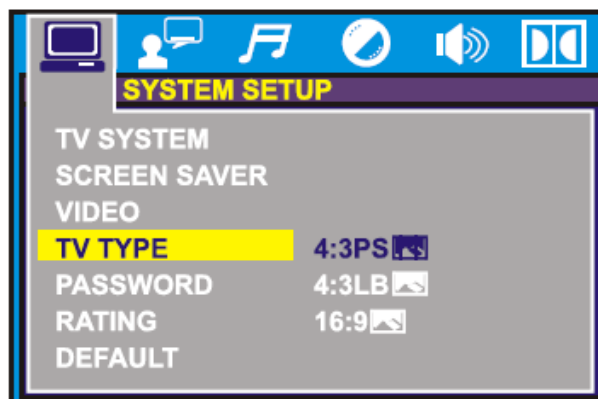

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

 
Model Number: DVD333

II

DVD Setup and menu options


Password:

The default password is 0000, this cannot be changed. Enter 0000 and press enter in order to unlock the player to allow you to change the rating setting shown below. Repeat to lock.

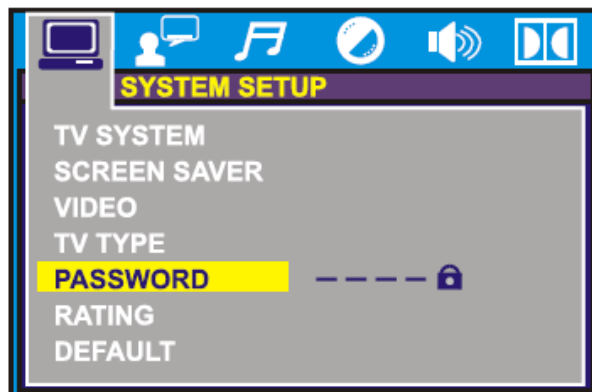

Rating setting:

Once you have unlocked the password padlock you can change the rating setting to make sure that certain films are not viewed by the younger audience. However this will only work on DVD's which have this encoded into it. Simply move to the required age limit and press enter, once finished lock the password again.

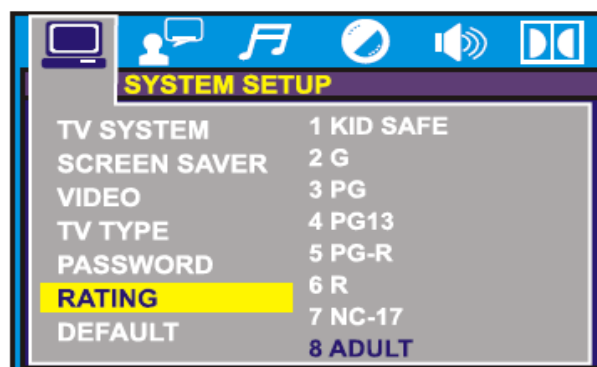

Helpline No. 0161 975 0458


Web Support www.ikasv.tv

Model Number: DVD333

DVD Setup and menu options

Default:

Use the right arrow button to move to (restore) and press (enter) to reset the DVD player to its factory default

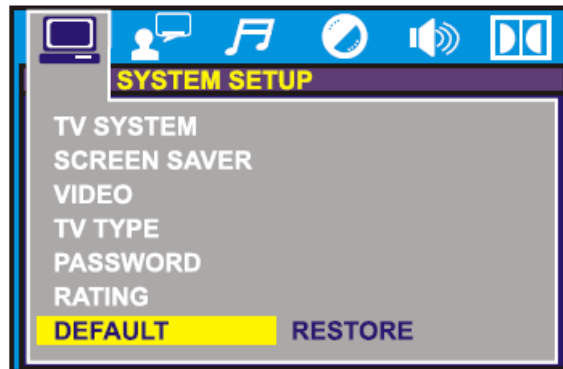

Language Setup

OSD Language:

Use this to select the desired on screen display language from the below options.



Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333

DVD Setup and menu options

Audio Language:

Use to alter the current Audio language. Note: will only play the language selected if the DVD playing supports the selected language.



Subtitle Language:

Use to alter the current Subtitle language. Note: will only display the language selected if the DVD playing supports the selected language.



Helpline No. 0161 975 0458


Web Support www.ikasutv.com

Model Number: DVD333

DVD Setup and menu options

Menu Language:


Use to alter the current Menu language.

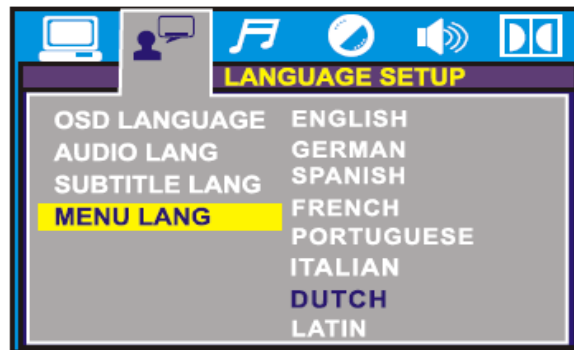

Audio Setup

Audio Out:

Use to select the current audio output setting from the options shown below. Use SPDIF/RAW and PCM for optical or coaxial output only and SPDIF/OFF for anything else.

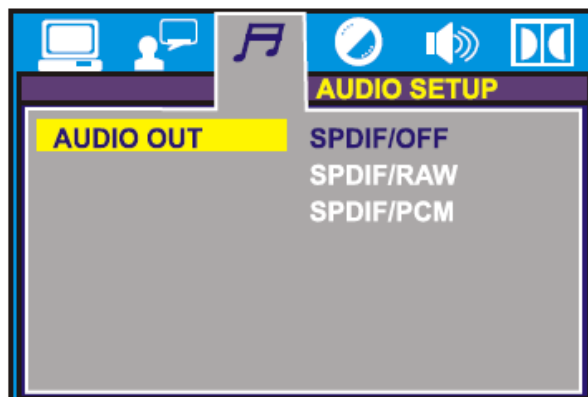

Helpline No. 0161 975 0458

Web Support www.ikasv.tv


Model Number: DVD333

15


DVD Setup and menu options

Video Setup


Brightness: Use the right arrow to move onto the brightness bar and then the up and down arrow on your remote to adjust the brightness

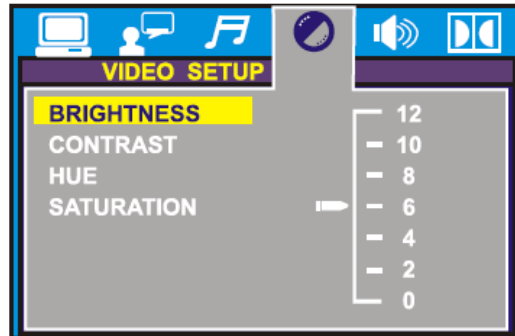

Contrast: Use the right arrow to move onto the contrast bar and then the up and down arrow on your remote to adjust the contrast

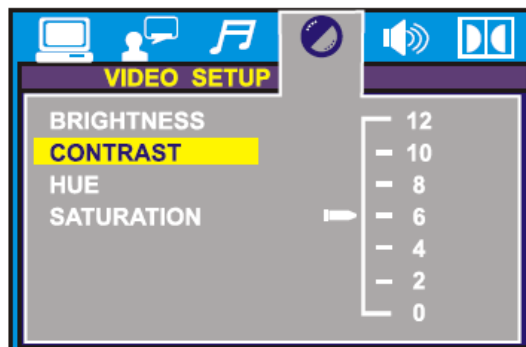


Hue: Use the right arrow to move onto the HUE bar and then the up and down arrow on your remote to adjust the HUE

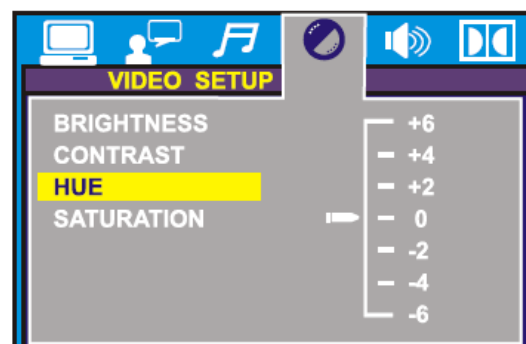

DVD Setup and menu options

Saturation: Use the right arrow to move onto the Saturation bar and then the up and down arrow on your remote to adjust the Saturation

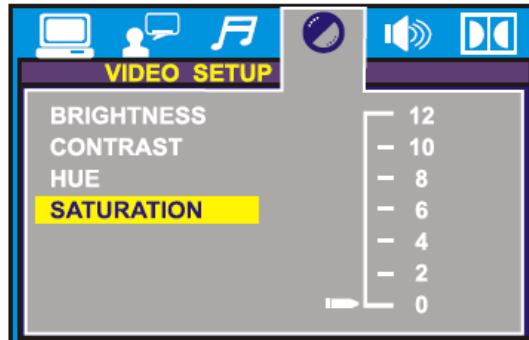

Speaker Setup

Downmix:

In this option you can select the speaker setup.

LT/RT – For DVD's with a dolby pro logic set up

Stereo – For Stereo sound set up.



Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333


DVD Setup and menu options

Digital Setup

OP Mode:


Line out – This setting is generally used for when your connecting to a amplifier.

RF Remod – This setting is for when connecting to a TV.

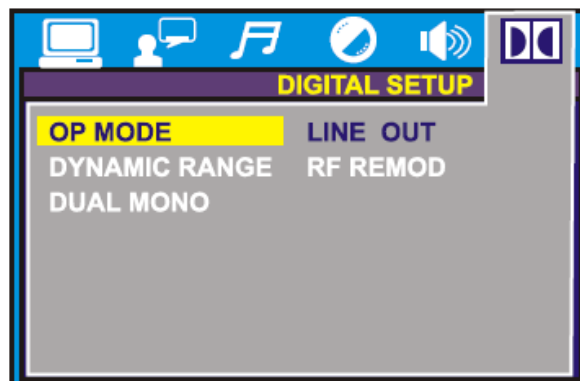

Dynamic Range:

If you are connecting to an amplifier and your OP mode is set to Line out you can also adjust the dynamic range to increase or decrease the sound compression. Press the right arrow then the up and down to adjust.

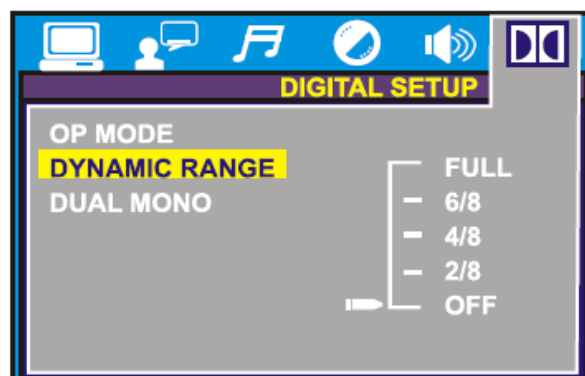

Helpline No. 0161 975 0458

Web Support www.ikasu.tv


Model Number: DVD333

18

DVD Setup and menu options

Dual Mono:

You can change the audio output to one of the following Stereo, Mono L, Mono R and Mix Mono using the directional buttons on your remote.

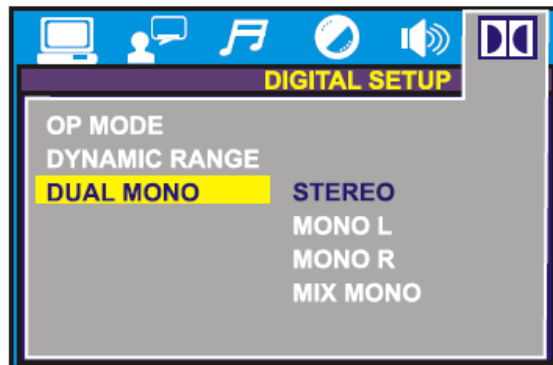

Viewing pictures

You can also view pictures from a picture disk.

- 1 - First make sure that the pictures you have on your disk are in JPEG format only, no other format will work.
- 2 - Place the disk into the DVD player and await for the files to display in a name display.
- 3 - Use the directional buttons on the remote to move to your desired picture and press enter to view.
- 4 - You can also zoom in by pressing the zoom button on the remote.

Helpline No. 0161 975 0458

Web Support www.ikasuv.com

Model Number: DVD333

Trouble Shooting

Symptoms	Possible Cause and Remedies
No power	Make sure the plug is in and switched on at the mains. Make sure that you have pressed in the power button on the player
No playback	Check the power is on Check the disc is in the correct way Check for scratches on the disc and clean with a soft dry cloth The region of the disc may not be compatible The format of the disc may not be compatible
No Video	Check all your connections Make sure your TV is in the correct receiving mode i.e scart or AV
Picture distorted	The disc maybe damaged or over scratched, try a new disc Try connecting the DVD directly to then TV with no other connections involved

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333

20

Technical Specifications

Video Disc formats

DVD/DVD-R/DVD-RW/SVCD/VCD/DVCD/HDCD/CD+G

Picture Disc Formats

Kodak picture CD/CD-R/CD-RW/DVD+R/RW (JPEG FORMAT ONLY)

Video formats

DVD/MPEG2/VCD/MPEG1

Signal Output

Audio – 2 channels output, Optical output and coaxial output

Video – AV output, S-Video output, Y, Pb/Cb, Pr/Cr output

Video Features

Video output level: 1.0 Vp-p (75 Ω)

Y output level: 1.0 Vp-p (75 Ω)

C output level: 0.286Vp-p/NTSC 0.3 Vp-p (75 Ω)

Frequency response: 20-20KHZ (+1db)

Audio Features

S/N > 90db

Total distortion

Power input voltage

230v -50Hz

Power consumption

25W

Operation temperature

5C-35C

Humidity

15% - 75%

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333

21

Technical Support

TECHNICAL SUPPORT LINE

GENERAL SUPPORT CAN BE PROVIDED ON ALL
PRODUCTS PURCHASED FROM US

(Unfortunately we cannot provide support on products or components that we do not supply)

0161 975 0458

Calls cost National Rate, Unless dialing from 0161 area

CALLERS MUST BE MINIMUM OF 18 YEARS OF AGE
CALLERS MUST HAVE THE PERMISSION OF THE TELEPHONE SUBSCRIBER

ALL INFORMATION GIVEN IS CORRECT
AT THE DATE OF PUBLICATION - 12/08/2009

HOURS OF BUSINESS
MON – FRI 8.30am to 5.30pm (excludes bank holidays)

FASCIN8 LTD
14 EMBANKMENT BUSINESS PARK
VALE ROAD, HEATON MERSEY
STOCKPORT CHESHIRE, SK4 3GN

Alternatively visit our website for further support
www.ikasu.tv

Helpline No. 0161 975 0458

Web Support www.ikasu.tv

Model Number: DVD333

22