

SETTING UP AND RECORDING FROM VHS/CAMCORDER

Before you can start transferring film from your VHS or Camcorder, follow the installing of drivers and software section in the users manual. Once you have done this make sure that you have connected to the device you intend on recording using either a AV cable (not provided) or S-Video.

Start up the AV820 program and you will then see the following screen appear.




In order to record first make sure that the AV cables are connected to both the USB device and the device you are recording from, press play on the device your recording from and then press record on the panel, this will now start to record. In order to end the recording press stop on the panel.



Play/Sto

In order to then view the movies you have recorded press the playback button on the panel and it will then show you a list of all the movies you have recorded so far. To select the file click once then press play on the panel.

PANEL FUNCTIONS

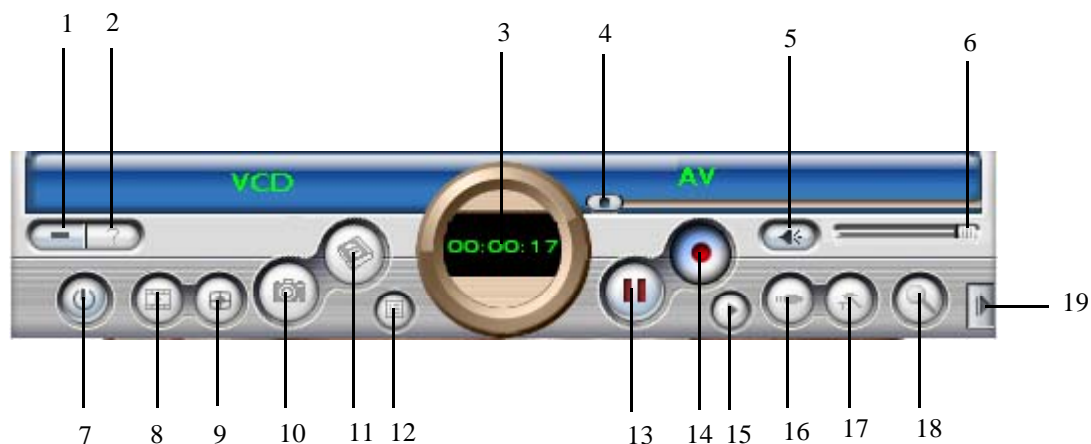

- | | | |
|--------------------|--------------------------|--------------------|
| 1 – Hide Panel | 9 – No Function | 17 – Setup |
| 2 – No function | 10 – Snap Shot | 18 – No function |
| 3 – Time | 11- Record Format | 19 – Adjust Colour |
| 4 – No Function | 12 – No Function | |
| 5 – Mute Sound | 13 – Pause | |
| 6 – Volume Control | 14 – Record/Stop | |
| 7 – Exit | 15 – Playback | |
| 8 – Browse Images | 16 – Switch Video Source | |